


















 


 

 

 
 




 
 
 
 
 
 
 
 
 
 
 
 

A. "Door open" indicator

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indicator
C. "Water tap closed" indicator
D. "Clean pump" indicator

E. Programme selector
F. "Start/Pause" button
G. "Spin" button
H. Programme flow bar

I. "Reset" button
J. "Start delay" button

Programme		Care Labels	Max. Load kg	Type of wash/Notes - <i>Respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Special options							Start delay	Max. Spin Speed rpm	
					Pre-wash 	Main wash 	Softener 	Cold wash 	Rapid 	Clean+ 	Pre-wash 	Intensive rinse 	Easy ironing 	Rinse hold 			Spin 
Cotton 95 °C			6.0	Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygen-based bleach additive which can be used at 95 °C. This programme eliminates bacteria, ensuring sanitization of your laundry.	*	Yes	*	—	—	*	*	*	*	*	*	*	max.
Cotton 40 - 60 °C		 	6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	*	*	max.
Jeans 40 °C		 	4.0	Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	*	Yes	*	*	*	*	*	*	—	*	*	*	1000 ¹⁾
Synthetics 30 - 40 - 60 °C		  	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	*	*	max.
Delicates 30 - 40 °C		 	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	—	—	*	—	—	*	*	*	1000 ¹⁾
Daily load 40 °C		   	4.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	—	Yes	*	*	—	—	—	*	*	*	*	*	max.
Quick wash 30 °C		 	3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. Brief programme to refresh your laundry.	—	Yes	*	*	—	—	—	—	—	*	*	*	max.
Wool/Handwash <i>cold</i> - 40 °C		 	1.0	Textiles made of wool, linen, viscose or silk (respect care label!) marked as hand-washable or machine-washable.	—	Yes	*	*	—	—	—	—	—	*	*	*	1000 ¹⁾
e Cotton 40 - 60 °C		 	6.0	Normally soiled cotton laundry. Standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	—	Yes	*	*	—	—	—	*	—	*	*	*	max.
Rinse & Spin		—	6.0	Separate rinse and intensive spin programme. Suitable for robust laundry.	—	—	*	—	—	—	—	*	—	*	*	*	max.
Spin		—	6.0	Separate intensive spin programme. Suitable for robust laundry.	—	—	—	—	—	—	—	—	—	—	*	*	max.
Drain		—	—	Drain only – no spinning. Alternative method of terminating programme after “Rinse Hold”.	—	—	—	—	—	—	—	—	—	—	*	—	

= optional / Yes = dosing required.
For improved garment care, spin speed is restricted in these programmes.

CONSUMPTION DATA

Power consumption: in off-mode 0.16 W / in left-on mode 0.16 W.

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approximate programme duration (hrs.min)	
					without "Rapid"	with "Rapid"
Cotton	95	6.0	74**	2.20	2:40	—
Cotton	60	6.0	50	1.10	2:20	1:45
Cotton	40	6.0	64	0.70	2:05	1:15
Jeans	40	4.0	53	0.46	1:30	1:10
Synthetics	60	3.0	48**	0.94	1:37	1:12
Synthetics	40	3.0	42	0.40	1:20	0:55
Delicates	40	1.5	60	0.65	0:50	—
Delicates	30	1.5	60	0.40	0:46	—
Daily load	40	4.0	46	0.40	1:00	—
Quick wash	30	3.0	48	0.25	0:30	—
Wool/Handwash	40	1.0	45	0.55	0:40	—
☺ Cotton 60° *	60	6.0	41	0.85	4:00	—
☺ Cotton 60° *	60	3.0	30	0.58	3:00***	—
☺ Cotton 40° *	40	3.0	30	0.56	3:00***	—

Consumption values were measured in normalized conditions, in compliance with IEC/EN 60456. In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15 °C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature. Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* Reference programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle before the water is drained.

*** Automatic adaptation of programme duration after detection of wash load.

LOAD LAUNDRY, ADD DETERGENT AND SELECT THE PROGRAMME

Load the laundry, close the door and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. Turn the **programme selector** to the desired programme and temperature. The display shows the programme duration, and the predefined spin speed lights up. The **"Start/Pause"** indicator blinks.

The washing machine is designed to save energy, therefore, if you have selected a programme but do not start it within about a quarter of an hour, it will switch off automatically. To switch it on again, turn the programme selector to "Off/O" and then to the desired programme again..

SELECT ANY DESIRED OPTION

Push the button of any option desired - the indicator lights up. If the combination programme/option or option/option is not possible, the indicator switches off automatically.

"Cold wash" button

- Saves energy used for water heating while maintaining a good wash result.
- Recommendable for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures (15 or 20 °C).

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.

"Clean + " button

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- May prolong the programme by up to 15 minutes.

Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

"Prewash" button

- Adds a prewash cycle to the wash programme selected; prolongs the programme by about a quarter of an hour.
- Recommended for heavily soiled laundry (e.g. with sand or granular dirt).
- Do not use liquid detergent for the main wash when selecting "Prewash".


"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- Particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

 

"Easy ironing" button

- Reduces creasing by an increased water quantity and a very gentle spin.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- The programme stops to "Rinse hold" at the time the "Rinse hold" indicator in the programme flow bar is on. The **"Start/Pause"** indicator  blinks.


Terminate the "Rinse hold" option  :

 
 
- Press the **"Start/Pause"** button  ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start/Pause"** button  to start draining.

"Spin" button


- Every programme has a predefined spin speed; press the button if you want to set a different spin speed.
- If spin speed "0" is selected, the final spinning is cancelled and the water is drained out only. However, intermediate spin phases remain during rinse.


START DELAY


The "Start delay"  allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating "Start delay".

 
- Select programme, temperature and options.
- Press the "Start delay" button to select a delay time up to 24 hours.
- Press the **"Start/Pause"** button  . On the display, the start delay symbol and the dot between hours and minutes blink. The countdown of the delay time begins.
- The delay time disappears when the programme starts and it is replaced by the remaining programme duration.
- Once having pressed the **"Start/Pause"** button  , the delay time can be changed by pressing again the "Start delay" button.

To cancel the "Start delay"

 
...before you press the **"Start/Pause"** button  :

- Turn the programme selector to another position or press the **"Reset"** button .

...after having pressed the **"Start/Pause"** button  :

- Press the **"Start/Pause"** button  - the selected start delay disappears from the display.

PROGRAMME START

Open the water tap and press the **"Start/Pause"** button  . The **"Start/Pause"** indicator lights up. The programme flow bar shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.


When the laundry load is detected or the programme duration is updated, an animation appears on the display.

"DOOR OPEN" INDICATOR

Before starting and after end of a programme, the indicator lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme".

FAILURE INDICATORS

If one of the failure indicators blinks, consult the "Troubleshooting Guide" in your Instructions for Use.


 **"Water tap closed"**: no or not sufficient inlet water.

 **"Service"**: failure or malfunction of an electrical component.

 **"Clean pump"**: waste water is not pumped out.

 
 
Spin speed blinks: unbalance during spinning.

PROGRAMME END


- The "Door open" indicator  lights up, and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.


1. Turn the programme selector to the "Off/O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button  to pause the programme. The indicator blinks.
2. Select the new programme and, if you want, another spin speed and any options.
3. Press the **"Start/Pause"** button  again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME

The **"Reset"** button  cancels a programme before the end.

- Press and hold the **"Reset"** button  for a few seconds. The water is drained. It may last some time until the door can be opened.