

Washing machine WAE24377GB ...



en Instruction Manual and Installation Instructions

# Your new washing machine

You have chosen a Bosch washing machine.

Please take a few minutes to read and become familiar with the advantages of your washing machine.

To meet the high quality demands required by Bosch, every washing machine that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.boschhome.com or contact our after-sales service centres

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before switching on the washing machine.

#### Display rules

#### ⚠ Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

#### Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

#### Note/tip

Information about the optimum use of the appliance/any other useful information.

#### 1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

#### / -

Lists are represented by a small box or a dash.

# **Contents**

Intended use4	<ul> <li>■ Rinse plus*</li></ul>
Safety instructions .5  Electrical safety	Operating the appliance
Main points in brief	Measure and add detergent and care products
Laundry	Programme end
Saving energy and detergent	Setting the signal
© Finished in	blocked

#### Intended use en

After-sales service	26
Consumption rates	27
Energy and water consumption, programme duration and residual	
moisture for the main washing	
programmes	27
Efficiency test programmes for cottor fabrics	เ 28
Technical data	28
Positioning and connecting	29
	29
Safety instructions	29
Installation surface	30
Installation on a base or a wooden	
joist floor	30
Installing the appliance in a kitchenette	30
Removing the transport locks	30
Hose and cable lengths	31
Water inlet	32
Water outlet	32
Levelling	33
Electrical connection	34
Before washing for the first time	34
Transportation	35

# Intended use

- For private domestic use only.
- The washing machine is suitable for washing machine-washable fabrics and hand-washable wool in detergent solution.
- To be operated with cold mains water and standard detergents and care products which are suitable for use in washing machines.
- When measuring the amount of all detergents/additives/care products and cleaning agents, always check the manufacturer's instructions.
- The washing machine may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they are supervised or have been instructed by a responsible person. Children must not carry out any cleaning or maintenance work without supervision.
- Keep pets away from the washing machine.

Read the Instruction Manual and Installation Instructions and all other information supplied with the washing machine and use the machine accordingly.

Retain the documents for subsequent use.

# **△** Safety instructions

# Electrical safety

### 

There is a risk of electric shock if you touch live components.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.

# Risk of injury

# 

- If the washing machine is lifted by protruding components (e.g. the washing machine door), the components may break off and cause injuries. Do not lift the washing machine by protruding parts.
- If you climb onto the washing machine, the worktop may break and cause injuries.
   Do not climb onto the washing machine.
- If you lean/sit on the opened washing machine door, the washing machine may tip over and cause injuries. Do not lean on the washing machine door when it is open.

 Reaching into the drum while it is still rotating may cause hand injuries.
 Do not reach into the drum while it is rotating.
 Wait until the drum has stopped rotating.

# 

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a washbasin).

Do not reach into the hot detergent solution.

# Safety for children

# 

If children play with the washing machine, they may get into lifethreatening situations or injure themselves.

- Do not leave children unattended near the washing machine.
- Do not let children play with the washing machine.

# 

Children may lock themselves in appliances, putting their lives at risk.

When appliances have reached the end of their service life:

Pull out the mains plug.

- Cut through the mains cable and remove it, along with the plug.
- Destroy the lock on the washing machine door.

# 

en

Children may become wrapped in packaging/film or packing parts if allowed to play with them, or they may pull them over their heads and suffocate. Keep packaging, film and packaging parts out of the reach of children.

# **⚠** Warning Risk of poisoning!

Detergents and care products may be poisonous if consumed.

Keep detergents and care products out of the reach of children.

# 

Detergents and care products may cause irritation if they come into contact with the eyes or skin.

Keep detergents and care products out of the reach of children.

# 

When you wash at high temperatures, the glass in the washing machine door becomes hot.

Do not let children touch the hot washing machine door.



### Packaging/used appliance

A

Dispose of packaging in an environmentally-responsible manner.


This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE).

The guideline determines the framework for the return and recycling of used appliances as applicable throughout the FU.

### Tips on economical use


- Always fill the appliance with the maximum amount of laundry for each programme.
   Overview of programmes
   → Page 12
- Wash normally soiled laundry without a prewash.
- If the laundry is subsequently dried in a tumble dryer, select the spin speed according to the tumble dryer manufacturer's instructions.
- The selectable temperatures apply to the care labels on the textiles. The temperatures in the machine may deviate from this so that you get the optimum mix of energy-saving and washing results.

# Main points in brief

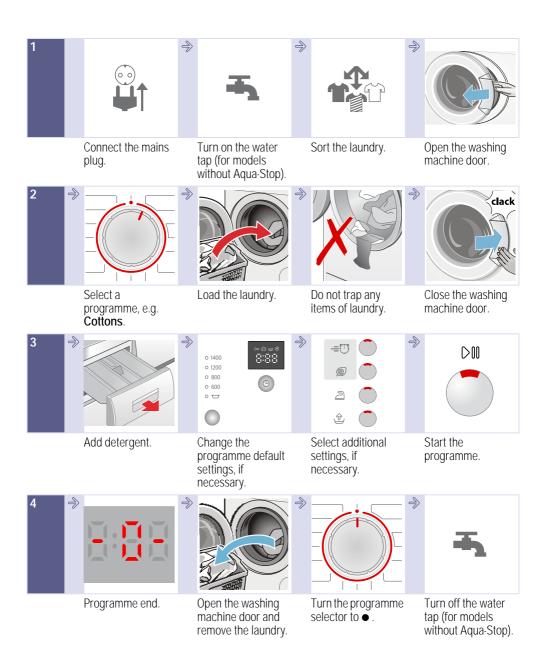

# Getting to know the appliance


# Washing machine

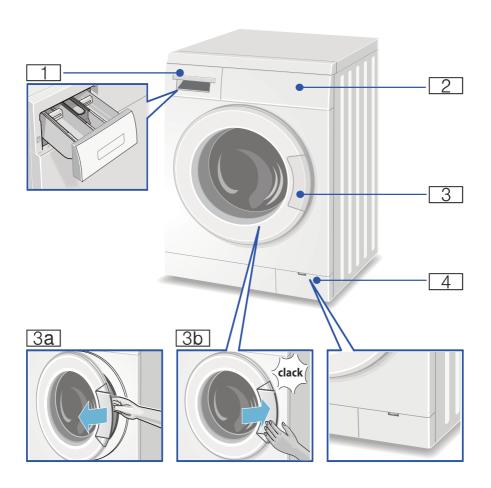

- Detergent drawer → Page 16 (
- Controls/display elements 0

- Washing machine door with door handle
- Open the washing machine door 9S
- 9T Close the washing machine door
- Service flap @

# **Control panel**

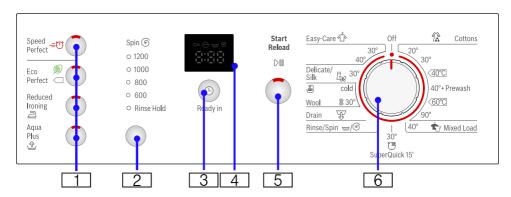

Overview of all additional programme settings

- Overview of all programme default settings

@ Display panel for settings and information

- H D Start/Reload for starting, interrupting (adding laundry) and cancelling a programme
- P Programme selector for selecting a programme and for switching the machine on and off

### Display panel

Settings for the selected programme			
1:30	Programme duration	Depends on the programme selection in h:min (hours:minutes)	
1 - 24 h	Finished in	Programmes ends after h (h = hours)	

# Status indicators for the programme progress (programme sequence):

ా 🗁 🍙 🌀 : Childproof lock, washing, rinsing, spinning

Finished in: Programme ends after ... (1 - 24 h)

# Laundry

# Sorting laundry

Sort your laundry according to the care instructions and manufacturer's information on the care labels, depending on:

- Type of fabric/fibre
- Colour

**Note:** Laundry can discolour or not be cleaned correctly. Wash white and coloured laundry separately. Wash new bright fabrics separately the first time you wash them.

Soiling

Wash laundry with the same level of soiling together.

You can find examples of levels of soiling on  $\rightarrow$  *Page 11* 

- Light: Do not pre-wash, select the Speed setting if necessary
- Normal
- Heavy: Load less laundry, select a programme with pre-wash
- Stains: Remove/pretreat stains while they are fresh. First, dab the stain with soapy water/do not rub. Then wash the items of laundry with the appropriate programme. Stubborn/dried-in stains can sometimes only be removed with several washes.
- Symbols on the care labels
   The numbers in the symbols indicate the maximum washing temperature which may be used.
  - \subseteq : Suitable for a normal washing process; e.g. Cottons programme
  - : A gentle washing process is required; e.g. Easy-Care programme
  - : An especially gentle washing process is required; e.g.
     Delicate/Silk programme
  - Suitable for washing by hand; e.g. Wool programme

 \mathbb{M}: Do not wash the laundry in the machine.

# Prepare the laundry

#### Caution!

#### Damage to the appliance/fabrics

Foreign objects (e.g. coins, paperclips, needles, nails) may damage the laundry or components in the washing machine.

You should therefore note the following tips when preparing your laundry:

Empty any pockets.



- Look out for metal items (paperclips, etc.) and remove them.
- Wash delicates in a laundry bag (tights, underwired bras, etc.).
- Close any zips, button up any cover buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place curtains in a laundry bag.

# Detergent

#### Correct selection of detergent

The care label is crucial for selecting the correct detergent, temperature and treatment of the laundry. → See also www.sartex.ch

Visit www.cleanright.eu to find further information on detergents, care products and cleaning agents for domestic use.

#### Standard detergent with optical brighteners

Suitable for heat-resistant white laundry made from linen or cotton Programme: Cottons / 20 °C - max. 90 °C

- Detergent for colours without bleach or optical brighteners Suitable for coloured laundry made from linen or cotton Programme: Cottons / 20 °C - max. 60 °C
- Detergent for colours/delicates without optical brighteners
   Suitable for coloured laundry made from easy-care fibres, synthetic fibres

Programme: Easy-Care / 20 °C - max. 60 °C

#### Delicates

Suitable for delicate, fine fabrics, silk

or viscose

Programme: Delicates/Silk / 20 °C - max. 40 °C

Detergent for woollens Suitable for woollen fabrics Programme: Woollens / 20 °C - max. 40 °C

# Saving energy and detergent

For light and normal soiling, you can save energy (lower washing temperature) and detergent.

#### Saving Soiling/note Reduced temper-Light ature and deter-No visible dirt or stains. Clothgent quantity as ing has taken on some body per the recomodour, e.g.: mended dosage Light summer/sports clothing (worn for a few hours) T-shirts, shirts, blouses (worn for up to one day) Guest bed linen and hand towels (used for one day) Normal Visible dirt or a few light stains, e.g.: T-shirts, shirts, blouses (sweat soaked, worn a few times) Towels, bedding (used for up to one week) Temperature as Heavy per the care label Dirt and/or stains clearly visiand detergent ble, e.g. tea towels, baby quantity as per items, work clothing the recommended dosage for heavy soiling

**Note:** When measuring the amount of all detergents/additives/care products and cleaning agents, please always check the manufacturer's instructions and information. → *Page 16* 



# Overview of programmes

# Programmes on the programme selector

Max. load:  *Reduced load for the =♥♥ Speed setting  Temperature that can be selected.  *** Max. spin speed, depending on the model.  Possible programme settings  **Actions** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  **Cottons** Hard-wearing fabrics, e.g. made of solitant fabrics.  **Max. 7 kg/4* kg  **Deliate/Silk**  **Max. 7 kg/4* kg  **Max. 1 kg/4* kg  **M	Programme/type of laundry/information	Settings
## Cottons Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen  ## Cottons 40 °C + Prewash: Programme with prewash, prewash at 30 °C; divide detergent between compartments I and II  ## Note: The =	Name of the programme Brief explanation of the programme and for which fabrics it is suita-	Max. load;  * Reduced load for the =♡ Speed setting  Temperature that can be selected  Spin speed that can be selected;  ** Max. spin speed, depending on the model
Textiles made of synthetic materials or blended fabrics  30, 40 °C  □ 1200** rpm  □ , = ① , ⊇ , ພ / ②  Max. 3 kg  A mixed load of fabrics made of cotton and synthetic fabrics  Notes  □ Different types of laundry can be washed together.  □ ★ Mixed Load 40 °C with maximum spin speed is ideal as a short programme.  □ Delicate/Silk  For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarves)  Notes  □ Use a detergent which is suitable for machine washing delicates or silk.	Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen Cottons 40 °C + Prewash: Programme with prewash, prewash at 30 °C; divide detergent between compartments I and II  Note: The = Speed setting is suitable as a short programme for	Max. 7 kg/4* kg 20, 30, 40, 60, 90 °C
A mixed load of fabrics made of cotton and synthetic fabrics  Notes  □ Different types of laundry can be washed together. □ ★ Mixed Load 40 °C with maximum spin speed is ideal as a short programme.  □ Delicate/Silk  For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarves)  Notes □ Use a detergent which is suitable for machine washing delicates or silk.	· · · · · · · · · · · · · · · · · · ·	30, 40 °C
For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarves)  Notes  Use a detergent which is suitable for machine washing delicates or silk.	A mixed load of fabrics made of cotton and synthetic fabrics  Notes  Different types of laundry can be washed together.  Mixed Load 40 °C with maximum spin speed is ideal as a	40 °C
	For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarves)  Notes  Use a detergent which is suitable for machine washing delicates or silk.	30 °C

Programme/type of laundry/information	Settings
	Max. 2 kg
Hand- or machine-washable fabrics that are made of wool or contain	cold, 30 °C
wool; Particularly gentle wash programme to prevent shrinkage of laundry,	₩ 800 rpm
with longer programme breaks (fabrics rest in the detergent solution)	
Notes	
<ul><li>Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li><li>Use a detergent which is suitable for machine washing wool.</li></ul>	
₩ Rinse/ Spin	Max. 7 kg
Laundry washed by hand, Rinse plus/Water plus button activated	-
Note: If you require spin only, deactivate the button	
	<u>a</u>
T Drain	Max. 7 kg
Drain the rinsing water after a programme using the setting	-
─ (without final spin) for gentle treatment of delicate laundry	-
	-
<sup>™</sup> SuperQuick 15'	Max. 2 kg
Extra-short programme of approx. 15 minutes, suitable for small	30 °C
items of lightly soiled laundry	
	-

#### **Starching**

**Note:** Laundry must not be treated with fabric softener.

Starching is possible in all wash programmes if liquid starch is used. Measure starch into compartment & in accordance with the manufacturer's instructions (clean first if necessary).

### Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do **not** use the washing machine to bleach clothes.

# Soaking

- Pour soaking agent/detergent into compartment II in accordance with the manufacturer's instructions.
- 2. Turn the programme selector to Cottons 30 °C programme.
- 3. Press the **Start**/Reload button.
- 4. After approx. 10 minutes, press Start/**Reload**.
- After the required soaking time, press Start/Reload again to continue or change the programme.

#### Notes

- Load laundry of the same colour.
- No additional detergent is required; the soaking solution is used for washing.

# P+ Programme default settings

The spin speed and programme duration ("Ready in" time) for all programmes are preset at the factory.

These are displayed in the display panel after selecting the programme.

You can change the default settings as follows.

# **Spin speed**

Before and while the selected programme is running, the spin speed or  $\Box$  (without final spin, laundry soaks in the last rinsing water, display panel - -) can be set. The effects depend on the programme progress.

The maximum selectable spin speed depends on the model and the set programme.  $\rightarrow$  Page 12

### ( Finished in

When you select the programme, the relevant programme duration is displayed.

The programme duration is automatically adjusted when the programme is running. Changes to the programme default settings or programme settings also change the programme duration.

Before starting the programme, the programme end ("Finished in" time) can be preselected in increments of one hour (h = hours) up to a maximum of 24 hours.

To do this, repeatedly press the corresponding button until the required setting is displayed.

**Note:** The programme duration is included in the selected "Finished in" time.

After the start, the preselected time e.g. **8 h** is displayed and the time counts down to the start of the washing programme. The programme duration is then displayed, e.g. **2:30** (hours:minutes).

#### Changing the preselected time:

You can change the preselected time after the start of the programme as follows:

- Press the Finished in button repeatedly until the required number of hours is displayed.
- Press the Start/Reload button.

# Adding laundry while the preselected time continues running:

- Press Start/Reload.
- YES lights up in the display panel. The washing machine door can be opened and you can add laundry.
- 3. Close the washing machine door.
- 4. Press the **Start**/Reload button. The preselected time continues to run.

# Additional programme settings

# **=**♥ Speed\*

For washing in a shorter time with a washing result comparable to that of the standard programme.

**Note:** Do not exceed the maximum load.

Overview of programmes → Page 12

#### 

For saving energy with a washing result comparable to that of the standard programme.

**Note:** The washing temperature is lower than the selected temperature. For special hygiene requirements, we recommend selecting a higher temperature or the  $= \mathfrak{O}$  **Speed** option.



#### Easy-Iron

Special spin sequence with subsequent fluffing. Gentle final spin – residual moisture in the laundry slightly increased.

### Rinse plus\*

Extra rinse. For areas with very soft water or to further improve the rinsing result.

# Water plus\*

Increased water level and additional rinse cycle, extended washing time. For areas with very soft water or to further improve the rinsing result.

(\* depending on model)



# Operating the appliance

### Preparing the washing machine

Note: The washing machine must be correctly installed and connected (from  $\rightarrow$  *Page 29*).

- 1. Connect the mains plug.
- 2. Turn on the water tap.
- 3. Open the washing machine door.
- 4. Check that the drum is completely drained. Drain if necessary.





### Select programme/switch on the appliance

**Note:** If you have activated the childproof lock, you must first deactivate it before you can set a programme.

 $\rightarrow$  Page 17

Use the programme selector to select the required programme. Can be turned in both directions.

The machine is switched on.

The programme duration appears on the display panel.

### Change the programme default settings

You can use the default settings or change them.

To do this, repeatedly press the corresponding button until the required setting is displayed.

**Note:** All buttons are sensitive and only need to be touched lightly. If the buttons are held for longer, the appliance automatically runs through the setting options.

The settings are activated without needing to be confirmed.

They are not saved when the appliance is switched off.

Programme default settings

 $\rightarrow$  Page 14

Overview of programmes from

 $\rightarrow$  Page 12

# Select additional programme settings

By selecting additional settings, you can better adapt the washing process to your items of laundry.

The settings can be selected or deselected depending on the programme progress.

The indicator lamp for the button lights up if a setting is active.

The settings are not saved when the appliance is switched off.

Additional settings → Page 14

Overview of programmes from → Page 12

# Placing laundry into the drum

#### 

Items of laundry pretreated with cleaning agents that contain solvents, e.g. stain remover/cleaning solvent, may cause an explosion after being loaded into the washing machine. Hand-rinse these items of laundry thoroughly beforehand.

#### Notes

- Mix items of laundry of varying sizes. Laundry items of different sizes distribute themselves better during the spin cycle. Individual items of laundry may lead to imbalances.
- Observe the maximum specified load. Overfilling has a negative impact on the washing result and promotes creasing.
- 1. Place presorted items of laundry unfolded in the washing drum.
- Make sure that no items of laundry are trapped between the washing machine door and the rubber seal, and close the door.





The "Start/Reload" button indicator lamp flashes and the programme settings continue to be displayed on the display panel one after another. It is possible to change the settings.

# Measure and add detergent and care products

# Caution! Damage to the appliance

 
Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the washing machine. Do not allow these agents to come into contact with the surfaces of the washing machine. If necessary, immediately wipe away spray residue and other residues/droplets with a damp cloth.

#### Measuring

Measure the detergent and care products according to:

- Water hardness (ask your water supply company)
- The manufacturer's instructions on the packaging
- The amount of laundry
- Soiling → Page 11

### Filling

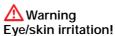


Detergent and care products may spray out if the detergent drawer is opened while the machine is in operation. Open the drawer carefully. Rinse eyes or skin thoroughly if they come into contact with detergent/care products.

If swallowed accidentally, seek medical advice.

**Note:** Dilute viscous fabric softener and fabric conditioner with water; this prevents blockages.

 Pour the detergent and care products into the appropriate compartments:

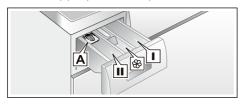

Measuring aid A For liquid detergent

Compartment **II** Detergent for the main wash,

water softener, bleach, stain

remover

Compartment & Softener, starch.

Do not exceed the maximum

Compartment I Detergent for prewash


- 1. Pull out the detergent drawer as far as possible.
- 2. Add detergent and/or care products.
- 3. Close the detergent drawer.

#### Measuring aid\* for liquid detergent

 \*Depending on the model

Position the measuring aid for measuring the correct amount of liquid detergent:

- Pull out the detergent drawer. Press down the insert and fully remove the drawer.
- Slide the measuring aid forwards, fold it down and click it into place.
- 3. Reinsert the drawer.

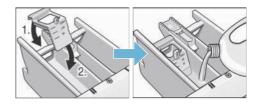

**Note:** Do not use the measuring aid for gel detergents and washing powder, or for programmes with prewash or when the "Finished in" time is selected.

For models without a measuring aid, pour the liquid detergent into the appropriate dispenser and place it in the drum.

#### Start the programme

Select the **Start**/Reload button. The indicator lamp lights up and the programme starts.

During the programme, the display panel shows the "Finished in" time or, after starting the wash programme, the programme duration and the symbols for the programme progress.

→ Page 9

**Note:** If you want to lock the programme to prevent it from being inadvertently adjusted, you can select the childproof lock as follows.

### Childproof lock

You can lock the washing machine to prevent the functions you have set from being changed inadvertently. To do this, activate the childproof lock after starting the programme.

To activate/deactivate the childproof lock, press and hold "Start/Reload" for approx. five seconds. The  $\backsim$  symbol appears on the display panel.

 Ights up: The childproof lock is active. ■ ☐ flashes: The childproof lock is active and the programme selector has been adjusted. To prevent the programme from stopping, turn the programme selector back to the original programme. The symbol lights up again.

**Note:** The childproof lock can remain activated until you wish to start the next programme, even after switching off the machine.

You must then deactivate the childproof lock before starting the programme and activate it again as necessary once the programme has started.

#### Adding laundry

After starting the programme, you can add or remove laundry as required.

To do this, press the Start/**Reload** button.

The "Start/Reload" indicator lamp flashes and the machine checks whether it is possible to add laundry.

**Note:** Do not leave the washing machine door open for too long when adding laundry as water from the laundry may leak out.

If, on the display panel:

- YES lights up, it is possible to add laundry.
- NO flashes, wait until YES lights up.
- A flashing NO symbol, it is not possible to add laundry. For safety reasons, the washing machine door remains locked when the water level or temperature is high, or while the drum is rotating, and it is not possible to add laundry. To continue the programme, press the Start/Reload button. The programme continues automatically.

# Changing the programme

If you have started the wrong programme by mistake, you can change the programme as follows:

- 1. Select the other programme.
- Press the Start/Reload button. The new programme starts from the beginning.

### Cancel the programme

For programmes at high temperatures:

- To cool the laundry, select Rinse/ Spin.
- 2. Press the Start/Reload button.

For programmes at low temperatures:

- Press Start/Reload.
- Select Rinse/Spin (deactivate the Rinse plus/Water plus button) or select Drain.
- Press the Start/Reload button.

# Programme end during rinse hold

- - - appears on the display panel, the status display lights up and the "Start/Reload" button indicator lamp flashes.

To end the programme, set the programme selector to "**Drain**" or select a spin speed. Then press the **Start**/ Reload button.

#### Programme end

-0- appears on the display panel and the "Start/Reload" button indicator lamp flashes.

If the symbol also appears on the display panel, the washing machine has detected too much foam during the wash programme and automatically switched on a rinse cycle to remove the foam.

 
**Note:** Add less detergent for the next washing cycle with the same load.

# Removing laundry/switching off the appliance

- Open the washing machine door and remove the laundry.
- 2. Turn the programme selector to **Off**. Appliance is switched off.
- Turn off the water tap. Note: Not required for Aqua-Stop models.

#### **Notes**

- Do not leave any items of laundry in the drum. They may shrink in the next wash or discolour another item.
- Remove any foreign objects from the drum and the rubber seal – risk of rusting.

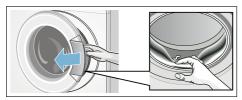

 Leave the washing machine door and detergent drawer open so that any residual water can dry away.



# **Automatic load sensing**

The automatic load sensing function adapts the water consumption ideally to each programme depending on the type of fabric and the load.


# Unbalanced load detection system


The automatic unbalanced load detection system detects imbalances and ensures even distribution of the laundry by repeatedly starting and stopping drum spinning.

If the laundry is extremely unevenly distributed, the speed is reduced or the spin cycle is not performed for safety reasons.

**Note:** Place large and small items of laundry in the drum (from  $\rightarrow$  Page 24).

# Setting the signal

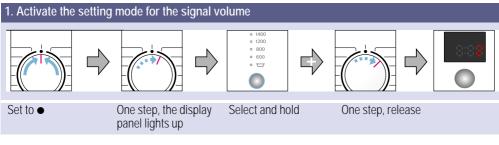

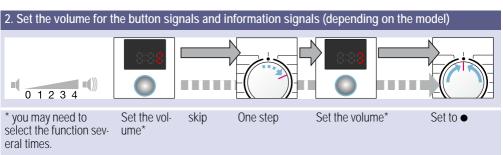




### 

There is a risk of electric shock if you touch live components.

 Switch off the appliance and unplug the mains plug.

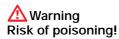

Toxic vapours can be produced by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

# Caution! Damage to the appliance

Cleaning agents that contain solvents, e.g. cleaning solvent, can damage surfaces and components in the machine.

Do not use cleaning agents that contain solvents.

# Machine housing/control panel

- Wipe the housing and the control panel with a soft, damp cloth.
- Do not use any abrasive cloths, scourers or cleaning agents (stainless steel cleaners).
- Remove the detergent residue immediately.

 Cleaning with a jet of water is prohibited.

#### Drum

Wipe the inside of the rubber seal dry with a cloth. Leave the washing machine door open in order that the drum can dry. Use chlorine-free cleaning agents and not steel wool.

### **Descaling**

 
**Note:** Make sure that there is no laundry in the machine.

Descaling should not be necessary if the detergent is measured out correctly. However, if it is required, follow the manufacturer's instructions for the descaling agent. Suitable descalers can be obtained via our website or from our after-sales service.

# Detergent drawer and housing

If the washing machine contains detergent or fabric softener residues:

- Pull out the detergent drawer. Press down the insert and fully remove the drawer from the housing.
- 2. To remove the insert, push the insert up from below with your finger.

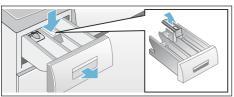

- Clean the detergent dispenser tray and insert with water and a brush, and dry it. Also remove any detergent or fabric softener residues in the housing.
- Fit the insert and lock it in place (push the cylinder onto the guide pin).
- 5. Push in the detergent drawer.


**Note:** Leave the detergent drawer open so that any residual water can evaporate.

# Detergent solution pump blocked
 
### 

When you wash at high temperatures, the detergent solution gets very hot. If you come into contact with the hot detergent solution, you may be scalded. Allow the detergent solution to cool down.

- Turn off the water tap so that no more water can flow in and has to be drained via the detergent solution pump.
- 2. Switch off the appliance. Pull out the mains plug.
- 3. Open and remove the service flap.

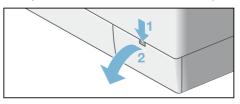


#### 4. For models with a drain hose:

Take the drain hose out of the retainer.

Remove the sealing cap; allow the detergent solution to flow out into a suitable container.

 Replace the sealing cap and place the drain hose in the retainer.

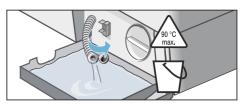


#### 5. For models without a drain hose:


Carefully unscrew the pump cover until the detergent solution begins to flow out.


When the service flap is half full, close the pump cover and drain the service flap.

 Repeat the above steps until all the detergent solution has completely drained out.

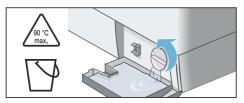


  6. Carefully unscrew the pump cover; residual water may leak out. Clean the interior, pump cover thread and pump housing. The impeller in the detergent solution pump must be able to rotate. Refit the pump cover and screw it on tightly. The handle must be in a vertical position.

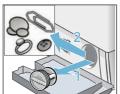

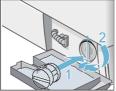

 
7. Place the service flap back on, lock it into place, and close it.

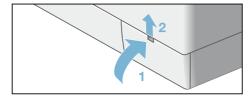

**Note:** To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment **II** and start the **Drain** programme.

# The drain hose at the siphon is blocked

 - 1. Switch off the appliance. Pull out the mains plug.
- Loosen the hose clamp. Carefully remove the drain hose, residual water may leak out.
- 3. Clean the drain hose and siphon connecting piece.

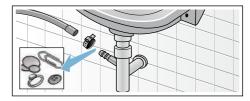

 Reattach the drain hose and secure the connection point using the hose clamp.

# Filter in the water supply blocked

 
# **Marning**

#### Risk of electric shock!

Do not immerse the Aqua-Stop safety valve in water (it contains an electric valve).

For this, first reduce the water pressure in the supply hose:


- 1. Turn off the water tap.
- 2. Select any programme (except Rinse / Spin / Drain).
- 3. Press the **Start**/Reload button. Allow the programme to run for approximately 40 seconds.
- 4. Turn the programme selector to **Off**. Pull out the mains plug.
- 5. Clean the filter on the water tap: Remove the hose from the water tap. Clean the filter with a small brush.

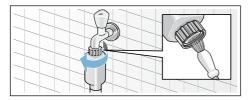

6. For standard and Agua-Secure models, clean the filter on the rear of the appliance:

Remove the hose from the rear of the appliance.

 Remove the filter using pliers and clean the filter.

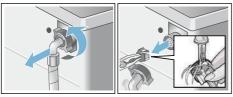

7. Connect the hose and check for leaks.




# Paults and what to do about them.
 
### **Emergency release**

E.g. in the event of a power cut The programme will continue running when the power supply has been restored.

However, if the laundry has to be removed, the washing machine door can be opened as follows:

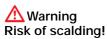

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution and laundry.

If possible, leave it to cool down.

# Warning Risk of injury!

You may injure your hands if you reach into the drum while it is rotating. Do not reach into the drum while it is rotating.

Wait until the drum has stopped rotating.

#### Caution! Water damage

Any escaping water may cause water damage.

Do not open the washing machine door if water can be seen through the glass.

- 1. Switch off the appliance. Pull out the mains plug.
- 2. Drain off the detergent solution → Page 21
- 3. Use a tool to pull the emergency release downwards and release it. The washing machine door can then be opened.



# Information on the display panel

en

Display	Cause/remedial action				
YES	The washing machine door is unlocked. It is possible to add laundry.				
NO	<ul> <li>Temperature too high. Wait until the temperature drops.</li> <li>Water level too high. Not possible to add laundry. Close the washing machine door immediately, if necessary. Select <b>Start</b>/Reload to continue the programme.</li> </ul>				
NO flashes	■ Wait until <b>YES</b> lights up.				
F:16 Close the door properly; laundry may become trapped.					
F:17	<ul> <li>Turn the water tap on fully,</li> <li>supply hose kinked or trapped,</li> <li>water pressure too low. Clean the screen.</li> </ul>				
F:18	<ul> <li>Detergent solution pump blocked. Clean detergent solution pump.</li> <li>The drain hose/waste pipe is blocked. Clean the drain hose on the siphon.</li> </ul>				
F:21 Motor fault. Call the after-sales service.					
F:23 Water in the base tub, appliance leaking. Call the after-sales service.  Childproof lock activated; deactivate it.					
				Too much foam detected, a rinse cycle has been switched on.	

### Faults and what to do about them.

Faults	Cause/remedial action			
Water is leaking out.	<ul><li>Attach/replace the drainage hose correctly.</li><li>Tighten the screw connection of the supply hose.</li></ul>			
No water supply.  Detergent not dispensed.	<ul> <li>■ Start/Reload not selected?</li> <li>■ Tap not turned on?</li> <li>■ Filter blocked? Clean the screen. → Page 22</li> <li>■ Supply hose kinked or trapped?</li> </ul>			
Washing machine door cannot be opened.	<ul> <li>Safety function active. Programme stopped? → Page 18</li> <li></li></ul>			
Programme does not start.	<ul> <li>Start/Reload or Finished in time selected?</li> <li>Washing machine door closed?</li> <li>□ Childproof lock activated? Deactivate. → Page 17</li> </ul>			
Detergent solution is not drained.	<ul> <li>□ (without final spin) selected?</li> <li>□ Clean detergent solution pump. → Page 21</li> <li>□ Clean the waste pipe and/or drainage hose.</li> </ul>			
Water not visible in the drum.	Not a fault – water below the visible area.			

Faults	Cause/remedial action
Spin result not satisfactory. Laundry wet/too damp.	<ul> <li>Not a fault – the unbalanced load detection system has interrupted the spin because the laundry is unevenly distributed.         Distribute small and large items of washing in the drum.     </li> <li>Reduced Ironing selected?</li> <li>Selected speed too low?</li> </ul>
Spin cycle started and stopped several times.	Not a fault – the unbalanced-load detection system is adjusting the imbalance.
The programme duration is longer than usual.	<ul> <li>Not a fault – the unbalanced-load detection system is adjusting the imbalance by repeatedly distributing the laundry.</li> <li>Not a fault – the foam detection system active – adds an additional rinse cycle.</li> </ul>
The programme duration changes during the wash cycle.	Not a fault – the programme sequence is optimised for the particular washing process. This may lead to changes in the programme duration in the display panel.
Residual water in the compartment for care products.	<ul> <li>Not a fault – the effect of the care product is not affected.</li> <li>Clean the insert if necessary → Page 21</li> </ul>
Odours in the washing machine.	Run Cottons 90 °C programme without washing. Use standard detergent.
The 🖨 symbol flashes in the display panel. Foam may escape from the detergent drawer.	Too much detergent used?  Mix one tablespoon of fabric softener with 1/2 litre water and pour into compartment II (not for outdoor fabrics or those made with down).  Reduce the detergent dosage for the next wash cycle.
Intense noise, vibrations and "wandering" during spinning.	<ul> <li>■ Are the appliance feet fixed? Secure the appliance feet. → Page 33</li> <li>■ Transport locks removed? Remove the transport locks. → Page 30</li> </ul>
Noises during spin and drain cycles.	Clean the detergent solution pump $\longrightarrow$ Page 21
Display panel/indicator lamps do not function during operation.	<ul> <li>Power cut?</li> <li>Circuit breakers tripped? Switch the circuit breakers back on or replace them.</li> <li>If the fault occurs repeatedly, call the after-sales service.</li> </ul>
Detergent residues on the laundry.	<ul> <li>Occasionally, phosphate-free detergents contain water-insoluble residues.</li> <li>Select Rinse/Spin or brush the laundry after washing.</li> </ul>
<b>NO</b> appears on the display in reload mode.	<ul> <li>Water level too high. Not possible to add laundry. Close the washing machine door immediately, if necessary.</li> <li>Select Start/Reload to continue the programme.</li> </ul>

#### After-sales service en

Faults	Cause/remedial action
YES appears on the dis-	The washing machine door is unlocked. It is possible to add laundry.
play in reload mode.	

If you cannot correct a fault yourself (after switching off/on) or a repair is required:

- Turn the programme selector to **Off**. Appliance is switched off.
- Unplug the mains plug from the socket.
- Turn off the water tap and call the after-sales service.



# After-sales service

If you cannot rectify a fault yourself (Faults and what to do about them $\rightarrow$  Page 24), please contact our after-sales service.  $\rightarrow$  Cover page

We will always find an appropriate solution in order to avoid unnecessary visits by engineers.

Please give the after-sales service the product number (E-Nr.) and the production number (FD) of the appliance.

E-Nr.	- FD
Product number	Production number

You can find this information (\*depending on the model):

On the inside of the washing machine door\*/in the opened service flap\* and on the rear of the appliance.

#### Trust the expertise of the manufacturer.

Contact us for assistance. By doing so, you will ensure that the repairs are carried out by trained service personnel using genuine spare parts.

# **Consumption rates**

# Energy and water consumption, programme duration and residual moisture for the main washing programmes

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons 20 °C	7 kg	0,31 kWh	721	2 ¾ h
Cottons 40 °C	7 kg	0,85 kWh	721	2 ¾ h
Cottons 60 °C	7 kg	1,21 kWh	721	2 ¾ h
Cottons 90 °C	7 kg	2,01 kWh	77 I	3 h
Easy-Care 40 °C	3 kg	0,64 kWh	561	1 ¾ h
Mixed Load 40 °C	3 kg	0,46 kWh	361	1 ¼ h
Delicate/Silk 30 °C	2 kg	0,24 kWh	371	3∕4 h
₩ / Wool 30 °C	2 kg	0,22 kWh	47 I	3∕4 h

Programme	Approximate information on the residual moisture**				
	WAE28	WAE28 WAE24 \		WAE16	
	max 1400 rpm	max 1200 rpm	max 1000 rpm	max 800 rpm	
Cottons	53 %	58 %	68 %	80 %	
Easy-Care	40 %	40 %	40 %	40 %	
Delicate/Silk	30 %	30 %	30 %	30 %	
Wool	45 %	45 %	45 %	45 %	

<sup>\*</sup> The values may deviate from the stated values depending on the following factors: water pressure and hardness; water inlet temperature; ambient temperature; type, amount and soiling of laundry; type of detergent used; fluctuations in the power supply and additional functions selected.

<sup>\*\*</sup> Information on residual moisture based on programme-dependent spin speed limits and maximum loads.

### Efficiency test programmes for cotton fabrics

The following programmes (standard programmes, indicated by  $\bigcirc$ ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for Cottons in accordance with regulation (EU) no. 1015/2010	Load	Approximate programme duration
Cottons programme €60°0 + button C Eco	7 kg	3 ¾ h
Cottons programme €0°0 + button C Eco	3,5 kg	3 ¾ h
Cottons programme ◀ + button ← Eco	3,5 kg	3 1⁄4 h
Drogrammo cotting for tocting and anargy labelling in accorde	naa with Diractiva	0010/20/ELLwith cold

Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).

The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated programme temperature for energy-saving reasons.



# Technical data

#### **Dimensions:**

850 x 600 x 590 mm

(height x width x depth)

#### Weight:

68 - 75 kg (depending on the model)

#### Mains connection:

Mains voltage 220-240 V, 50 Hz

Nominal current 10 A

Nominal power 2000-2300 W

#### Water pressure:

100 - 1000 kPa (1 - 10 bar)

#### Power consumption when switched off:


0.20 W

#### Power consumption when ready for use (left-on mode):

1 90 W

# Positioning and connecting

### Included with the appliance

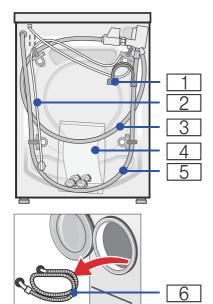

- ( Elbow for securing the water drain hose\*
- O Mains cable
- 8 Water supply hose on Aqua-Stop/Aqua-Secure models
- @ Bag\*:
  - Installation and operating instructions
  - After-sales service location directory\*
  - Warranty\*
  - Cover caps for openings left after removing the transport locks
  - Spanner\*
- H Water drain hose
- P Water supply hose on Standard models

  \* depending on the model

#### Notes

- Check the machine for transport damage. Never use a damaged machine. If you have a complaint, please contact the retailer from whom you purchased the appliance, or our after-sales service.
- Moisture in the drum is due to the final inspection.

**In addition**, a hose clamp (24-40 mm diameter, available from specialist dealers) is required to connect the water drain hose to a siphon.

#### Useful tools

- Spirit level for levelling
- Spanner with:
  - WAF 13 for loosening the transport locks, and
  - WAF 17 for aligning the appliance feet

### Safety instructions

# ⚠ Warning Risk of injury!

- The washing machine is very heavy.
   Be careful when lifting/transporting the washing machine.
- If the washing machine is lifted by protruding components (e.g. the washing machine door), the components may break off and cause injuries.
  - Do not lift the washing machine by protruding parts.
- If the hose and mains cables are not routed properly, there is a risk of tripping and injury.
   Lay hoses and cables in such a way that there is no risk of tripping.

#### Caution!

#### Damage to the appliance

Frozen hoses may crack/burst.

Do not install the washing machine in areas exposed to frost and/or outdoors.

#### Caution! Water damage

The connection points for the water supply hose and water drain hose are under high water pressure. To prevent leaks and water damage, you must follow the instructions in this section.

#### Notes

- In addition to the safety information listed here, the local water and electricity supplier may have special requirements.
- If in doubt, have the appliance connected by a specialist.

#### Installation surface

**Note:** The washing machine must be stable so that it does not move around.

- The surface on which it is installed must be firm and level.
- Soft floors/floor coverings are not suitable.

### Installation on a base or a wooden joist floor

# Caution!

#### Damage to the appliance

The washing machine may "wander" and tip/topple from the base when spinning.

Use holding brackets to secure the feet of the appliance.

Order no. WMZ2200, WX975600, 77080X0

**Note:** On wooden joist floors, install the washing machine:

- In a corner, if possible,
- On a water-resistant wooden board (min. 30 mm thick) which is screwed tightly to the floor.

### Installing the appliance in a kitchenette



### **Warning**

Install the appliance (underneath the worktop or fitted in a cabinet) before connecting it to the power supply.

#### **Notes**

- Recess width of 60 cm required.
- Only install the washing machine underneath a continuous worktop that is securely connected to adjacent cabinets.



#### Warning

#### Risk of electric shock!

Instead of the appliance covering plate, you **must** have a metal cover\* fitted by an expert.

\* Order no. WMZ2420, WZ10190

 
# Removing the transport locks

#### Caution!


#### Damage to the appliance

- The machine is secured for transportation using transport locks. If the transport locks are not removed, the drum, for example, may become damaged when the machine is operated. Before using the appliance for the first time, make sure that you completely remove all four transport locks. Keep the locks in a safe place.
- To prevent transport damage from occurring if the appliance is moved at a later date, you must refit the transport locks before transporting the appliance.


Note: Store the screw and sleeve screwed together.

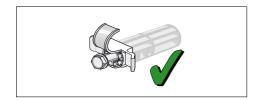

 
1. Take the hoses out of the holders.

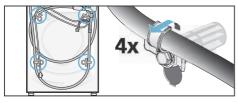

  Unscrew and remove all four transport brace screws.
 Remove the sleeves. To do this, remove the mains cable from the holders.

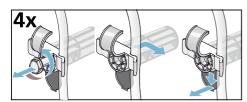


 Fit the covers. Lock the covers firmly in place by applying pressure to the snap-in hooks.

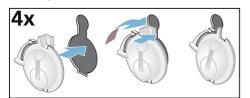


# Hose and cable lengths

Left-hand connection

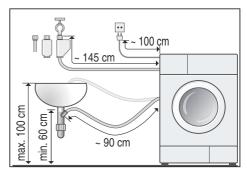

Right-hand connection

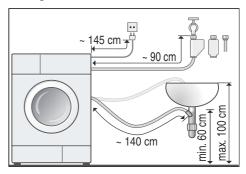

#### Tip:

The following are available from specialist dealers/the after-sales service:

- Extension for Aqua-Stop and cold water supply hose (approx. 2.50 m). Order no. WMZ2380, WZ10130, Z7070X0
- A longer supply hose (approx. 2.20 m) for standard model

#### Water inlet

### 

There is a risk of electric shock if you touch live components.

Do not immerse the Aqua-Stop safety valve in water (it contains an electric valve).

Observe the following when connecting the machine:

#### **Notes**

- Only operate the washing machine using cold mains water.
- Do not connect the machine to the mixer tap of an unpressurised hotwater boiler.
- Do not use a used supply hose. Only use the supply hose supplied or one that was purchased from an authorised specialist retailer.
- Do not bend, squash, modify or cut through the water supply hose (otherwise its strength is no longer guaranteed).
- Only tighten the screw connections by hand. If the screw connections are tightened too much with a tool (pliers), the thread may be damaged.

# Optimum water pressure in the supply network

At least 100 kPa (1 bar)

Maximum 1000 kPa (10 bar)

When the tap is open, the water flow is at least 8 l/min.

If the water pressure is higher than this, a pressure-reducing valve must be installed.

#### Connection

 
Connect the water supply hose to the water tap (¾" = 26.4 mm) and to the appliance (not necessary for Aqua-Stop models as this is permanently installed):

#### Model: Standard






#### Model: Aqua-Secure

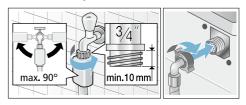

#### Model: Aqua-Stop

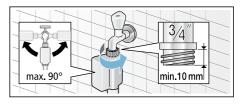 

**Note:** Open the water tap carefully, checking the leak tightness of the connection points. The screw connection is under mains water pressure.

### Water outlet

#### Caution! Water damage

If the drain hose slips out of the wash basin or the connection point during draining due to high water pressure, any escaping water may cause water damage.

Secure the drain hose so that it cannot slip out.

#### **Notes**

 Do not kink the water drain hose or put strain on it lengthways.  Height difference between the installation surface and the drain: Min. 60 cm. max. 100 cm

You can lay the water drain hose as follows:

Drainage into a washbasinWarning

#### Risk of scalding!

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a washbasin).

Do not reach into the hot detergent solution.

 
#### Caution!

#### Damage to the appliance/fabrics

If the end of the drain hose is immersed in the drained water, water may be sucked back into the appliance and may damage the appliance/fabrics.


Make sure that:

- The plug does not block drainage from the washbasin.
- The end of the drain hose is not immersed in the drained water.
- The water drains away quickly enough.

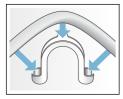



 Drainage into a siphon The connection point must be secured using a hose clamp with a diameter of 24-40 mm (available from specialist dealers).

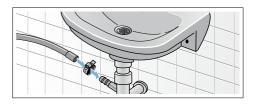

#### Levelling

Level the appliance using a spirit level. Incorrect levelling may result in intense noise, vibrations and "wandering".

- Loosen the lock nuts using a spanner, by turning it in a clockwise direction.
- Check the levelling of the washing machine with a spirit level, and adjust it if necessary. Change the height by turning the appliance feet. All four appliance feet must stand firmly on the ground.
- housing.
  In doing so, hold the foot tight and do not adjust its height.
  The lock nuts on all four appliance feet must be screwed tightly against the housing.

3. Tighten the lock nut against the



#### Electrical connection

# ⚠ Warning Risk of death!

There is a risk of electric shock if you touch live components.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.
- Never unplug the mains plug during operation.

Observe the following information and ensure that:

#### **Notes**

- The mains voltage and voltage indicated on the washing machine (rating plate) are the same. The connected load and fuse required are specified on the rating plate.
- The washing machine is only connected to an alternating current via a properly installed earthed socket.
- The mains plug fits the socket.
- The cable cross-section is adequate.
- The earthing system is properly installed.
- The mains cable is only replaced by a qualified electrician (if this is necessary). Replacement mains cables are available from the aftersales service.
- No multiple plugs/couplings or extension cables are used.
- If an earth-leakage circuit breaker is used, only a type which displays this symbol is used.
   Only this symbol guarantees compliance with the currently applicable regulations.
- The mains plug can be accessed at all times.
- The mains cable is not bent, squashed, modified, cut through, or in contact with heat sources.

# Before washing for the first time

The washing machine was thoroughly tested before leaving the factory. In order to remove any water which may be left over from the test, run the first washing cycle **without** any laundry.

#### **Notes**

- The washing machine must be correctly installed and connected (from → Page 29).
- Never use a damaged machine. Inform your after-sales service.
- 1. Check the machine.
- 2. Remove the protective film from the control panel.
- 3. Connect the mains plug.
- 4. Turn on the water tap.
- 5. Close the washing machine door (do not load any laundry).
- Select the Cottons 90 °C programme.
- 7. Open the detergent drawer.
- 8. Pour approx. 1 litre of water into compartment II.
- Pour standard detergent into compartment II.
   Note: To prevent foaming, only use half of the amount of detergent recommended by the detergent manufacturer. Do not use detergent for wool or delicates.
- 10. Close the detergent drawer.
- 11. Press the Start/Reload button.
- **12.** Switch off the appliance at the end of the programme.

Your washing machine is now ready to use.

#### **Transportation**

 
E.g. when moving house

#### Preparatory work:

- 1. Turn off the water tap.
- Reduce the water pressure in the supply hose.
   Maintenance – filter in the water supply → Page 22
- Drain the remaining detergent solution.
   Maintenance detergent solution pump blocked → Page 21
- 4. Disconnect the washing machine from the mains.
- Remove the hoses.

#### Installing the transport locks:

- Remove the covers and keep them in a safe place.
   Use a screwdriver if necessary.
- Insert all 4 sleeves. Clip the mains cable securely in the holders. Insert and tighten the screws.

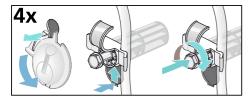

#### Before commissioning:

#### Notes

- The transport locks must be removed.
- To prevent unused detergent from flowing straight into the drain during the next wash: Pour approx. 1 litre of water into compartment II and start the **Drain** programme.

#### Aqua-Stop warranty

Only for appliances with Aqua-Stop

In addition to warranty claims against the vendor based on the purchase agreement and to our appliance warranty, we will provide compensation under the following conditions:

- 1. If water damage is caused due to a fault in our Aqua-Stop system, we will compensate domestic customers for the damage caused.
- 2. The liability guarantee is valid for the service life of the appliance.
- It is a prerequisite of all warranty claims that the appliance with Aqua-Stop must have been installed and connected correctly in accordance with our instructions; this also includes a correctly fitted Aqua-Stop extension (genuine accessories).
  - Our warranty does not cover defective feed lines or fittings leading to the Agua-Stop connection at the tap.
- 4. Appliances with Aqua-Stop do not need to be supervised during operation, nor secured afterwards by turning off the tap. The tap only needs to be turned off if you are away from home for a long period, e.g. for several weeks' holiday.

#### Advice and repair order in the event of faults

- GB 0344 892 8979 (Calls charged at local or mobile rate.)
- IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Robert Bosch, Hausgeräte GmbH Carl-Wery-Straße 34 81739 München DEUTSCHLAND

