



Register your new Bosch now:
www.bosch-home.com/welcome




Gas hob
PC.6A....., PC.7A....., PC.9A.....




BOSCH

[en] Instruction manual


PCC6A.B...

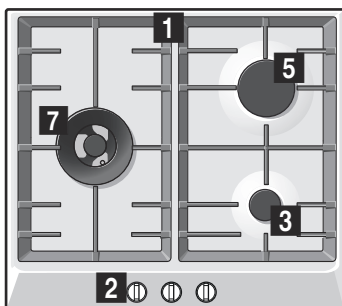


PCP6A.B...
PCP6A.C...

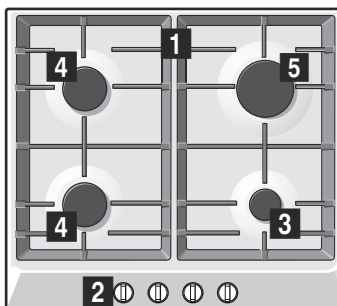


PCI6A.B...

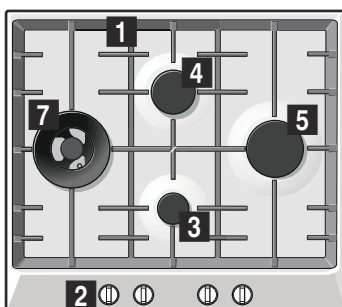


PCP6A.M...

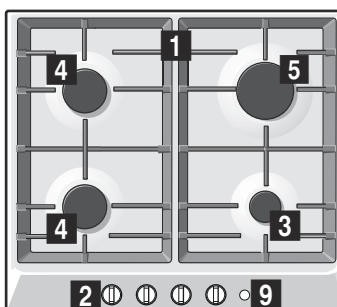


PCH6A.B...
PCH6A.C...

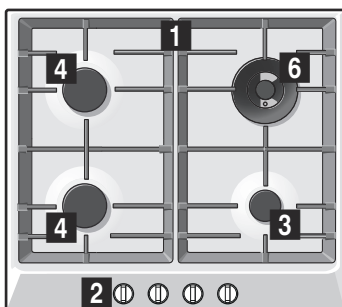


PCQ7A.B...

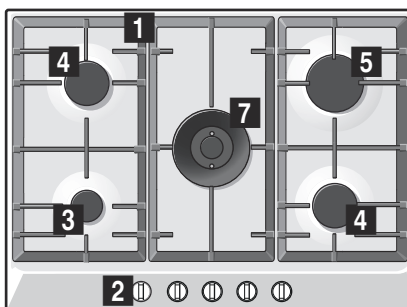


PCH6A.M...

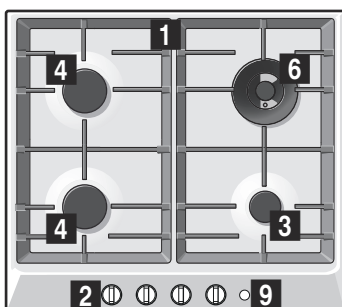


PCQ7A.M...

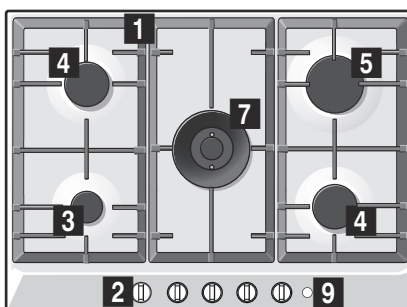


PCR7A.C...

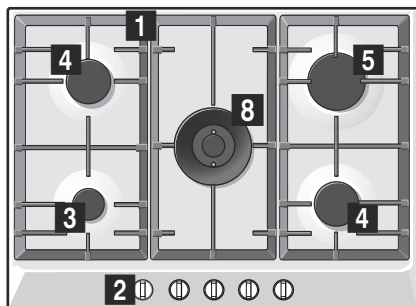


PCR7A.M...

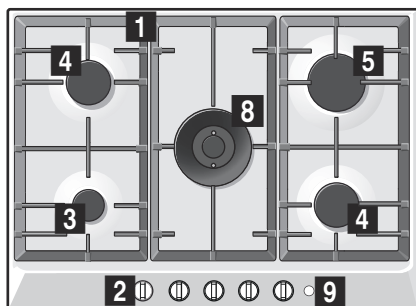


PCS7A.B... PCS7A.L...
PCS7A.C...

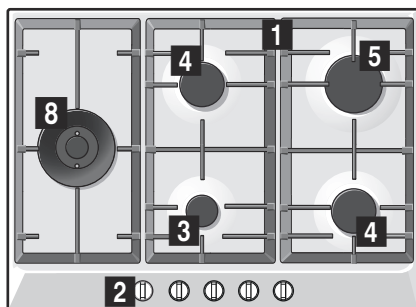


PCS7A.M...

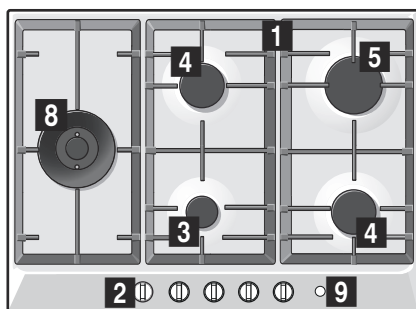


PCR9A.B...
PCR9A.C...

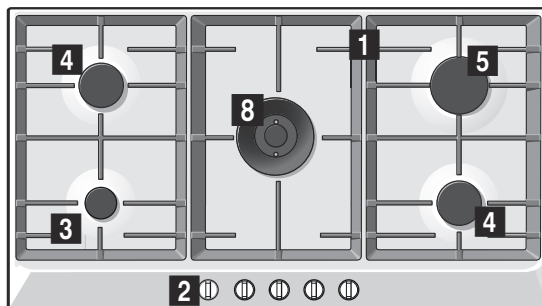


PCR9A.M...

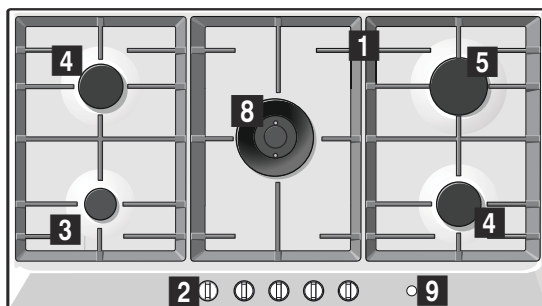

PCS9A.C...

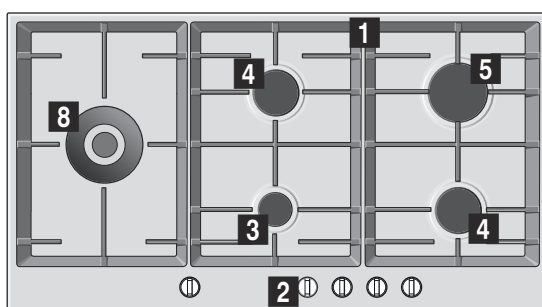



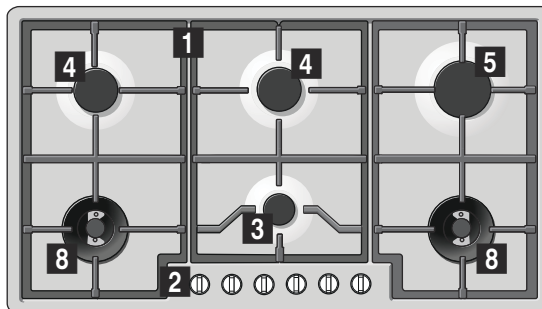






PCT9A.B...
PCT9A.C...



- 1** Pan supports
- 2** Control knobs
- 3** Economy burner with an output of up to 1 kW
- 4** Standard burner with an output of up to 1.75 kW
- 5** Rapid burner with an output of up to 3 kW
- 6** Mini-wok burner (up to 3.5 kW)
- 7** Wok burner with an output of up to 4 kW
- 8** Dual-wok burner with an output of up to 5 kW

- 9** Main Switch

Table of contents

| | | |
|--|---|----|
|  | Intended use | 4 |
|  | Important safety information | 5 |
|  | Getting to know your appliance | 6 |
| | Controls and burners | 6 |
| | Accessories | 6 |
|  | Gas burners | 7 |
| | Switching on manually | 7 |
| | Automatic ignition | 7 |
| | Safety system | 7 |
| | Switching off a burner | 7 |
| | Main switch/Hob lock (Main Switch) | 8 |
| | Warnings | 8 |
|  | Settings table and tips | 8 |
| | Suitable pans | 8 |
| | Instructions for use | 8 |
| | Cooking table | 9 |
|  | Cleaning and maintenance | 11 |
| | Cleaning | 11 |
| | Maintenance | 11 |
|  | Trouble shooting | 12 |
|  | Customer service | 13 |
| | Warranty conditions | 13 |
|  | Environmental protection | 13 |
| | Environmentally-friendly disposal | 13 |

Additional information on products, accessories, replacement parts and services can be found at www.bosch-home.com and in the online shop www.bosch-eshop.com

Intended use

Read these instructions carefully. You will only be able to use your appliance safely and effectively when you have read them. These operating and installation instructions should be retained, and passed onto the buyer if the appliance is sold.

The manufacturer is exempt from all responsibility if the requirements of this manual are not complied with.

The images shown in these instructions are for guidance only.

Do not remove the appliance from its protective packaging until it is installed in the unit. Do not switch on the appliance if it is damaged in any way. Contact our Technical Assistance Service.

This appliance is class 3 type, according to the EN 30-1-1 regulation for gas appliances: built-in appliance.

Before installing your new hob, ensure that it is being installed according to the assembly instructions.

This appliance cannot be installed on yachts or in caravans.

This appliance must only be used in well ventilated places.

This appliance is not intended for operation with an external clock timer or a remote control.

All operations relating to installation, connection, regulation and conversion to other gas types must be performed by an authorised technician, respecting all applicable regulations, standards and the specifications of the local gas and electricity suppliers. Special attention shall be paid to ventilation regulations.

This appliance leaves the factory set to the gas type that is indicated on the specifications plate. If this needs to be changed, please consult the assembly instructions. It is recommended you contact the Technical Assistance Service to change to another gas type.

This appliance has been designed for home use only, not for commercial or professional use. This appliance is only intended for

cooking purposes, not as a heating system. The warranty will only be valid if the appliance is used for the purpose for which it was designed.

This appliance is intended for use up to a maximum height of 2000 metres above sea level.

Never leave the appliance unattended during operation.

Do not use lids or protective barriers for children which are not recommended by the hob manufacturer. They may cause accidents such as those due to the overheating, ignition or detachment of fragments of materials.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Important safety information

Warning ▯ Risk of deflagration!

Accumulation of unburned gas in an enclosed area carries a risk of deflagration. Do not subject the appliance to draughts. These might blow out the burners. Carefully read the instructions and warnings on the operation of gas burners.

Warning ▯ Risk of poisoning!

The kitchen will become hot and humid and combustion products produced when this gas appliance is used. Make sure the kitchen is well ventilated, particularly when the hob is in operation: either keep the natural ventilation apertures open, or install a ventilation system (extractor hood). Intense prolonged use of the appliance may require additional or more

effective ventilation: open a window or increase the power of the ventilation system.

Warning ▯ Risk of burns!

- The hotplates and their immediate vicinity get very hot. Never touch the hot surfaces. Keep children under 8 years old well away from this appliance.
- If the liquefied gas bottle is not upright, liquefied propane/butane can enter the appliance. Intense darting flames may therefore escape from the burners. Components may become damaged and start to leak over time so that gas escapes uncontrollably. Both can cause burns. Always use liquefied gas bottles in an upright position.

Warning ▯ Risk of fire!

- The hotplates get very hot. Do not rest inflammable objects on the hob. Do not store objects on the hob.
- Do not store or use corrosive chemicals, products which produce fumes, inflammable materials or non-food products below or near this domestic appliance.
- Fat or oil which is overheated can catch fire easily. Never leave fat or oil to heat up unattended. If oil or fats do catch fire, never use water to put the fire out. Put the fire out by covering the pan with a lid and switch off the hotplate.

Warning ▯ Risk of injuries!

- Pans which are damaged, are not the right size, hang over the edge of the hob or are not positioned correctly can cause serious injuries. Follow the advice and warnings provided relating to the cooking pans.
- In the event of a malfunction, turn off the appliance's gas and electricity supply. For repairs, call our Technical Assistance Service.
- Do not tamper with the appliance's interior. If necessary, call our Technical Assistance Service.
- If one of the control knobs will not turn, do not force it. Call the Technical Assistance Service immediately so that they can repair or replace them.

Warning ▯ Risk of electric shock!


Do not clean the appliance using steam cleaners.

Getting to know your appliance

You can find your appliance and the burner powers in the model overview. → Page 2

Controls and burners


Each control knob is marked with the burner it controls. You can use the control knobs to set the output required in each case to various positions between the maximum and the minimum settings. Never try to switch directly from position 0 to position 1 or from position 1 to position 0.

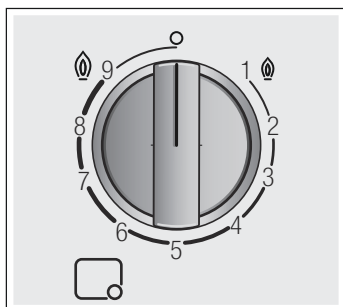


Indicators

| | |
|--|---|
| | Burner controlled by control knob |
| | Switched-off burner |
| | Highest power setting and electric ignition |
| | Lowest power setting |


For dual double-flame burners, the inner and outer flames can be controlled separately. The available power levels are as follows:

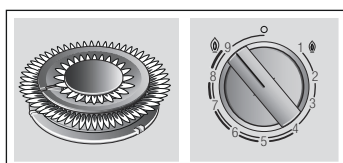


Inner and outer flame on full power.

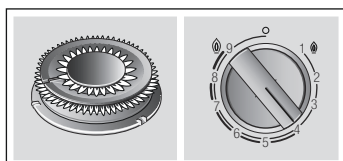

Outer flame on low power, inner flame on full power.

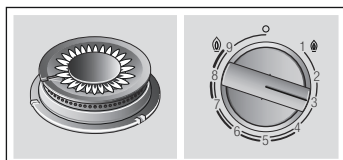


Inner flame on full power.

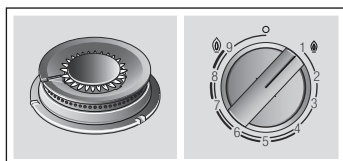

Inner flame on low power.

It is essential to ensure that all the burner parts and pan supports are correctly installed for the appliance to work correctly. Do not swap the burner caps around.

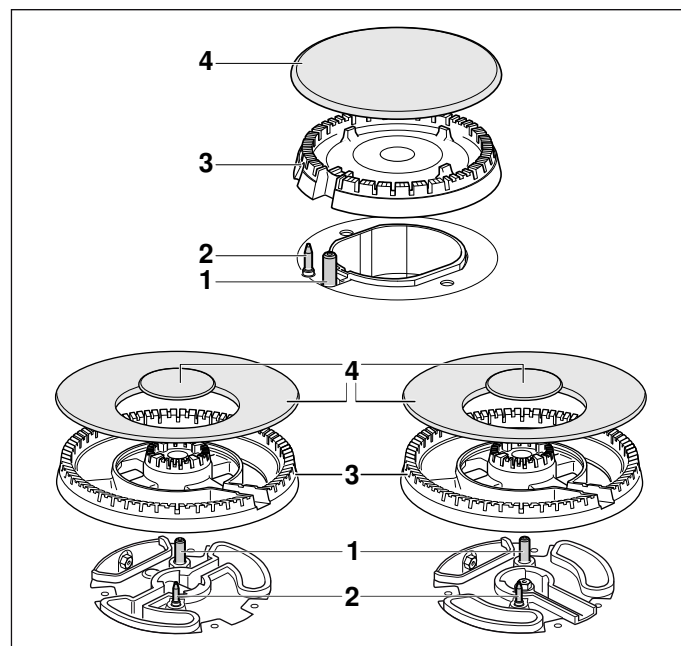


Elements

| | |
|---|---------------|
| 1 | Ignition plug |
| 2 | Thermocouple |
| 3 | Burner cup |
| 4 | Burner cap |


Accessories

Depending on the model, the hob may include the following accessories. These can also be acquired from the Technical Assistance Service.

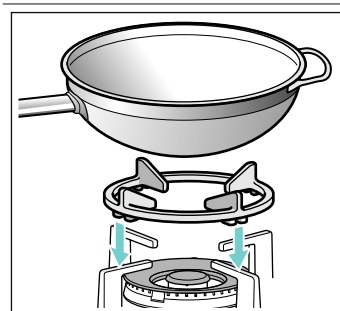


Wok attachment

Only when using cookware with a domed base on wok burners.

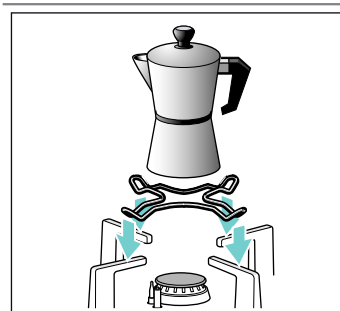

Espresso maker attachment

Only when using cookware with a base less than 12 cm in diameter on the smallest burner.

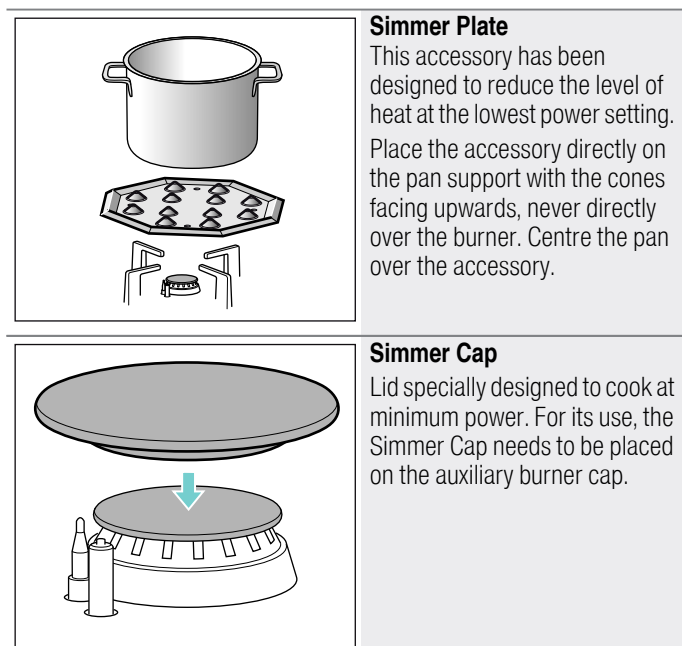**Simmer Plate**

This accessory has been designed to reduce the level of heat at the lowest power setting. Place the accessory directly on the pan support with the cones facing upwards, never directly over the burner. Centre the pan over the accessory.

Simmer Cap

Lid specially designed to cook at minimum power. For its use, the Simmer Cap needs to be placed on the auxiliary burner cap.

Code

HEZ298107 Additional wok pan support: cast iron (4-5 kW)

HEZ298108 Wok attachment: Cast iron (mini-wok burner)

HEZ298110 Additional wok pan support: steel enamel

HEZ298115 Additional coffee maker support

HEZ298105 Simmer Plate

HEZ211310 Simmer Cap

The manufacturer accepts no liability if these accessories are not used or are used incorrectly.

□ Gas burners

Switching on manually

1. Press the control knob for the selected burner and turn it anticlockwise to the highest power setting.
2. Hold an igniter or a naked flame (such as a lighter or a match) against the burner.

Automatic ignition

If your appliance has automatic ignition (ignition plugs):

1. Press the control knob for the selected burner and turn it anticlockwise to the highest power setting. Sparks are produced on all burners while you are pressing and holding the control knob. The burner ignites.
2. Release the control knob.
3. Turn the control knob to the required position.

If the burner does not ignite, switch it off and repeat the steps described above. This time, hold the control knob down for longer (up to 10 seconds).

⚠ Warning □ Risk of deflagration!

If the burner does not switch on after 15 seconds, switch off the control knob and open the door or window in the room. Wait at least a minute before igniting the burner again.

Note: It is important to keep the appliance clean. If the ignition plugs are dirty, this may cause ignition faults. Clean the ignition plugs regularly with a small non-metallic brush. Take care to prevent the ignition plugs from suffering any heavy knocks.

Safety system

Your hob is equipped with a safety system (thermocouple) that cuts off the gas when the burners are accidentally switched off.

To ensure that this device is active:

1. Switch on the burner as usual.
2. Without releasing the control knob, press and hold it down firmly for 4 seconds after lighting the flame.

Switching off a burner

Turn the corresponding control knob clockwise to the 0 setting.

A few seconds after the burner is switched off, a sound (thud) will be produced. This is not a fault - this means that the safety device is no longer operating.


Main switch/Hob lock (Main Switch)

The hob may have a main switch to cut off the mains gas supply and switch off all the burners at the same time. This switch is very practical if there are children in the house or, if for any reason, all the burners must be switched off quickly.

To lock the hob:


Press the main switch.

This switches off all the burners which are on. The hob is locked.

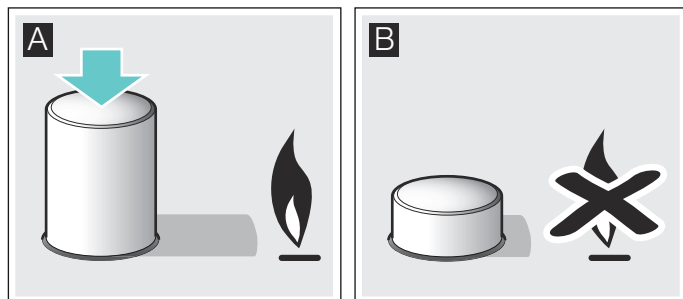

To unlock the hob:

1. Turn all the control knobs to the "off" position.
2. Press the main switch and turn it fully clockwise.

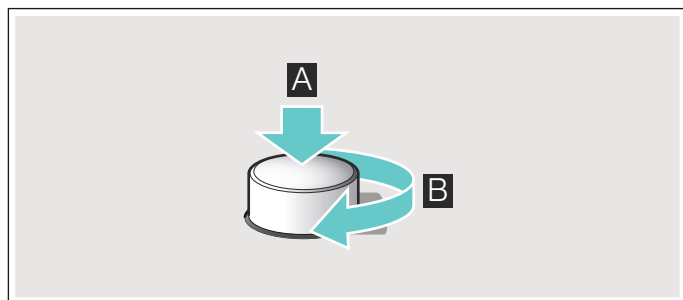

The mains gas supply is turned on. You can now use your hob normally.

Warnings

It is normal to hear a soft whistling noise while the burner is operating.

When first used, it is normal for the burner to give off odours. This does not pose any risk and does not indicate a malfunction. They will disappear in time.

An orange-coloured flame is normal. This is caused by the presence of dust in the atmosphere, spilt liquids, etc.

If the burner flames are accidentally blown out, switch off the burner operating control knob and do not try to relight it for at least 1 minute.

Settings table and tips


Suitable pans

| Burner | Minimum pan diameter | Maximum pan diameter |
|-----------------|----------------------|----------------------|
| Wok burner | 22 cm | - cm |
| Rapid burner | 22 cm | 26 cm |
| Standard burner | 14 cm | 20 cm |
| Economy burner | 12 cm | 16 cm |


Instructions for use

Note: When using certain pots or pans, a slight and temporary deformation of the steel cooking surface may occur. This is normal and does not affect the functionality of the appliance.


The following recommendations can help you save energy and avoid damaging your cookware:

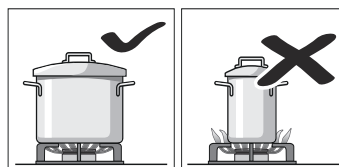


Use pans which are the right size for each burner. Do not use small pans on large burners. The flame must not touch the sides of the pan.

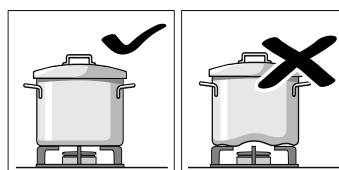

Do not use damaged pans, which do not sit evenly on the hob. Pans may tip over. Only use pans with a thick, flat base.

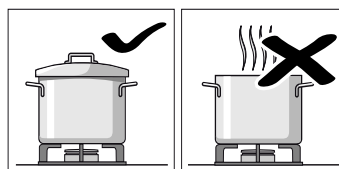


Do not cook without using a lid and make sure the lid is properly fitted. This wastes energy.

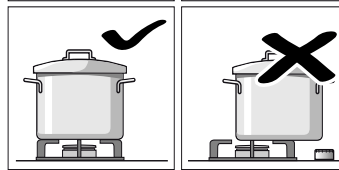


Always centre the pan over the burner, not to one side. Otherwise it could tip over.

Do not place large pans on the burners near the control knobs. These may be damaged by the very high temperatures.

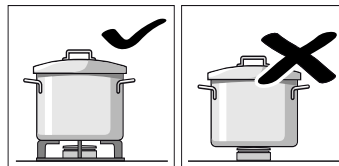

Place the pans on the pan supports, never directly on the burner.

Make sure that the pan supports and burner caps are correctly positioned before using the appliance.

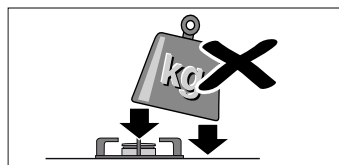

Pans should be placed on the hob carefully. Do not strike the hob and do not place excessive weight on it.

Cooking table




The table below lists the optimal heat settings and cooking times for various types of food. The information given applies when cooking for four people.

Cooking times and heat settings may vary depending on the type of food, its weight and quality, and on the material from which the cookware is made.





 


Always use the right size cookware for the amount of food you are cooking, and place it in the middle of the burner. Please refer to the information on cookware diameter. → "Suitable pans"

Information on the table

Each type of food can be prepared in one or two steps. Each step includes the following information:

-  Cooking method
-  Heat setting
-  Cooking time in minutes







Cooking methods featured in the table

-  Bring to the boil
-  Continue boiling
-  Build up pressure in the pressure cooker
-  Maintain pressure in the pressure cooker
-  Fry briefly at a high temperature
-  Fry briefly at a low temperature
-  Melt
- * Without lid
- ** Stir constantly

Note: You will not find these symbols on the appliance. They are used here to represent the various cooking methods.

In the table, you will find information on how to cook food on the different burners. We recommend using the first burner. The model overview describes all the burners on the hob. → Page 2

Example:





































 























| Food Burner | Total time in min. | Step 1 | Step 2 |
|----------------------------|-----------------------|---|---|
| Soups, creamy soups | | | |
| Fish soup | | | |
| Rapid | 12-17 |  8 7-9 |  1 5-8 |
| Standard | 17-22 |  8 11-13 |  1 6-9 |
| Wok | 10-15 |  9 6-8 |  4 4-7 |









 











 


 
























This example shows you how to cook fish soup using the rapid burner, standard burner and wok burner.








 

 

 








 

 


 





 



 





 


 
 
The total cooking time is between 12 and 17 minutes if you use the rapid burner (recommended option).










 

 








 
 
 
 
 
 
 




 


 



 
- Step 1: Bring to the boil. Use heat setting 8 for 7-9 minutes.
- Step 2: Continue boiling. Switch to heat setting 1 for 5-8 minutes.

If you are using any of the other recommended burners, proceed in the same way.

| Food Burner | Total time in min. | Step 1 | Step 2 |
|--|-----------------------|---|---|
| Soups, creamy soups | | | |
| Fish soup | | | |
| Rapid | 12-17 |  8 7-9 |  1 5-8 |
| Standard | 17-22 |  8 11-13 |  1 6-9 |
| Wok | 10-15 |  9 6-8 |  4 4-7 |
| Cream of pumpkin, borscht | | | |
| Rapid | 30-35 |  9 10-12 |  5 20-23 |
| Standard | 45-50 |  9 15-17 |  6 30-33 |
| Wok | 25-30 |  9 8-10 |  2 17-20 |
| Minestrone (vegetable soup) | | | |
| Rapid | 47-52 |  9 10-12 |  5 37-40 |
| Standard | 57-62 |  9 10-12 |  6 47-50 |
| Mini-wok | 43-48 |  9 8-10 |  3 35-38 |
| Pasta and rice | | | |
| Spaghetti | | | |
| Rapid | 18-22 |  * 9 8-10 |  6 10-12 |
| Standard | 20-24 |  * 9 10-12 |  7 10-12 |
| Wok | 18-22 |  * 8 8-10 |  6 10-12 |
| Rice | | | |
| Rapid | 17-22 |  9 5-7 |  2 12-15 |
| Standard | 18-23 |  9 7-9 |  6 11-14 |
| Wok | 15-20 |  8 4-6 |  2 11-14 |
| Ravioli | | | |
| Rapid | 9-14 |  9 4-6 |  6 5-8 |
| Standard | 17-22 |  8 12-14 |  8 5-8 |
| Wok | 10-15 |  8 5-7 |  8 5-8 |
| Vegetables and pulses | | | |
| Boiled potatoes (mashed, potato salad) | | | |
| Rapid | 23-28 |  9 8-10 |  5 15-18 |
| Standard | 25-30 |  9 10-12 |  6 15-18 |
| Wok | 25-30 |  7 11-13 |  5 14-17 |
| Hummus (puréed chickpeas) | | | |
| Rapid | 50-55 |  9 10-12 |  4 40-43 |
| Mini-wok | 47-52 |  8 10-12 |  7 37-40 |
| Wok | 47-52 |  7 10-12 |  5 37-40 |
| Lentils | | | |
| Rapid | 40-45 |  9 8-10 |  9 32-35 |
| Standard | 50-55 |  9 18-20 |  6 32-35 |
| Wok | 45-50 |  6 20-22 |  4 25-28 |
| Deep-fried vegetables | | | |
| Rapid | 12-17 |  * 7 6-8 |  * 6 6-9 |
| Mini-wok | 12-17 |  * 7 6-8 |  * 5 6-9 |
| Dual-wok | 10-15 |  * 7 5-7 |  * 5 5-8 |

| Food Burner | Total time in min. | Step 1    | Step 2    |
|----------------------------|-----------------------|---|---|
| Sautéed fresh vegetables** | | | |
| Wok | 6-8 |  * 9 6-8 | |
| Mini-wok | 7-8 |  * 9 7-8 | |
| Rapid | 6-8 |  * 9 6-8 | |
| Chips | | | |
| Wok | 15-20 |  * 7 15-20 | |
| Rapid | 15-20 |  * 9 15-20 | |
| Mini-wok | 15-20 |  * 8 15-20 | |
| Eggs | | | |
| Shakshuka | | | |
| Standard | 15-20 |  9 10-12  4 5-8 | |
| Rapid | 13-18 |  8 7-9  3 6-9 | |
| Dual-wok | 15-20 |  6 11-13  4 4-7 | |
| Omelette (1 port.) | | | |
| Standard | 3-5 |  * 8 3-5 | |
| Rapid | 2-4 |  * 9 2-4 | |
| Mini-wok | 2-4 |  * 9 2-4 | |
| Spanish tortilla | | | |
| Rapid | 25-30 |  * 9 25-30 | |
| Mini-wok | 20-25 |  * 9 20-25 | |
| Wok | 18-23 |  * 9 18-23 | |
| Sauces | | | |
| Béchamel sauce** | | | |
| Economy | 10-15 |  * 6 2-4  * 6 8-11 | |
| Standard | 10-15 |  * 5 2-4  * 5 8-11 | |
| Wok | 3-8 |  * 5 1-2  * 5 2-6 | |
| Blue cheese sauce** | | | |
| Economy | 4-6 |  * 7 4-6 | |
| Standard | 3-5 |  * 7 3-5 | |
| Dual-wok | 4-6 |  * 3 4-6 | |
| Neapolitan sauce | | | |
| Standard | 18-23 |  * 6 2-4  * 4 16-19 | |
| Wok | 13-18 |  * 7 1-3  * 5 12-15 | |
| Mini-wok | 13-18 |  * 8 1-3  * 6 12-15 | |
| Carbonara sauce | | | |
| Standard | 10-15 |  * 6 5-7  * 3 5-8 | |
| Rapid | 8-13 |  * 5 4-6  * 3 4-7 | |
| Dual-wok | 10-15 |  * 3 10-15 | |
| Fish | | | |
| Roman-style hake | | | |
| Rapid | 5-10 |  * 8 5-10 | |
| Mini-wok | 5-10 |  * 9 2-4  * 7 3-6 | |
| Dual-wok | 5-10 |  * 6 5-10 | |

| Food Burner | Total time in min. | Step 1    | Step 2    |
|--|-----------------------|---|---|
| Baked salmon | | | |
| Rapid | 5-10 |  * 7 2-4  1 3-6 | |
| Mini-wok | 7-12 |  * 8 2-4  1 5-8 | |
| Dual-wok | 4-9 |  * 6 2-4  1 2-5 | |
| Mussels | | | |
| Rapid | 5-7 |  9 5-7 | |
| Mini-wok | 4-6 |  9 4-6 | |
| Wok | 4-6 |  9 4-6 | |
| Meat | | | |
| Duck breast (x 1) | | | |
| Standard | 6-8 |  * 7 6-8 | |
| Rapid | 9-11 |  * 7 9-11 | |
| Wok | 6-8 |  * 5 6-8 | |
| Beef tenderloin stroganoff | | | |
| Mini-wok | 5-10 |  * 9 5-10 | |
| Rapid | 8-13 |  * 9 8-13 | |
| Wok | 5-10 |  * 8 5-10 | |
| Chicken schnitzels (8 chicken breast fillets) | | | |
| Rapid | 7-12 |  * 9 2-4  * 6 5-8 | |
| Wok | 7-12 |  * 9 2-4  * 6 5-8 | |
| Standard | 7-12 |  * 9 7-12 | |
| Minced meat (meat pies, pasties and other pastry-covered meat, meatballs, bolognese sauce) | | | |
| Rapid | 15-20 |  * 8 15-20 | |
| Standard | 20-25 |  * 9 20-25 | |
| Mini-wok | 12-17 |  * 9 12-17 | |
| Convenience products | | | |
| Frozen croquettes (x 16) | | | |
| Frozen fish fingers (x 12) | | | |
| Mini-wok | 4-8 |  9 4-8 | |
| Rapid | 6-10 |  8 6-10 | |
| Wok | 5-9 |  8 5-9 | |
| Fried sausages (x 12) | | | |
| Rapid | 5-10 |  9 1-3  7 4-7 | |
| Standard | 7-12 |  9 7-12 | |
| Wok | 5-10 |  9 1-3  7 4-7 | |
| Boiled sausages (x 12) | | | |
| Standard | 8-13 |  9 8-13 | |
| Wok | 9-14 |  4 9-14 | |
| Dual-wok | 9-14 |  4 9-14 | |
| Hamburgers (x 4) | | | |
| Rapid | 4-9 |  * 9 1-3  * 7 3-6 | |
| Mini-wok | 3-8 |  * 9 1-3  * 7 2-5 | |
| Wok | 4-9 |  * 9 1-3  * 7 3-6 | |

| Food Burner | Total time in min. | Step 1    | Step 2    |
|-----------------------------|-----------------------|---|---|
| Frozen vegetables** | | | |
| Rapid | 7-12 |  * 9 7-12 | |
| Mini-wok | 7-12 |  * 9 7-12 | |
| Wok | 5-10 |  * 9 5-10 | |
| Pizza (8 inch) | | | |
| Wok | 4-8 |  1 4-8 | |
| Mini-wok | 8-12 |  1 8-12 | |
| Rapid | 16-20 |  1 16-20 | |
| Desserts | | | |
| Rice pudding** | | | |
| Standard | 30-35 |  * 8 9-11 |  * 4 21-24 |
| Economy | 40-45 |  * 9 12-14 |  * 2 28-31 |
| Wok | 35-40 |  * 7 11-13 |  * 1 24-27 |
| Milk chocolate | | | |
| Economy | 10-14 |  * 1 10-14 | |
| Dual-wok | 12-16 |  * 1 12-16 | |
| Standard | 16-20 |  * 1 16-20 | |
| Crepes (x 4) | | | |
| Mini-wok | 8-13 |  * 7 1-3 |  * 6 7-10 |
| Rapid | 17-22 |  * 7 1-3 |  * 5 16-19 |
| Wok | 8-13 |  * 7 1-3 |  * 4 7-10 |
| Bread pudding | | | |
| Rapid | 25-30 |  9 10-12 |  6 15-18 |
| Wok | 23-28 |  9 8-10 |  7 15-18 |
| Dual-wok | 22-27 |  9 7-9 |  7 15-18 |
| Spanish pudding** | | | |
| Rapid | 3-8 |  * 5 3-8 | |
| Standard | 8-13 |  * 5 8-13 | |
| Wok | 3-8 |  * 2 3-8 | |
| Sponge cake (in bain marie) | | | |
| Rapid | 35-40 |  9 35-40 | |
| Wok | 40-45 |  9 40-45 | |
| Mini-wok | 35-40 |  9 35-40 | |

Cooking tips

- Use a pressure cooker to cook creamy soups and pulses. This will significantly reduce the cooking time. If you are using a pressure cooker, follow the manufacturer's instructions.
- Always use a lid when cooking potatoes and rice. This will significantly reduce the cooking time.
- If you are cooking food in a frying pan, make sure you heat up the oil before adding the food. Once you have started frying the food, keep the temperature constant by adjusting the heat setting as needed. If you are making more than one portion, wait until the temperature reaches cooking temperature again. Turn the food regularly.



Cleaning and maintenance

Cleaning

Once the appliance is cool, use a sponge to clean it with soap and water.

After each use, clean the surface of the respective burner parts once they have cooled down. If any residue is left (baked-on food, drops of grease etc.), however little, it will become stuck to the surface and more difficult to remove later. The holes and grooves must be clean for the flame to ignite properly.

The movement of some pans may leave metal residue on the pan supports.

Clean the burners and pan supports using soapy water and scrub with a non-wire brush.

If the pan supports are fitted with rubber rests, ensure that these are also cleaned. The rests may come loose and the pan support may scratch the hob.

Always dry the burners and pan supports completely. Water droplets or damp patches on the hob at the start of cooking may damage the enamel.

After cleaning and drying the burners, make sure the burner caps are correctly positioned on the diffuser.

Caution!

- Do not remove the control elements when cleaning the appliance. The appliance may be damaged if moisture finds its way inside.
- Do not use steam cleaners. This could damage the hob.
- If your hob is fitted with a glass or aluminium panel, never use a knife, scraper or similar implement to clean the point where it joins the metal.

Maintenance

Always clean off any liquid as soon as it is spilt. This will prevent food remains from sticking to the hob surface and you will save yourself any unnecessary effort.

Due to the high temperatures endured, the wok burner and the stainless steel zones (grease drip tray, burner outline, etc.) can change colour. This is normal. After each use, clean these areas with a product that is suitable for stainless steel.

It is recommended that the cleaning product available from our Technical Assistance Service (code 464524) is used regularly.

Caution!

The stainless steel cleaner must not be used in the area around the controls. The (printed) symbols may be wiped off.

Do not leave acidic liquids (e.g. lemon juice, vinegar, etc.) on the hob.

Trouble shooting

Sometimes certain faults detected can be easily resolved. Before calling the Technical Assistance Service, bear in mind the following advice:

| Fault | Possible cause | Solution |
|---|---|--|
| The general electrical system is malfunctioning. | Defective fuse. | Check the fuse in the main fuse box and change it if it is damaged. |
| | The automatic safety switch or circuit breaker has tripped. | Check the main control panel to see if the automatic safety switch or circuit breaker has tripped. |
| The automatic switching on function does not work. | There may be food or cleaning products stuck between the ignition sparkers and the burners. | The space between the ignition sparker and the burner must be clean. |
| | The burners are wet. | Dry the burner caps carefully. |
| | The burner caps are not correctly positioned. | Check that the burner caps are correctly positioned. |
| | The appliance is not earthed, is poorly connected or the earthing is faulty. | Contact the installation technician. |
| The burner flame is not uniform. | The burner components are not correctly positioned. | Correctly place the parts on the appropriate burner. |
| | The grooves on the burner are dirty. | Clean the grooves on the burner. |
| The gas flow is not normal or there is no gas. | The gas supply is blocked by gas taps. | Open all gas taps. |
| | If the gas is supplied from a gas cylinder, check that it is not empty. | Change the gas cylinder. |
| The kitchen smells of gas. | A gas tap has been left on. | Turn off the taps. |
| | Incorrect coupling of gas cylinder. | Check that the coupling is sound. |
| | Possible gas leak. | Shut off the gas supply, ventilate the premises and immediately notify an authorised installation technician to check and certify the installation. Do not use the appliance until ensuring that there is no gas leak in the installation or appliance itself. |
| The burner immediately switches off after releasing the control knob. | The control knob was not held down for long enough. | Once the burner is on, hold the control knob down a few seconds longer. |
| | The grooves on the burner are dirty. | Clean the grooves on the burner. |

Customer service

When contacting our Technical Assistance Service, please provide the product number (E-Nr.) and production number (FD) of the appliance. This information is given on the specifications plate located on the lower section of the hob and on the label in the user manual.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0344 892 8979
Calls charged at local or mobile rate.

IE 01450 2655
0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.


Warranty conditions

In the unlikely event that the appliance is damaged or does not meet your expectations in terms of quality, please inform us as soon as possible. For the warranty to be valid, the appliance must not have been tampered with, or used inappropriately.

The applicable warranty conditions are those set out by the company's representative office in the country of purchase. Detailed information is available from retail outlets. Proof of purchase must be presented to obtain the benefits of the warranty.

We reserve the right to introduce changes.

Environmental protection

If the  symbol is shown on the specifications plate, bear in mind the following instructions:

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

The packaging of your appliance has been manufactured using only the materials which are strictly necessary to guarantee efficient protection during transport. These materials are 100% recyclable, thus reducing the environmental impact. You can also contribute to caring for the environment by following the advice below:

- Dispose of the packaging in the appropriate recycling bin.
- Before you get rid of an old appliance, make sure you disable it. Contact your local authority to find out the address of your nearest recycling centre to dispose of your appliance.
- Do not pour used oil down the sink. Collect it in a sealed container and take it to an appropriate collection point or, failing that, place it in the rubbish bin (it will end up in a controlled dump; this is probably not the best option, but it will avoid contaminating ground water).

Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34
81739 München, GERMANY

www.bosch-home.com



9001124039
960803(C)