



- Softener
- Wash
- Prewash
- On/Off button
- Running pilot lamp
- Locked door pilot lamp
- Spin speed selector
- Rinse hold
- Extra rinse
- Half load wash/dryer
- Wash temperature selector
- Drying Time
- Wash programme selector

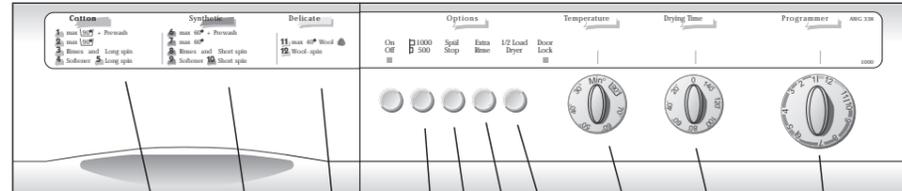

|  | Load   | Programme        | Max. Load<br>K | Detergent in dispenser |      |          | Spin speed selector | Rinse hold button | Extra rinse button | Wash/dry half load button | Wash temperature selector | Drying programme selector | Wash programme selector |
|--|--|------------------|----------------|------------------------|------|----------|---------------------|-------------------|--------------------|---------------------------|---------------------------|---------------------------|-------------------------|
|  |  |                  |                | Prewash                | Wash | Softener |                     |                   |                    |                           |                           |                           |                         |
|  | Very heavily soiled white cottons + linens without special finishes  | With hot prewash | 5              | I                      | II   |          | Optional            | -                 | Optional           | Optional                  | 90°                       | 70/120                    | 1                       |
|  | Cotton, linen or viscose without special   | With hot prewash | 5              | I                      | II   |          | Optional            | -                 | Optional           | Optional                  | 60°                       | 70/120                    |                         |
|  | Cotton, linen or viscose without special finishes where colours are fast at 40°C   | With hot prewash | 5              | I                      | II   |          | Optional            | -                 | Optional           | Optional                  | 40°                       | 70/120                    |                         |
|  | Normal soiled white cottons+linens   | Without prewash  | 5              | -                      | II   |          | Optional            | -                 | Optional           | Optional                  | 90°                       | 70/120                    | 2                       |
|  | Cotton,linen or viscose without special finishes where colours are fast at 60°C  | Without prewash  | 5              | -                      | II   |          | Optional            | -                 | Optional           | Optional                  | 60°                       | 70/120                    |                         |
|  | Cotton,linen or viscose without special finishes where colours are fast at 40°C  | Without prewash  | 5              | -                      | II   |          | Optional            | -                 | Optional           | Optional                  | 40°                       | 70/120                    |                         |
|  | Rinses and long spin   | -                | 5              | -                      | -    |          | Optional            | -                 | Optional           | Optional                  | -                         | -                         | 3                       |
|  | Softener, rinse and long spin  | -                | 5              | -                      | -    |          | Optional            | -                 | -                  | -                         | -                         | -                         | 4                       |
|  | Long spin  | -                | 5              | -                      | -    | -        | Optional            | -                 | -                  | -                         | -                         | -                         | 5                       |
|  | Heavily soiled nylon and polyestere/ cotton mixtures   | With prewash     | 2,5            | I                      | II   |          | -                   | Optional          | -                  | Optional                  | 60°                       | 30/50                     | 6                       |
|  | Acrylics,acetate and triacetate including mixtures with wool,polyestere/wool blends  | With prewash     | 2,5            | I                      | II   |          | -                   | Optional          | -                  | Optional                  | 40°                       | 30/50                     |                         |
|  | Normally soiled nylon, polyestere, cotton and viscose with special finishes, acrylic/ cotton mixtures,coloured/cotton mixtures | Without prewash  | 2,5            | -                      | II   |          | -                   | Optional          | -                  | Optional                  | 60°                       | 30/50                     | 7                       |
|  | Acrylics,acetate and triacetate including mixtures with wool, polyester/wool blends  | Without prewash  | 2,5            | -                      | II   |          | -                   | Optional          | -                  | Optional                  | 40°                       | 30/50                     |                         |
|  | Rinses and short spin  | -                | 2,5            | -                      | -    |          | -                   | Optional          | -                  | Optional                  | -                         | -                         | 8                       |
|  | Softener, rinse and short spin   | -                | 2,5            | -                      | -    |          | -                   | Optional          | -                  | -                         | -                         | -                         | 9                       |
|  | Short spin   | -                | 2,5            | -                      | -    | -        | -                   | -                 | -                  | -                         | -                         | -                         | 10                      |
|  | Machine washable wool  | Without prewash  | 1              | -                      | II   |          | -                   | Optional          | -                  | Optional                  | 40°                       | -                         | 11                      |
|  | Wool short spin  | -                | 1              | -                      | -    | -        | -                   | -                 | -                  | -                         | -                         | -                         | 12                      |

For the use of the machine as a dryer see chart back →

- Softener
- Wash
- Prewash
- On/Off button
- Running pilot lamp
- Locked door pilot lamp
- Spin speed selector
- Rinse hold
- Extra rinse
- Half load wash/dryer
- Wash temperature selector
- Drying Time
- Wash programme selector

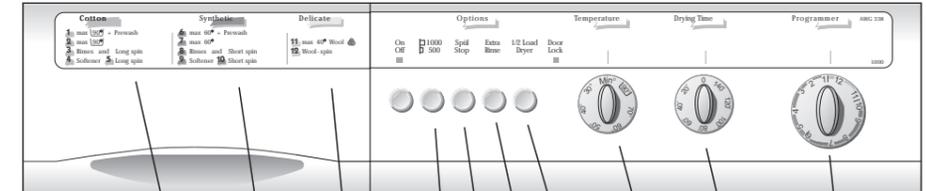

|  | Load   | Programme        | Max. Load<br>K | Detergent in dispenser |      |          | Spin speed selector | Rinse hold button | Extra rinse button | Wash/dry half load button | Wash temperature selector | Drying programme selector | Wash programme selector |
|--|--|------------------|----------------|------------------------|------|----------|---------------------|-------------------|--------------------|---------------------------|---------------------------|---------------------------|-------------------------|
|  |  |                  |                | Prewash                | Wash | Softener |                     |                   |                    |                           |                           |                           |                         |
|  | Very heavily soiled white cottons + linens without special finishes  | With hot prewash | 5              | I                      | II   |          | Optional            | -                 | Optional           | Optional                  | 90°                       | 70/120                    | 1                       |
|  | Cotton, linen or viscose without special   | With hot prewash | 5              | I                      | II   |          | Optional            | -                 | Optional           | Optional                  | 60°                       | 70/120                    |                         |
|  | Cotton, linen or viscose without special finishes where colours are fast at 40°C   | With hot prewash | 5              | I                      | II   |          | Optional            | -                 | Optional           | Optional                  | 40°                       | 70/120                    |                         |
|  | Normal soiled white cottons+linens   | Without prewash  | 5              | -                      | II   |          | Optional            | -                 | Optional           | Optional                  | 90°                       | 70/120                    | 2                       |
|  | Cotton,linen or viscose without special finishes where colours are fast at 60°C  | Without prewash  | 5              | -                      | II   |          | Optional            | -                 | Optional           | Optional                  | 60°                       | 70/120                    |                         |
|  | Cotton,linen or viscose without special finishes where colours are fast at 40°C  | Without prewash  | 5              | -                      | II   |          | Optional            | -                 | Optional           | Optional                  | 40°                       | 70/120                    |                         |
|  | Rinses and long spin   | -                | 5              | -                      | -    |          | Optional            | -                 | Optional           | Optional                  | -                         | -                         | 3                       |
|  | Softener, rinse and long spin  | -                | 5              | -                      | -    |          | Optional            | -                 | -                  | -                         | -                         | -                         | 4                       |
|  | Long spin  | -                | 5              | -                      | -    | -        | Optional            | -                 | -                  | -                         | -                         | -                         | 5                       |
|  | Heavily soiled nylon and polyestere/ cotton mixtures   | With prewash     | 2,5            | I                      | II   |          | -                   | Optional          | -                  | Optional                  | 60°                       | 30/50                     | 6                       |
|  | Acrylics,acetate and triacetate including mixtures with wool,polyestere/wool blends  | With prewash     | 2,5            | I                      | II   |          | -                   | Optional          | -                  | Optional                  | 40°                       | 30/50                     |                         |
|  | Normally soiled nylon, polyestere, cotton and viscose with special finishes, acrylic/ cotton mixtures,coloured/cotton mixtures | Without prewash  | 2,5            | -                      | II   |          | -                   | Optional          | -                  | Optional                  | 60°                       | 30/50                     | 7                       |
|  | Acrylics,acetate and triacetate including mixtures with wool, polyester/wool blends  | Without prewash  | 2,5            | -                      | II   |          | -                   | Optional          | -                  | Optional                  | 40°                       | 30/50                     |                         |
|  | Rinses and short spin  | -                | 2,5            | -                      | -    |          | -                   | Optional          | -                  | Optional                  | -                         | -                         | 8                       |
|  | Softener, rinse and short spin   | -                | 2,5            | -                      | -    |          | -                   | Optional          | -                  | -                         | -                         | -                         | 9                       |
|  | Short spin   | -                | 2,5            | -                      | -    | -        | -                   | -                 | -                  | -                         | -                         | -                         | 10                      |
|  | Machine washable wool  | Without prewash  | 1              | -                      | II   |          | -                   | Optional          | -                  | Optional                  | 40°                       | -                         | 11                      |
|  | Wool short spin  | -                | 1              | -                      | -    | -        | -                   | -                 | -                  | -                         | -                         | -                         | 12                      |

For the use of the machine as a dryer see chart back →

## USE OF MACHINE AS A DRYER

### USE OF THE RYER

The machine is endowed with a special water system that can condense the steam created during the drying cycle and evacuate it through the normal discharge.

**NOTE:** During the drying cycle the water tap must stay open and the outlet hose must be correctly positioned ( see the installation instructions).

#### MAX LOAD FOR DRYING CYCLE

In order to obtain the best drying results do not exceed the following laundry loads:

- resistant fabrics Kg 2.5 (Kg 2 for heavy bulky laundry)
- mixed and synthetic fibres: Kg 1,5

The above recommended loads allow a free moving of the laundry and avoid an excessive creasing so to guarantee a uniform drying result.

### DRYING TIMES

The following drying times change according to the spin cycle the laundry has gone through and the features of the fabrics. The user will learn the best drying times by experience.

|                   | LOAD   | LAUNDRY READY TO IRON | LAUNDRY READY TO USE |
|-------------------|--------|-----------------------|----------------------|
| COTTON:           | 2,5 kg | 100 min.              | 120 min.             |
|                   | 1,5 Kg | 50 min.               | 70 min.              |
| SYNTHETIC FIBRES: | 1,5 Kg | "                     | 50 min.              |
|                   | 0,5 Kg | "                     | 30 min.              |

**ATTENTION:** Do not use the dryer for cloths treated with solvents or oil by-products since the volatile substances could cause an explosion.

**NOTE:** Be very careful not to dry the laundry too much. It is recommended to leave it a bit damp. An excessive drying could crease the laundry making the ironing difficult. Do not use the dryer for sleeping-bags, eiderdowns, pillows and bulky blankets. These items expand while drying hindering a proper air flow inside the machine.

Normally possible laundry fraying is evacuated through the outlet hose. Should you have used the machine only as a dryer or washed and dried a particular cloth, we strongly recommend to take out the laundry and start a rinse and spin programme so to empty the drum from possible fraying preventing it from heaping up during the next cycle.

**NOTE:** The dryer gets hot while running.

- Do not let children touch the door glass while the machine is running.
- Be very careful not to touch the door glass while taking out the laundry because it can burn.
- Be very careful with zippers, metal buttons and the like because they can burn while taking out the laundry.

### DRYING CYCLE PROGRAMME SELECTION

It is possible to select the drying function only when the machine is on position ( STOP on the programme selector **P** ).

- 1) Load the machine and shut the door keeping in mind the "Notes" about the max laundry load for drying cycle
- 2) The machine can operate two drying cycles with different temperatures, a high temperature for cotton, selectable at the off position after programme (5). A low temperature for synthetic fibres, selectable at the off position after programme (10).
- 3) Open the water tap an keep it open during the programme cycle. Make sure that the outlet hose is in the correct position (in case of a doubt see the installation instructions) and that the machine is electrically connected.
- 4) Push the half load button for washing and drying.  $\frac{1}{2}$
- 5) Select the required drying time by the drying programme selector. (Dryng Time)
- 6) Push the ON/OFF button to set the machine in operation.

### WASHING/DRYING CYCLE SELECTION

- 1) Load the machine and shut the door keeping in mind the "Notes" about the max laundry load for drying cycle
- 2) The machine can operate two drying cycles with different temperatures, a high temperature for cotton, selectable at the off position after programme (5). A low temperature for synthetic fibres, selectable at the off position after programme (10).
- 3) Open the water tap an keep it open during the programme cycle. Make sure that the outlet hose is in the correct position (in case of a doubt see the installation instructions) and that the machine is electrically connected.
- 4) Push the half load button for washing and drying.  $\frac{1}{2}$
- 5) Select the required drying time by the drying programme selector. (Dryng Time)
- 6) Select the required washing programme by wash programme selector. **P**
- 7) Push the ON/OFF button to set the machine in operation.

## USE OF MACHINE AS A DRYER

### USE OF THE RYER

The machine is endowed with a special water system that can condense the steam created during the drying cycle and evacuate it through the normal discharge.

**NOTE:** During the drying cycle the water tap must stay open and the outlet hose must be correctly positioned ( see the installation instructions).

#### MAX LOAD FOR DRYING CYCLE

In order to obtain the best drying results do not exceed the following laundry loads:

- resistant fabrics Kg 2.5 (Kg 2 for heavy bulky laundry)
- mixed and synthetic fibres: Kg 1,5

The above recommended loads allow a free moving of the laundry and avoid an excessive creasing so to guarantee a uniform drying result.

### DRYING TIMES

The following drying times change according to the spin cycle the laundry has gone through and the features of the fabrics. The user will learn the best drying times by experience.

|                   | LOAD   | LAUNDRY READY TO IRON | LAUNDRY READY TO USE |
|-------------------|--------|-----------------------|----------------------|
| COTTON:           | 2,5 kg | 100 min.              | 120 min.             |
|                   | 1,5 Kg | 50 min.               | 70 min.              |
| SYNTHETIC FIBRES: | 1,5 Kg | "                     | 50 min.              |
|                   | 0,5 Kg | "                     | 30 min.              |

**ATTENTION:** Do not use the dryer for cloths treated with solvents or oil by-products since the volatile substances could cause an explosion.

**NOTE:** Be very careful not to dry the laundry too much. It is recommended to leave it a bit damp. An excessive drying could crease the laundry making the ironing difficult. Do not use the dryer for sleeping-bags, eiderdowns, pillows and bulky blankets. These items expand while drying hindering a proper air flow inside the machine.

Normally possible laundry fraying is evacuated through the outlet hose. Should you have used the machine only as a dryer or washed and dried a particular cloth, we strongly recommend to take out the laundry and start a rinse and spin programme so to empty the drum from possible fraying preventing it from heaping up during the next cycle.

**NOTE:** The dryer gets hot while running.

- Do not let children touch the door glass while the machine is running.
- Be very careful not to touch the door glass while taking out the laundry because it can burn.
- Be very careful with zippers, metal buttons and the like because they can burn while taking out the laundry.

### DRYING CYCLE PROGRAMME SELECTION

It is possible to select the drying function only when the machine is on position ( STOP on the programme selector **P** ).

- 1) Load the machine and shut the door keeping in mind the "Notes" about the max laundry load for drying cycle
- 2) The machine can operate two drying cycles with different temperatures, a high temperature for cotton, selectable at the off position after programme (5). A low temperature for synthetic fibres, selectable at the off position after programme (10).
- 3) Open the water tap an keep it open during the programme cycle. Make sure that the outlet hose is in the correct position (in case of a doubt see the installation instructions) and that the machine is electrically connected.
- 4) Push the half load button for washing and drying.  $\frac{1}{2}$
- 5) Select the required drying time by the drying programme selector. (Dryng Time)
- 6) Push the ON/OFF button to set the machine in operation.

### WASHING/DRYING CYCLE SELECTION

- 1) Load the machine and shut the door keeping in mind the "Notes" about the max laundry load for drying cycle
- 2) The machine can operate two drying cycles with different temperatures, a high temperature for cotton, selectable at the off position after programme (5). A low temperature for synthetic fibres, selectable at the off position after programme (10).
- 3) Open the water tap an keep it open during the programme cycle. Make sure that the outlet hose is in the correct position (in case of a doubt see the installation instructions) and that the machine is electrically connected.
- 4) Push the half load button for washing and drying.  $\frac{1}{2}$
- 5) Select the required drying time by the drying programme selector. (Dryng Time)
- 6) Select the required washing programme by wash programme selector. **P**
- 7) Push the ON/OFF button to set the machine in operation.