

LAVATHERM 96695IH

EN User Manual



 **AEG**
perfekt in form und funktion

CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	5
3. PRODUCT DESCRIPTION.....	7
4. ACCESSORIES.....	8
5. CONTROL PANEL.....	9
6. PROGRAMME TABLE.....	11
7. OPTIONS.....	14
8. BEFORE FIRST USE.....	15
9. DAILY USE.....	16
10. HINTS AND TIPS.....	18
11. CARE AND CLEANING.....	20
12. TROUBLESHOOTING.....	23
13. TECHNICAL DATA.....	24
14. INSTALLATION.....	25

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.aeg.com



Register your product for better service:
www.registeraeg.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.aeg.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.



- Read the supplied instructions.

1.1 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened.
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)

- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Obey the maximum load volume of 9kg (refer to the "Programme chart" chapter).
- Do not use the appliance if industrial chemicals have been used for cleaning.
- Wipe away lint that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

1.2 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.

- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

2.2 Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.

- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

2.3 Use



WARNING!

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.

2.4 Internal light



WARNING!

Risk of injury.

- Visible LED radiation, do not look directly into the beam.

- The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.
- To replace the internal light, contact the Authorised Service Centre.

2.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

2.6 Compressor



WARNING!

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

2.7 Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

3. PRODUCT DESCRIPTION

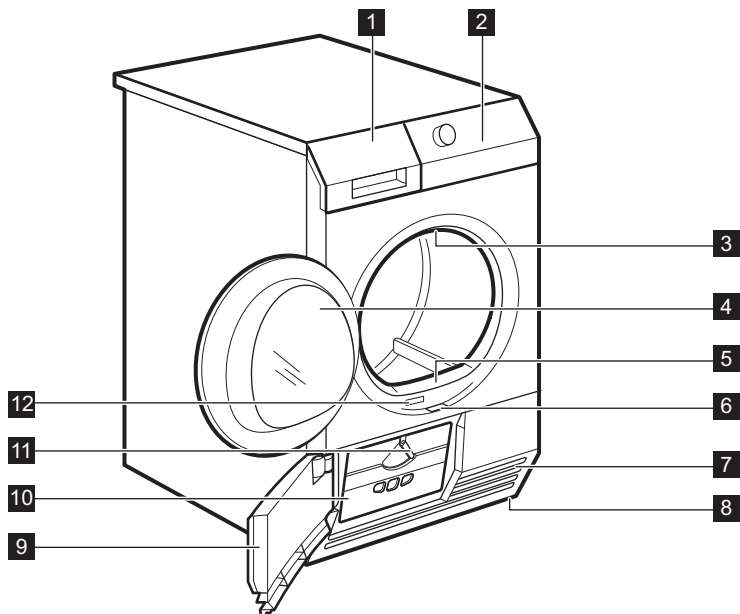


- | | |
|---|---|
| 1 Water container | 10 Heat exchanger cover |
| 2 Control panel | 11 The knob to lock the heat exchanger cover |
| 3 Internal light | 12 Rating plate |
| 4 Appliance door | |
| 5 Filter | |
| 6 The button to open the heat exchanger door | |
| 7 Airflow slots | |
| 8 Adjustable feet | |
| 9 Heat exchanger door | |



The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance (see separate leaflet).

4. ACCESSORIES

4.1 Stacking kit

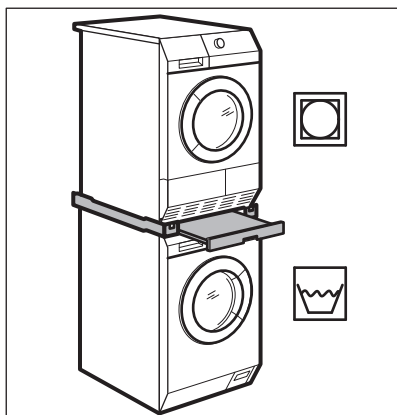


Accessory name: SKP11, STA8, STA9

Available from your authorized vendor.

Stacking kit can be used only with the washing machines specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

4.2 Draining kit

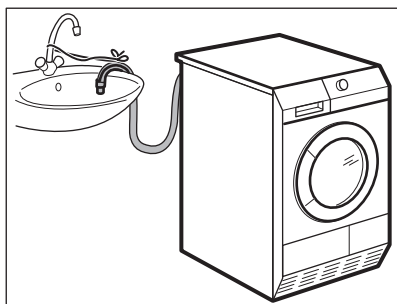

Accessory name: DK11.


It is available from your authorized vendor (can be attached to some types of the tumble dryers)

The accessory for through draining of the condensed water into a basin, siphon, gully, etc. After the installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be on the height from minimum of 50 cm to maximum of 1 m from floor level. The hose cannot be in loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

4.3 Pedestal with the drawer

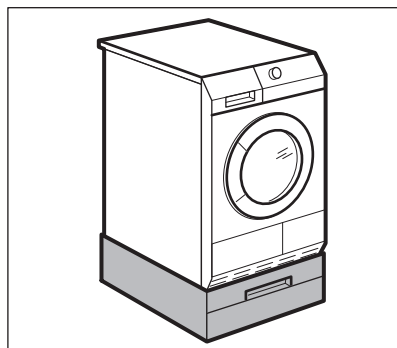

Accessory name: PDSTP10.


It is available from your authorized vendor.

To put the appliance higher at the level what helps to easy load and remove the laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products and more.

Read carefully the instructions supplied with the accessory.

4.4 Drying rack

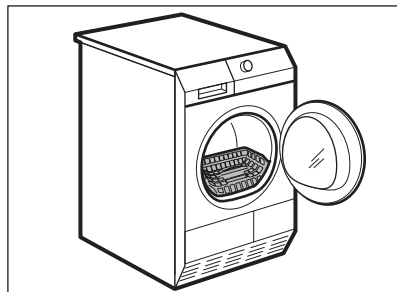

Accessory name: RA5, RA6, RA11, RA12.


It is available from your authorized vendor (can be attached to some types of the tumble dryers). Do the check with the vendor or on the web site if the accessory is compatible with your appliance.

Drying rack accessory let to dry safely in the tumble dryer:

- sport shoes
- wool
- soft toys
- lingerie

Read carefully the instructions supplied with the accessory.


5. CONTROL PANEL

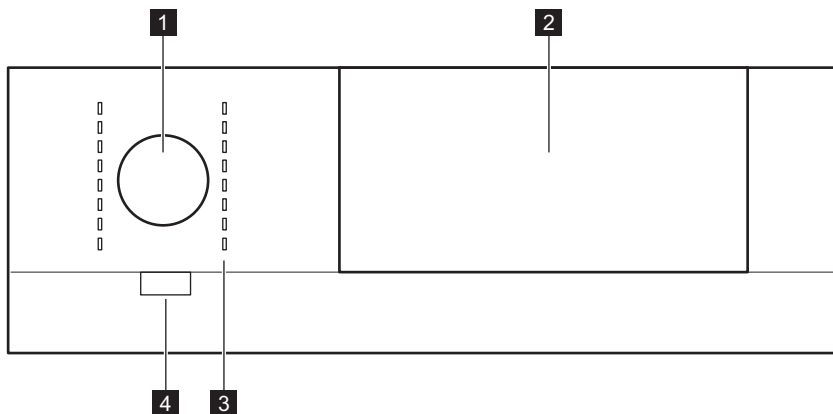

- 1 Programme dial
- 2 Touch panel with the display
- 3 Programme indicators


- 4 ① On/Off button with the **Auto Off** function

5.1 The touch panel

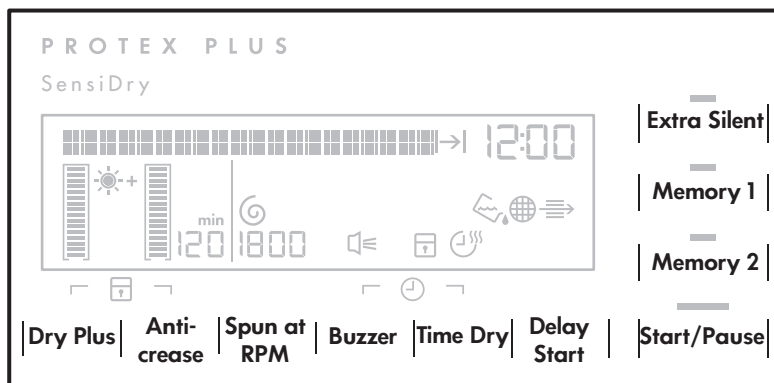


As alternative for the buttons to set the option you must touch the area with the


option name. Each area between the vertical marks senses the user finger.


 For accurate selection touch the centre point of the area between the vertical marks. Do not wear gloves when you touch the panel to set the function. Make sure the panel is always clean and dry.

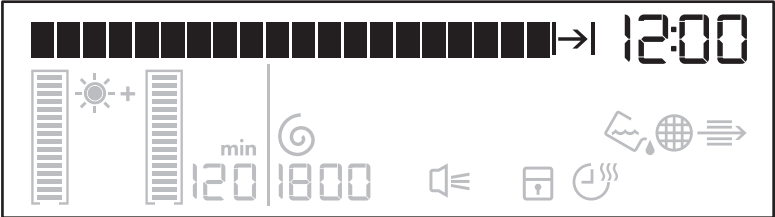

 5.2 Display




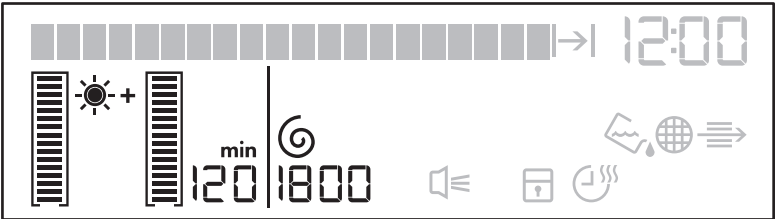





Symbol on the display	Symbol description
Time of day	text bar
12 : 00	clock
I→12.00	cycle time indication
→116 : 20	estimated hour of the programme end
→116 : 30	estimated hour of the time programme end time programme interval 10min. — 120min.
→116 : 50	estimated hour of the programme end with the delayed start delay start interval 30min. — 20h.

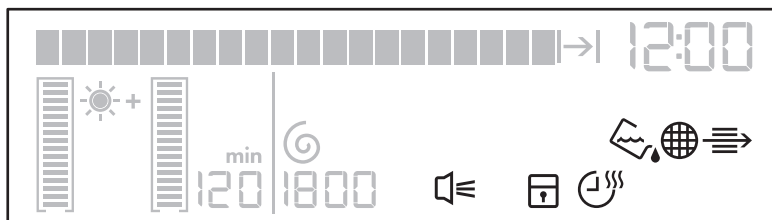


 


Symbol on the display	Symbol description
	extra laundry dryness: default, moderate, maximum

Symbol on the display	Symbol description
	anti-crease phase duration: default, interval (30min. - 120min.)
	laundry was spun at: 800 — 1800 rpm default




Symbol on the display	Symbol description
	buzzer on
	child lock on
	time dry option on
	indicator: <i>drain the water container</i>
	indicator: <i>clean filter</i>
	indicator: <i>do the check of the heat exchanger</i>

6. PROGRAMME TABLE


Programmes	Load ¹⁾	Properties / Fabric mark	
Cottons			
Extra Dry	9 kg	Drying level: extra dry.	/ 
Cupboard Dry  ²⁾³⁾	9 kg	Drying level: cupboard dry.	/ 
Iron Dry ²⁾	9 kg	Drying level: applicable for iron.	/ 

Programmes	Load ¹⁾	Properties / Fabric mark
Jeans	9 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). / 
Bed Linen	3 kg	To dry bed linen such as: single and double sheet, pillowcase, bed-spread. / 
Duvets	3 kg	To dry one or two duvet and pillows (with feather, down or synthetic fillings). / 
Time Drying	9 kg	With this programme you can use the option Time Drying and set the programme duration. / 
Extra Quick Mixed	3 kg	To dry cotton and synthetic fabrics, uses low temperature. / 
Synthetics		
Extra Dry	3,5 kg	Drying level: extra dry. / 
Cupboard Dry ²⁾	3,5 kg	Drying level: cupboard dry. / 
Iron Dry	3,5 kg	Drying level: applicable for iron. / 
Easy Iron	1 kg (or 5 shirts)	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger. / 
Active Wear	2 kg	To dry outdoor pieces of clothing, technical, sports, pile fabrics, waterproof and breathable jackets, shell jacket teamed with a removable fleece or inner insulation.
Sports	2 kg	Sportswear, thin and light fabrics, microfiber, polyester, which are not ironed.
Silk/Lingerie	1 kg	To dry silk/lingerie with warm air and gentle movement. / 

Programmes	Load ¹⁾	Properties / Fabric mark
Wool ⁴⁾	1 kg	<p>To dry the cloths made of wool . The cloths become soft and cosy. We recommend to remove the cloths immediately after the programme end. To increase or to decrease the level of the remaining moisture of the laundry you can use the function Dry Plus.</p> 

 
¹⁾ The maximum weight refers to dry items.

²⁾ **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document. If is necessary to correct the remaining moisture level of the laundry, adjust the programme with the Dry Plus option Clean the filter after each cycle

³⁾ The  Cottons Cupboard Dry programme is the "Standard cotton programme" and it is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

⁴⁾ The wool drying cycle of this tumble drying machine has been tested and approved by The **Woolmark** Company. The cycle is suitable to dry wool garments, which are labelled "hand wash" provided that the garments are washed in a **Woolmark** endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer. **1780SW13W**.

6.1 Programmes and options selection

Programmes ¹⁾	Options				
	Dry Plus	Anti-crease	Spun at RPM	Time Drying	Extra Silent
Cottons; Extra Dry	■	■	■		■
Cottons;  Cupboard Dry	■	■	■		■
Cottons; Iron Dry	■	■	■		
Jeans	■	■	■		
Bed Linen	■	■	■		
Duvets	■		■		
Time Drying		■		■	

Programmes ¹⁾	Options				
	Dry Plus	Anti-crease	Spun at RPM	Time Drying	Extra Silent
Extra Quick Mixed	■	■	■		
Synthetics; Extra Dry	■	■	■		■
Synthetics; Cupboard Dry	■	■	■		■
Synthetics; Iron Dry	■	■	■		
Easy Iron	■	■	■		
Active Wear	■		■		
Sports	■	■	■		
Silk/Lingerie	■		■		
Wool	■			■ 2)	

1) Together with the programme you can set 1 or more options.

2) Only with the drying rack — see chapter ACCESSORIES

6.2 Consumption Data

Programme	Spun at / residual humidity	Drying time	Energy consumption
Cottons 9 kg			
Cupboard Dry	1400 rpm / 50%	175 min.	2,00 kWh
	1000 rpm / 60%	200 min.	2,28 kWh
Iron Dry	1400 rpm / 50%	121 min.	1,31 kWh
	1000 rpm / 60%	138 min.	1,49 kWh
Synthetics 3,5 kg			
Cupboard Dry	1200 rpm / 40%	56 min.	0,54 kWh
	800 rpm / 50%	64 min.	0,61 kWh

7. OPTIONS

7.1 Dry Plus

This option helps to get the laundry more dried. There are 3 possible selections:



- the default selection which is related to the programme.



- the selection to get the laundry lightly dried.



- the selection to get the laundry more dried.

7.2 Anti-crease

Extends anti-crease phase (30 minutes) at the end of the drying cycle to 90 minutes. This option prevents laundry from creases. Laundry can be removed during the anti-crease phase.

7.3 Spun at RPM

This option helps to set the best condition to dry the laundry.

If you know the initial spin speed when you washed you can use this option. Higher spin speed causes that the laundry contains less water.

7.4 Buzzer

When the buzzer option is activated you can hear the buzzer at the:

- cycle end
 - anti-crease phase start and end
 - cycle interruption
- The buzzer option is by default always on. You can use this function to activate or deactivate the sound.



You can activate the Buzzer option with all programmes.

8. BEFORE FIRST USE

Before you use the appliance for the first time do these operations:

- Clean the tumble dryer drum with a moist cloth.
- Start a short programme (e.g. 30 minutes) with moist laundry.



At the beginning of drying cycle (3-5 min.) there could be a slightly higher sound level. It is because of start of the compressor that is normal for compressor powered appliances such: refrigerators, freezers.

7.5 Time Drying

Operates only with the Time Drying programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).

7.6 Delay Start

.



Lets to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.

1. Set the drying programme and options.
2. Touch the Delay Start option field again and again.

The time of the delay come into the view on the display (e.g. **12h** if the programme has to start after 12 hours.)

3. To activate the Delay Start option, touch the Start/Pause field.
- Time to start decreases on the display.

7.7 Extra Silent

. The appliance operates with low noise 62 dB without the effect on the drying quality. The appliance operates slowly with the longer cycle time.

8.1 Language

The first time you turn on the dryer the default language comes into the view on the display. You can confirm it or change the different language from the available languages list.

To set the different language:

1. Turn the programme dial to set your language.
2. Touch the Start/Pause field.

The language is memorised.

8.2 Clock

The first time you turn on the dryer the default time comes into the view on the display. You can confirm or change it.

To set the different time:





1. Turn the programme dial to set new hour.

2. Touch the Start/Pause field. The hour is memorised.
3. Turn the programme dial to set new minutes.
4. Touch the Start/Pause field. The minutes are memorised.

9. DAILY USE

9.1 Preparing the laundry

- Close the zippers.
- Close the fasteners of the duvet covers.
- Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from the pockets.
- If an item has the internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always external
- We recommend that you set the correct programme applicable for the type of fabrics that are in the appliance.
- Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed.
- Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.
- Make sure that the laundry weight is not more than the maximum weight that is in the programme table.
- Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items.

Fabric label	Description
	Laundry that is applicable for tumble dryer.
	Laundry that is applicable for tumble dryer. Set the programme with standard temperature.
	Laundry that is applicable for tumble dryer. Set the programme with low temperature.
	Laundry that is not applicable for tumble dryer.

9.2 Loading the laundry



CAUTION!

Do not lock the laundry in between the appliance door and rubber seal.

1. Pull the appliance door.
2. Load loosely the laundry.
3. Close the appliance door.

9.3 Turning on the appliance

To turn on the appliance:
Push the On/Off button.
If the appliance is on, some indications come in to the view on the display.

9.4 Auto Off function


To decrease the energy consumption, the Auto Off function turns off automatically the appliance:

- if the Start/Pause field was not touched in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the ① **On/Off** button to turn on the appliance.

If the appliance is on, some indications come in to the view on the display.

9.5 Setting a programme

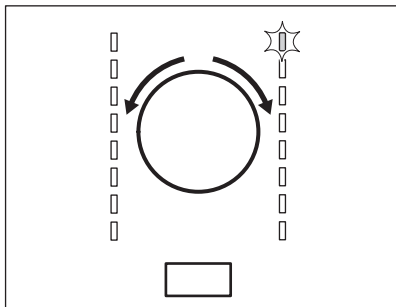


Use the programme dial to set the programme.
The possible time to complete the programme comes into the view on the display.



The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

9.6 Options

Together with the programme you can set 1 or more special options.

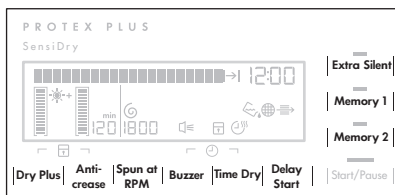

To activate or deactivate the option touch the applicable option field.

When the option is activated the LED above the option field or symbol on the display comes into the view.

9.7 Child lock option


The child lock can be set to prevent the children to play with the appliance. The child lock option locks all push buttons and the programme dial (this option does not lock **On/Off** button).


You can activate the child lock option:

- before you push the **Start/Pause** button - the appliance cannot start
- after you push the **Start/Pause** button - programmes and option selection is off.

Child lock option activation:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Touch at the same time and hold down the **Dry Plus** and **Anti-crease** option fields.

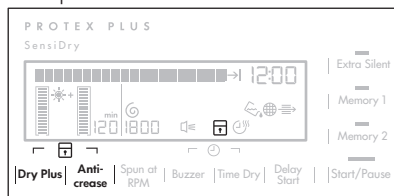

The symbol  comes into the view on the display.

5. To deactivate the child lock, touch again the above option fields until the symbol goes out of the view.


9.8 Memory - user configuration

You can save your own programme configuration in the appliance memory under 2 positions:

Memory 1 / Memory 2

To save your own configuration:

1. Select the programme and options.
2. Touch the **Memory 1** or **Memory 2** field for few seconds.

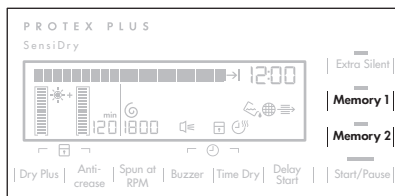


If the configuration is saved you see the message on the display.

To use your own configuration:

3. Turn on the appliance.
4. Touch the **Memory 1** or **Memory 2** field.

9.9 Starting a programme

To start the programme:

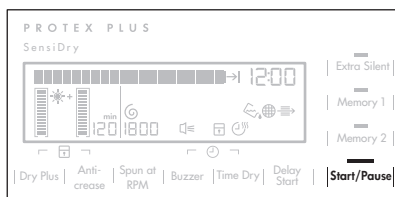

Touch the **Start/Pause** field.

The appliance starts and the LED above the touch field does not flash but is stable.

9.10 Programme change

To change a programme:

10. HINTS AND TIPS

10.1 Ecological hints


- Spin good the laundry before drying.
- Use the load volumes which are specified in the programme chart.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use the condensate as distilled water, e.g. for steam ironing. If it is necessary clean the condensate before (e.g. with a coffee filter) to remove possible small pieces of fluff.
- Always keep the airflow slots on the bottom of the appliance clear.
- Make sure that is good airflow in the appliance installation position.

1. Push the On/Off button to turn off the appliance.
2. Push again the On/Off button to turn on the appliance.
3. Set a new programme.

9.11 Programme end



Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle is completed, the symbol  flashes on the display. If the Buzzer option is on, the acoustic signal sounds intermittently for 1 minute.



If you do not turn off the appliance, the crease guard phase starts. Laundry can be removed during this phase.


To remove the laundry:

1. Push the On/Off button for 2 seconds to turn off the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

10.2 Adjustment of the remaining laundry moisture degree

To change the default degree of the remaining moisture of the laundry:

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Touch at the same time and hold down the **Dry Plus** and **Spun at RPM** option fields.

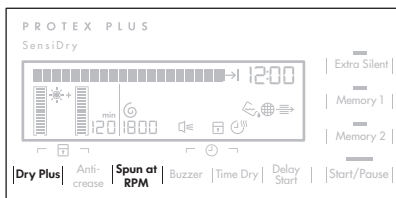


One of the symbols goes into the view on the display:

- ☐ - the maximum dry laundry
 - ☐ - the more dry laundry
 - ☐ - the standard dry laundry
5. Touch the **Start/Pause** field again and again until you set necessary degree.
 6. To memorise the setting, touch at the same time the **Dry Plus** and **Spun at RPM** option fields for approximately 2 seconds.

10.3 Deactivating the Tank indicator

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Touch at the same time and hold down the **Dry Plus** and **Buzzer** option fields.

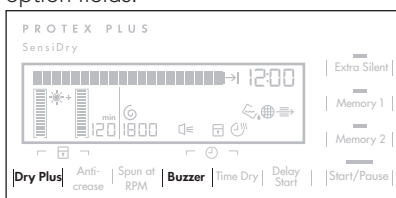

One of 2 configurations is possible:


- the Tank indicator: ☐ is on and the symbol ☐ goes into the view - the water container indicator is permanently **on**
- the Tank indicator: ☐ is off and the symbol ☐ goes into the view - the water container indicator is permanently **off**

10.4 Language

You can change the language each time you want.

To set the different language:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Touch at the same time the **Anti-crease** and **Spun at RPM** option fields and hold down.

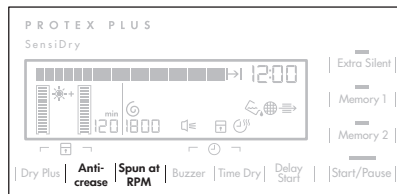

You see the language name on the display.


4. Turn the programme dial to set the new language.
 5. Touch the **Start/Pause** field.
- The language is memorised.

10.5 Clock

You can change the clock each time you want.

To set the different time:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Touch at the same time the **Buzzer** and **Time Drying** option fields and hold down.

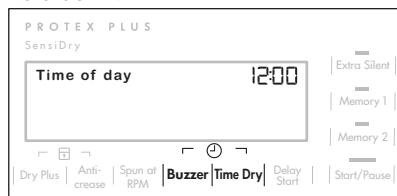


Clock digits start to flash on the display.

4. Turn the programme dial to set new hour.
 5. Touch the **Start/Pause** field.
- The hour is memorised.
6. Turn the programme dial to set new minutes.
 7. Touch the **Start/Pause** field.
- The minutes are memorised.

11. CARE AND CLEANING


11.1 Cleaning the filter

At the end of each cycle the symbol  *Filter* is on the display and you must clean the filter.




The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.


1. Open the door. Pull the filter.

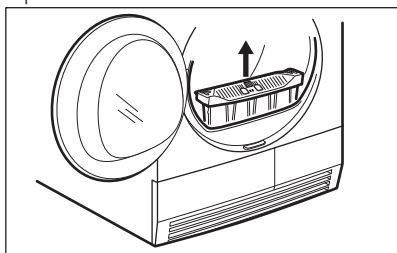


2. Push the hook to open the filter.

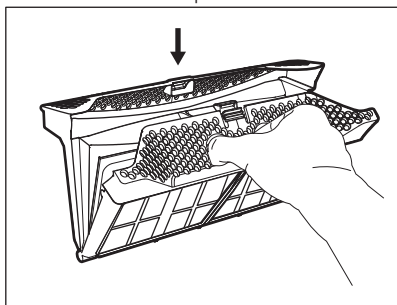


3. Use a moist hand to clean each filter part.

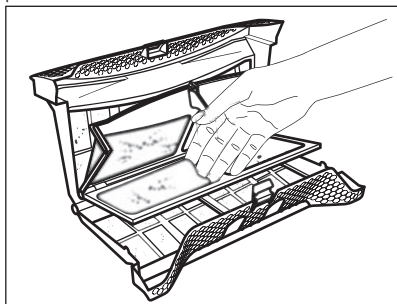

4. If necessary clean the filter with the brush under warm tap water and/or a vacuum cleaner. Close the filter.

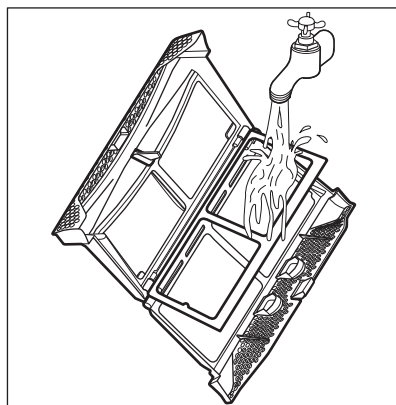


5. If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Put the filter inside the filter socket.

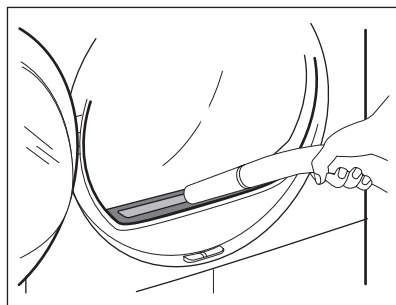

11.2 Draining the water container


Drain the condensed water container after each drying cycle.

If the condensed water container is full, the programme breaks off automatically.


The symbol  *Tank* is on the display and you must drain the water container.

To drain the water container:

1. Pull the water container and keep it in horizontal position.

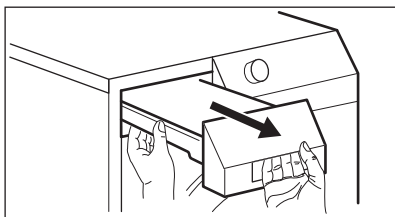

2. Move the plastic connection out and drain the water into a basin or equivalent receptacle.

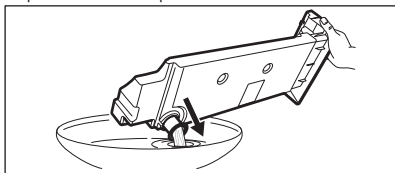


3. Move plastic connection in and install water container.
4. To continue the programme press the Start/Pause button.

11.3 Cleaning the heat exchanger


If the symbol \Rightarrow *Condenser* flashes on the display, do the inspection of the heat exchanger and its compartment. If there is a dirt, clean it.

To do the inspection:


1. Open the door. Pull the filter.

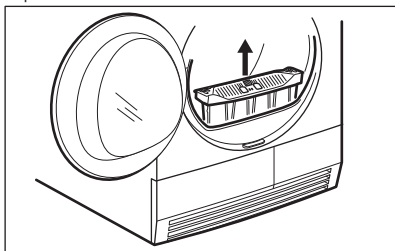


2. Move the release button on the bottom of the door to open the heat exchanger door.

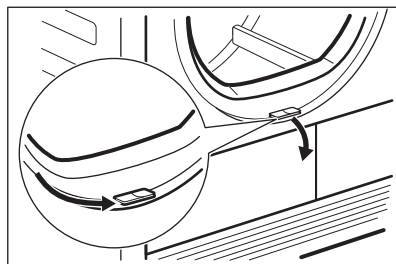


3. Turn the blockage to unlock the heat exchanger cover.

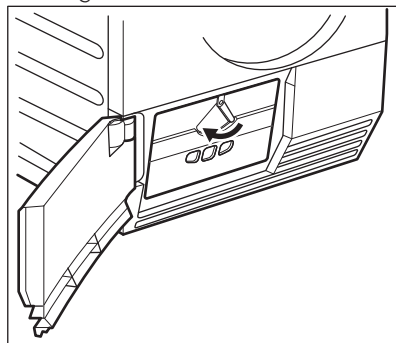


4. Lower the heat exchanger cover.

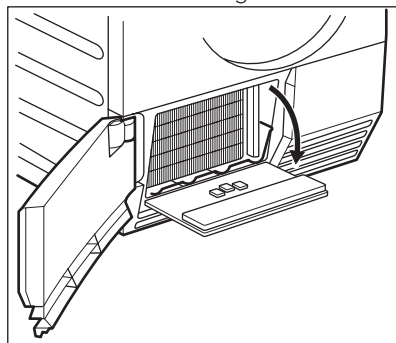

5. If necessary clean the small water filter from the bottom of the compartment. Put the small water filter back.

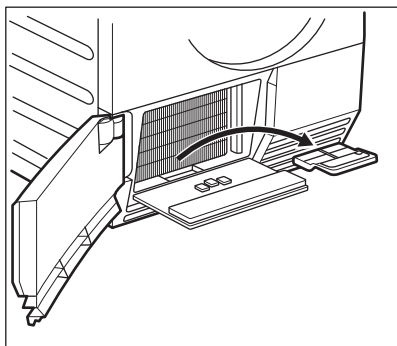

6. If necessary, remove the fluff from the heat exchanger and its compartment. You can use wet cloth and/or a vacuum cleaner with the brush.

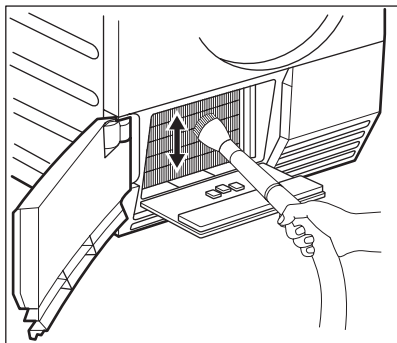

7. Close the heat exchanger cover.
8. Lock the blockage until it snaps.

9. Put the filter back.

11.4 Cleaning the drum



WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

11.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

11.6 Cleaning the airflow slots

Use a vacuum cleaner to remove the fluff from the airflow slots.

12. TROUBLESHOOTING

Problem ¹⁾	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not pushed.	Push the Start/Pause button.
	The appliance is in the standby mode.	Push the On/Off button.
Unsatisfactory drying result.	Incorrect programme selection.	Do the selection of the applicable programme. ²⁾
	The filter is clogged.	Clean the filter. ³⁾
	The Dry Plus option was in minimum level. ⁴⁾	Change the Dry Plus option to the moderate or maximum level. ⁴⁾
	Too high volume of the load.	Obey the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Incorrect remaining laundry moisture degree.	Adjust remaining laundry moisture degree. ⁵⁾
The loading door does not closed	The heat exchanger is clogged.	Clean the heat exchanger. ³⁾
	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.
Err (Error) on the display.	You try to change the programme or the option after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The option you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.

Problem 1)	Possible cause	Remedy
Abnormally elapsing time on the display.	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container, push the Start/Pause button. ³⁾
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry 1 item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of time programme or higher drying level (e.g. Extra Dry)
Drying cycle too long ⁶⁾	The filter is clogged.	Clean the filter.
	Too high volume of the load.	Obey the maximum load volume.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Very high room temperature - this is not the appliance malfunction.	If possible, lower the room temperature.

¹⁾ If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

²⁾ Follow the programme description — see PROGRAMME TABLE

³⁾ See chapter CARE AND CLEANING

⁴⁾ Only dryers with the Dry Plus option

⁵⁾ See HINTS AND TIPS chapter

⁶⁾ Note: After maximum 5 hours the drying cycle ends automatically.

13. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximal 640 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	9 kg
Voltage	230-240 V
Frequency	50 Hz

Necessary fuse	13 A
Total power	900 W
Energy efficiency class	A++
Energy consumption ¹⁾	2,28 kWh
Annual energy consumption ²⁾	259 kWh
Left—on mode power absorption	0,50 W
Off mode power absorption	0,50 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4

¹⁾ With reference to EN 61121. 9kg of cotton centrifuged at 1000 rpm.

²⁾ Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).

14. INSTALLATION

14.1 Unpacking




CAUTION!

Before use all parts of the transport packaging must be removed.


To remove the polystyrene blockages:

1. Open the door.
2. Pull plastic hose with the polystyrene blockages out from the drum.

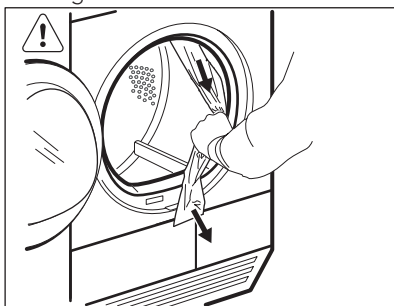


14.2 Feet regulation

It is possible to adjust the height of the tumble dryer. To do that adjust the feet.

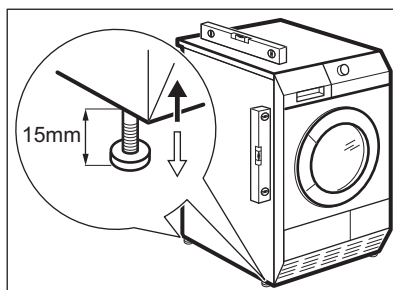



14.3 Installation under a counter

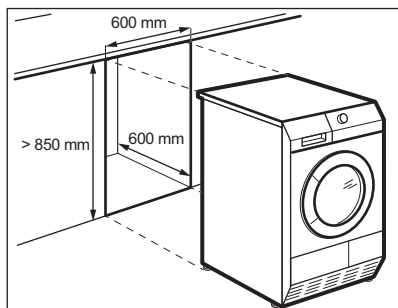The appliance can be installed as freestanding or below the kitchen counter with correct space (see picture).



15. ENVIRONMENTAL CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



136931100-A-112014