


BFE320SS/BFE350SS FRIDGE FREEZER

Instruction manual

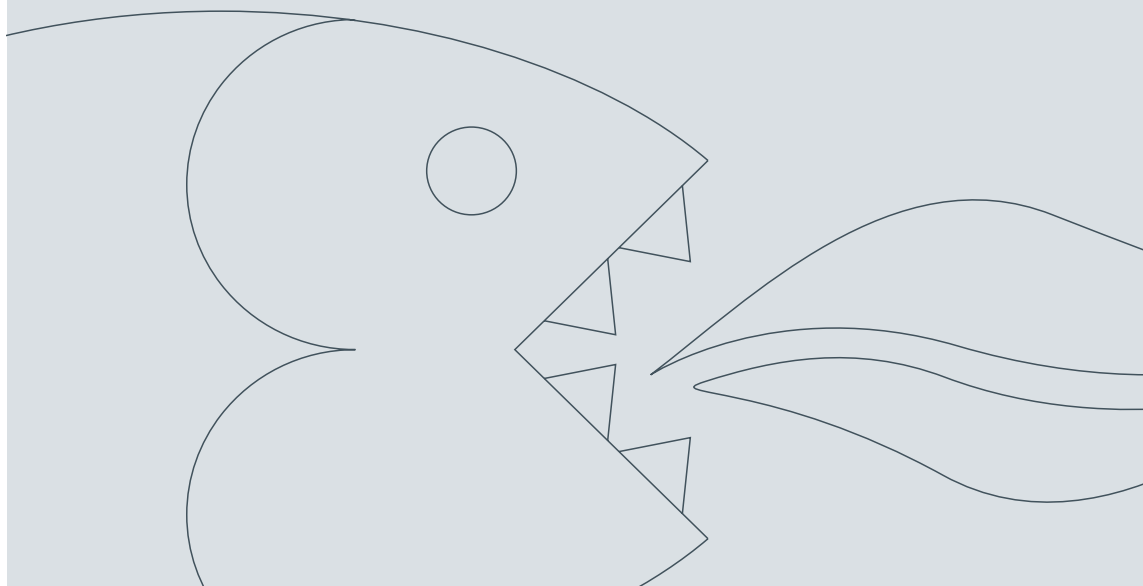



Baumatic®

User Manual for your
BFE320SS/BFE350SS
FRIDGE FREEZER




Baumatic®

 **NOTE:** This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference.

Contents

Environmental note	3
Important safety information.....	4
Specifications of your freezer	6
Description of the appliance	7
Using your Baumatic fridge freezer.....	9
Arranging and storing food in the refrigerator	12
The freezer compartment.....	13
Cleaning and maintenance	16
Installation.....	18
Troubleshooting	22
Baumatic Ltd. - Conditions of guarantee	24


Environmental note

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference. for you or any person not familiar with the operation of the appliance.

Conformity to W.E.E.E. Directive

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Important safety information



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.



IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.

Use of the appliance



- Your appliance is only designed to be used in the home. It is suitable for freezing and storing frozen food. If it is used for any other purpose or it is not used correctly, then Baumatic Ltd. Will accept no liability for any damage that may be caused.
- Altering the specification of the appliance must not be attempted for reasons of safety.

Before using your appliance

- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your retailer.

Refrigerant

- Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:
- During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
- If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is



situated in should be thoroughly ventilated.

- Do not place any objects on top of the appliance, as this may damage the table top.

Child safety



- Packaging material should be kept away from children.
- Children should not be allowed to touch the controls or play with the appliance.

General safety



- Do not pull on the power supply cable to remove the plug from your mains supply socket.
- Do not pull out or insert the plug with wet hands.
- Do not attempt to use your appliance outdoors or any place where it is likely to come into contact with the elements.
- Before cleaning the appliance or performing maintenance work, ensure that the appliance has been disconnected from your mains supply.
- Never allow the back coils of the appliance to come into contact with the wall surface.
- Always ensure that the location where you are installing your appliance is free of stored items such as papers and other flammable materials.
- Never block the ventilation openings of the appliance, either on the inside or its exterior.
- It is vital to keep your appliance well ventilated, so that there is proper air flow between the bottom of the unit and the plinth/kick plate which it is sitting on.
- Do not place electrical devices inside of the appliance.

169890

Service



You should not attempt to repair the appliance yourself, as this could cause injury or a more serious malfunction. If you require a service call then please contact the Baumatic Service Department.

Specifications of your freezer

Congratulations on purchasing a Baumatic fridge freezer

- Automatic defrost (fridge section only)
- Adjustable thermostat
- Electronic control
- Bacteria safe system
- 2 Egg racks
- Butter compartment
- 4 General racks
- 4 Safety glass shelves
- 2 Salad crispers
- 3 Freezer drawers
- Fast freeze function
- Reversible door
- Adjustable feet
- Stainless steel front and sides

Dimensions of appliance:

BFE350SS mm (H x W x D): 2000 x 600 x 640

BFE320SS mm (H x W x D): 1800x 600 x 640

Energy efficiency class


Energy class: A

* Please refer to the installation instructions for more specific information on the size of aperture that you will require.

IMPORTANT: When you install your appliance it is important to bear in mind its climatic rating.

- In order to find out the climatic rating of your appliance, you should check the rating plate.
- The rating plate is located on the front left edge of the inside of the fridge section.
- You will need to open the door of your appliance to be able to find it.
- The rating plate will indicate the ambient temperature range that your appliance will function correctly within.

Description of the appliance

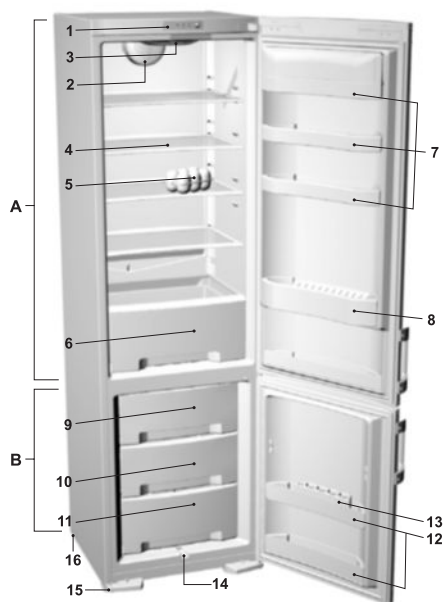

A = Refrigerator

B = Freezer

1. Control panel
2. Fan*
3. Interior illumination light
4. Shelf (adjustable height)
5. Foldable egg tray (closed 6 eggs, open 12 eggs)
6. Crisper tray
7. Door shelves
8. Bottle tray with holder
9. Freezing compartment
10. Storage compartment
11. Storage compartment
12. Door tray
13. Ice tray
14. Defrost water drainage groove
15. Adjustable feet
16. Wheels

* Certain models only

- Pull out guide drawers are extracted by lifting the rear end and pulling out at an angle under 45 degrees. You need to reinsert them the opposite way, to put a pull out guide drawer back into position.

169890

Description of the product features

1) Shelves

- The shelves may be placed in any of the guide slots within the interior of the appliance. They are protected from sliding out.
- To remove a shelf: Take off all of the items that are stored on the shelf that you want to remove. Then lift the front of the shelf and carefully pull it out of the grooves.
- Certain models are equipped with a wire bottle rack, this is protected from being pulled out whilst bottles are stored in it.
- It can only be removed with no bottles in it, by lifting the front section and pulling it towards you.
- Place the bottle rack in the appliance, in such a way that it does not obstruct the closing of the door.

The maximum load of the rack is 9 bottles of 0.75 litres, or 13 kilograms of total mass.

2) Defrost water outlet

- The interior of the refrigerator is cooled by the cooling plate that is on the rear wall. Beneath this there is a channel and an outlet for the defrost water.
- It is important that this channel never becomes clogged (see Defrosting the refrigerator compartment for a detailed explanation of how to keep the channel clear).

3) Crisper drawers and cover

- The crisper drawer is in the bottom of your refrigerator and there is a cover that goes over it.
- The cover helps to prevent fruit and vegetables from drying out prematurely.

4) Upper door shelves

- The door liner holds various shelves, that are suitable for storing eggs, cheese, butter and yogurt. As well as smaller packages, tubes, cans etc.

5) Bottle shelf

- The lower shelf should be used for storing reasonably sized bottles.

IMPORTANT: NONE OF THE SHELVES THAT SIT IN THE DOOR SHOULD BE OVERLOADED, AS THIS WILL DRASTICALLY REDUCE THEIR WORKING LIFE.

6) Fan (certain models only)


- The fan is located under the ceiling or hidden behind the rear panel of the refrigerator. This ensures even distribution of temperature and reduces condensation on the storage racks.

Using your Baumatic fridge freezer

Before switching on

- Make sure that it has been installed by a suitably qualified person, as per the information contained in Baumatic's installation instructions.
- After delivery, wait for three hours before connecting the appliance to your mains supply. This will allow any refrigerant gasses that may have been disturbed during the transportation process, are allowed to settle.
- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid soap and water.
- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.
- There can be an odour when you first switch on the appliance. It will lessen as the appliance starts to cool.


During first use

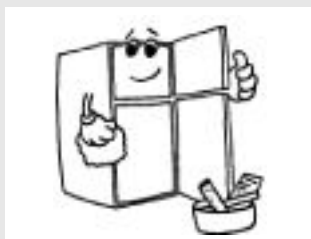

- When you first switch on the appliance, the compressor will run continuously for approximately 24 hours or until the refrigerator reaches a cool enough temperature.
- During this period of time, you should try not to open the door frequently or place a large amount of food within the appliance.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the appliance on the thermostat or connecting it to your mains supply.


Control panel

MODEL WITH BUTTONS

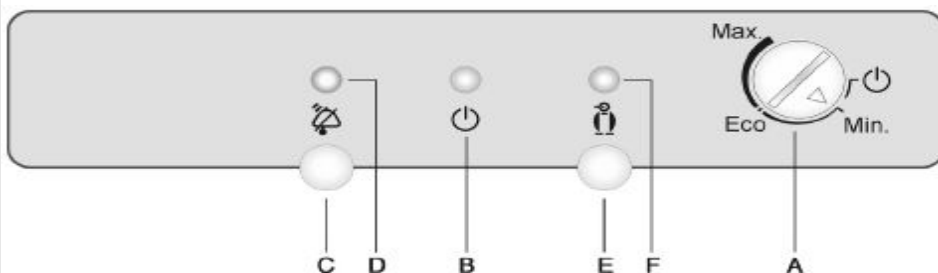

169890

MODEL WITHOUT BUTTONS

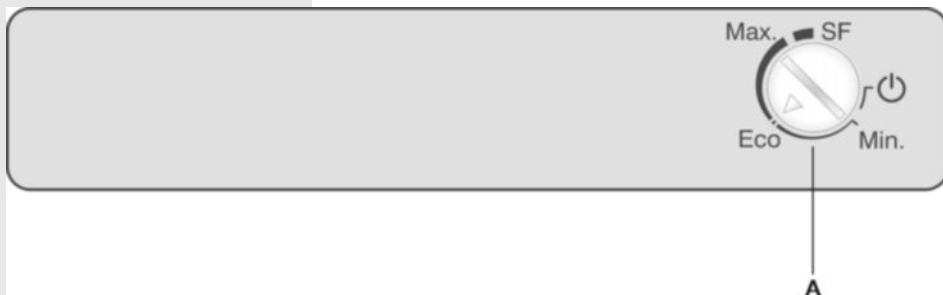

A Temperature selector and on/off button

B Green LED (illuminates when the appliance is switched on)*

C Freezer alarm off button*


D Freezer alarm LED*

E Fast Freeze button*


 
F Fast Freeze LED*

* Certain models only.


Turning on the appliance and setting the thermostat

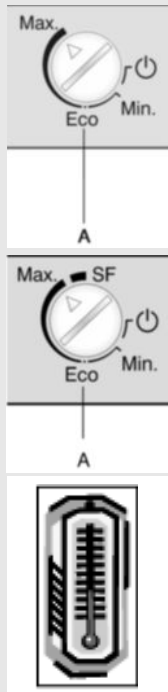

You switch on your appliance by connecting it to your mains supply and setting the thermostat. The thermostat is located on the right hand side of the control panel.

- The appliance is switched on by turning dial **A** towards the **Max** position.
- The green LED will come on when the dial moves past **Min**.
- The appliance is switched off when the arrow on the dial points to the ON/OFF symbol . However the appliance is still under mains power.
- The thermostat automatically regulates the temperature inside the freezer, depending on what position you have turned the thermostat control knob to.
- Position  means that the appliance is switched off and will not cool.
- Position **Min** will give you a higher temperature inside the freezer.
- Position **Max** will give you a lower temperature inside the freezer.
- Ideally the thermostat should be set to the **Eco** position.
- The freezer section can cool down to -18°C and lower.
- **IMPORTANT:** The ambient temperature of the room, the temperature of food and the amount of food that has been placed in the freezer and how often the door is opened, will all affect the temperature being maintained by the appliance.
- On the maximum setting (position **Max**), your freezer will work harder to maintain a lower temperature. There is no need to

Setting the fast freeze function

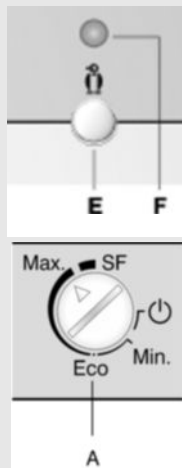

run your appliance on this setting for prolonged periods and you should return the thermostat knob to the **Eco** position.


Model with buttons

- To activate the fast freeze function, press button **E**.
- The orange LED light (**F**) will come on.
- To turn off the fast freeze function, again press button **E**.
- The orange LED light (**F**) will turn off.
- If the fast freeze function is not switched off, then it will do so automatically after approximately 50 hours.

Model with no buttons

- Turn the thermostat dial (**A**) to the **SF** position.
- The orange LED light (**F**) will come on.
- To turn off the fast freeze function, turn the thermostat dial (**A**) back to the **Eco** position.
- The orange LED light (**F**) will turn off.
- If the fast freeze function is not switched off, then it will do so automatically after approximately 50 hours.
- To repeat the fast freeze function if it switches off automatically, you will need to turn the dial back to the **Eco** position and then back to the **SF** position. The orange LED light (**F**) will come back on.

Freezer alarm

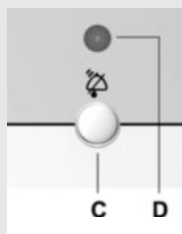

- The red signal light (**D**) indicates that the appliance has sensed an excessive rise in temperature.
- The light goes off automatically when the freezer cools to a temperature where there is no longer a danger to the food being stored in the appliance.
- When the appliance is first switched on, there is an inbuilt 24 hour delay to the freezer alarm switching on. This will prevent the alarm triggering unnecessarily whilst the appliance is getting down to working temperature.

Model with buttons

- These models also have an audible alarm, in the form of an intermittent beep, as well as the red light.
- The alarm can be cancelled by pressing button (**C**).
- The alarm will sound every 24 hours, if the temperature in the freezer is still not low enough to safely store food.

Arranging and storing food in the refrigerator

- Warm food or evaporating liquids should not be stored in your refrigerator, as this will increase the humidity inside of the appliance.
- All foods should be wrapped or covered, this is particularly important if the food has a strong flavour. You should use polythene bags or sheets, aluminium foil, wax paper. Liquids should be stored in covered containers or bottles.
- To maximise the space inside of your refrigerator, any excessive packaging on the food should be removed.
- Quickly perishable food should be stored at the back of the refrigerator, which is the coldest part of the appliance.
- No food items should be allowed to come into contact with the back wall of the refrigerator.
- Make sure that you arrange food in such a way that the door can close completely. Particular attention should be given to bottles that may protrude when placed on shelves inside the main section of the refrigerator.
- Some organic solutions, such as the oils in lemon/orange peel and acid in butter, can cause damage to the plastic parts contained inside of the refrigerator.
- Do not open the refrigerator door too often or leave the door open for long periods of time, as this will increase the temperature inside of the appliance.
- **Meat** should be wrapped in polythene bags and then placed on the glass shelf above the salad drawers. (**Meat should only be stored in this manner for one or two days at the most**).
- **Cold dishes/cooked food** should be covered and can be placed on any shelf.
- **Fruit and vegetables** should be cleaned thoroughly and placed in the salad drawers.
- **Cheese and butter** should be placed in airtight containers, or they can be wrapped in aluminium foil or polythene bags. As much air as possible should be removed from the bags.
- **Milk bottles** should have a cap on them and be stored on the bottle shelf that sits in the door.
- **Garlic, potatoes, onions and bananas should only be stored in a refrigerator IF they are stored in airtight containers.**

Food	Time
eggs, marinades, smoked meat	up to 10 days
cheese	up to 10 days
carrots, etc...	up to 8 days
butter	up to 7 days
cake, fruit, TV-dinner dishes, packages, of uncooked meat	up to 2 days
fish, raw minced meat, seafood	up to 1 day

The freezer compartment


The freezer compartment is suitable for storing and freezing food.

- The freezer compartment temperature must have already reached -18 degrees centigrade (or lower) before you attempt to store food that is already frozen or freezing fresh food.
- The freezer compartment is only able to freeze a certain quantity of food at one time. You should not attempt to freeze more than 9 kilograms of fresh food within a 24 hour period.
- Warm food should be allowed to cool down before you attempt to freeze it. If you place warm food in the freezer compartment, then the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.
- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.
- Thawed foods must not be frozen for a second time.


Freezing fresh food



- To freeze the maximum quantity of fresh food specified above, you should activate the Fast Freeze function 24 hours prior to attempting freezing.
- For smaller quantities of fresh food, you should activate the Fast Freeze function approximately 6 hours prior to attempting freezing.*
- * For more information on the Fast Freeze function, please see the "Setting the Fast Freeze function".

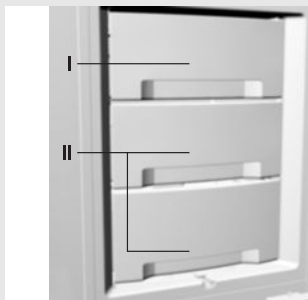

Tips on freezing

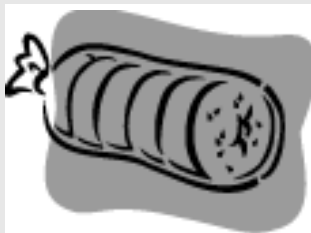

- After this period, place the fresh food in freezing compartment I.
- Do not let the already frozen packages touch the fresh ones.
- After 24 hours you may relocate the food to the storage compartments (II) and repeat the freezing procedure if required.
- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn't dry out or lose its flavour. It will also ensure that flavour does not transfer from other foods.
- The food should be placed on the freezer compartment's base. Do not allow fresh food to touch items that are already frozen.
- After 24 hours you should check that the fresh food is satisfactorily frozen. If it is then the fast freeze function should be switched off.

- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.
- Before sealing a suitable bag, you should compress the air out of it, as this will help the food to freeze more easily.
- Flat packages freeze more easily.
- If you are freezing liquid, then do not fill the container to the brim. Liquids will expand when being frozen.
- **Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as they could cause the bottle to burst during freezing.**

Storing commercially frozen food

Food	Period
Fruit, beef	from 10 to 12 months
Vegetables, veal, poultry	from 8 to 10 months
Venison	from 6 to 8 months
Pork	from 4 to 6 months
Chopped (minced) meat	4 months
Bread, pastry, TV-dinner, fat free fish	3 months
Intestines	2 months
Smoked sausages, fat fish	1 month

- The storage time and recommended temperature for storing commercially frozen foods, are indicated on the packaging.
- Always follow the manufacturer's instructions for storage and use of frozen food.
- When shopping, be careful to choose food which is adequately packed and is provided with complete storage instructions. It should have been stored in a freezer where the temperature does not rise above -18°C.
- Do not buy packages of food that are covered with frost. This could indicate that the package has thawed at least once before.
- Take care that your frozen food packages do not start to thaw before you place them in your freezer. This will shorten the length of time that you can safely store the food for.

Defrosting frozen food

- Partially thawed or defrosted foods should be used as soon as possible.
- Cold air preserves the food but it does not destroy the micro organisms which rapidly activate themselves after defrosting and make foods perishable.
- Partial defrosting reduces the nutritional value of food, especially fruits, vegetables and readymade meals.

Making ice cubes



- Remove the cap from the ice tray and fill it to the indicating mark with cold water or some other liquid, suitable for freezing.
- Close it and place it in the door shelf. The ice tray can produce 8 cubes.
- The period required for ice to form is 2-6 hours. It is recommended to make a quantity of ice, prior to the time that you require it.
- Ice cubes are discharged from the tray by turning the tray upside down and placing it under cold running water.
- Shake the tray, open the cover and pour the ice out.

169890

Cleaning and maintenance



WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO CLEAN IT.




- Do not clean the appliance by pouring water onto it or spraying water over it.



- The refrigerator compartment should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.



- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.

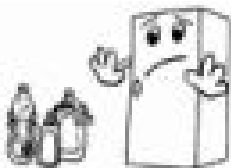

- Do not use abrasive products, detergents or soaps.
- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.


169890

Defrosting the refrigerator compartment



- Defrosting occurs automatically in the refrigerator section during operation. The defrost water is collected by the evaporating tray and evaporates automatically.
- The evaporating tray and defrost water drain hole should be cleaned periodically with the defrost drain plug. This will prevent water from collecting in the bottom of the refrigerator, instead of flowing down the defrost drainage channel and drain hole.
- You can also pour a small amount of water down the drain hole to clean inside of it.
- You should be careful to make sure that food packages do not touch the rear wall of the appliance, as this can interrupt the automatic defrosting process and deflect water into the base of your refrigerator.
- If excessive ice deposits form on the back wall of the refrigerator (larger than 3-5 mm), then you should switch off the appliance using the thermostat dial. You should leave the appliance off until the ice deposits have melted.

Defrosting the freezer compartment

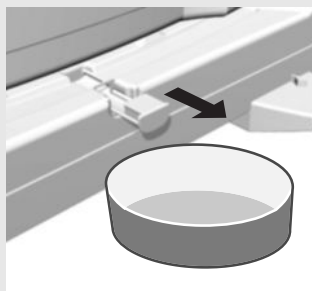

- You should defrost the freezer compartment, when the frost layer in the freezer reaches a thickness of around 3 – 5 mm.
- 24 hours prior to defrosting, you should turn on the fast freeze function by pressing button **E**. This will continuously freeze the food inside the freezer, helping to preserve it during the defrost process.
- After this period of time, empty the freezer of all food.
- Switch the freezer section off by using the ON/OFF button for the freezer section (**B**).
- To drain the defrost water, you should pull the funnel shaped groove at the bottom of the appliance out. Then place a convenient vessel underneath the groove to collect the defrost water.
- Never use powered appliances, such as hair dryers, to aid the defrost process.
- Avoid using any defrosting sprays, as they may cause damage to plastic parts and may be hazardous to your health.
- Clean the interior of the appliance and thoroughly wipe it dry. If you do not do this, ice may immediately reform as soon as the appliance is switched back on.
- Turn the freezer section back on by pressing the ON/OFF button for the freezer section (**B**). You should run the fast freeze function by pressing button (**E**) for 24 hours after the appliance has been switched back on.

169890

Replacing the light bulb



WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO REPLACE THE LIGHT BULB.


- Using a screwdriver remove the cover.
- The bulb that you should use is an E14 max, which is the same as the bulb originally fitted by the factory.
- Please dispose of the bulb correctly.
- The light bulb is not covered by Baumatic's guarantee.
- Replace the light cover and after waiting five minutes, reconnect your plug to your mains supply.

Installation

! IMPORTANT: Before installation and usage, read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the refrigerator.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

Electrical connection

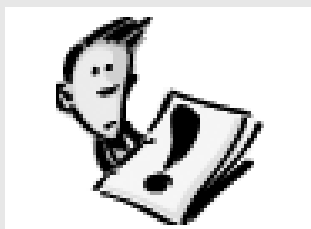

YOUR REFRIGERATOR IS INTENDED FOR FITTED AND PERMANENT INSTALLATION.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

- Your refrigerator comes supplied with a 13 amp plug fitted. If in future you need to change the fuse in this plug, then a 13 amp ASTA approved (BS 1362) fuse **must** be used.
- The wiring in the mains lead is coloured as follows:

Brown	Live
Blue	Neutral
Green and yellow	Earth
- As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

The **brown wire** must be connected to the terminal marked "L" (live), or coloured **red**.

The **blue wire** must be connected to the terminal marked "N" (neutral), or coloured **black**.

The **green and yellow wire** must be connected to the terminal marked "E" (earth), or by the earth symbol, or coloured **green and yellow**.

Positioning


- When the connection is completed, no stray strands or cut wire should be present. The cord clamp must be secured over the outer sheath.
- It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 degrees centigrade
N	+16 to +32 degrees centigrade
ST	+10 to +38 degrees centigrade
T	+18 to +43 degrees centigrade

- Positioning the appliance requires two persons in order to avoid injuries or damage to the appliance.
- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler).
- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.
- Place the appliance flatly and firmly on a solid base. The appliance is fitted with adjustable feet on the front side, used to level the appliance.
- The rear side of the appliance is fitted with wheels which facilitate the positioning of the appliance into its final location.
- Anything positioned above the appliance must be at least 5 cm away to allow sufficient cooling of the condenser. You must allow a 15 mm gap to the rear of the appliance.
- Avoid exposing the appliance to direct sunlight or heat sources. If this is not feasible, then you should install an insulation plate between the appliance and the adjacent heat source.
- The bottom front corners of your appliance are fitted with handles to facilitate moving. The appliance may stand independently or adjacent to a cupboard or wall.
- Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or personal injury. Also leave ample space for extracting shelves (see diagram on the next page).

169890

Reversing the door of your appliance

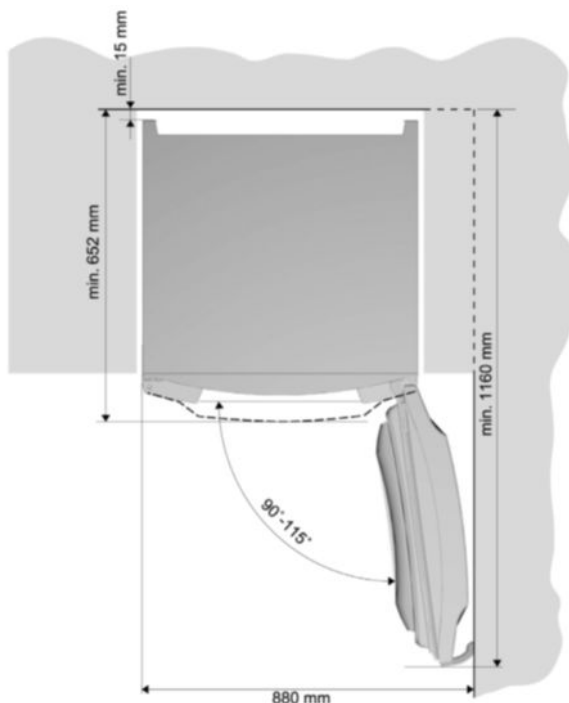

Caution! After unscrewing any of the fixing hinges, hold the door to prevent it from falling and causing damage.

Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.

Required tools; socket spanner nr. 8, screwdriver, torx 25.

- Remove the upper hinge cover from both sides of the appliance.
- **WHILST SUPPORTING THE DOOR**, unscrew upper hinge screws and remove the upper door from the middle hinge.
- On the bottom side of the upper door unscrew the swing stopper screws and remove the stopper (A). Fix the attached stopper with its bearing on the opposite side of the door.
- Unscrew the forced door closure system (B) and fix it to the opposite side of the door (certain models only).
- Unscrew the middle hinge screws and remove the door from the bottom hinge.
- Unscrew the leg holder fixing screws.
- Tilt the appliance backward at a maximum angle of 35°. Unscrew the leg support screws (C) - left and right, and remove the leg support cover (D). Then place it on the opposite side.



- Unscrew, remove and then replace the position of the end switch (E) and decorative peg (F) (for models with forced door closing system).
- Unscrew the three screws fixing the bottom hinge and then fix the bottom hinge on the opposite side.
- To fit the door on the opposite side of the freezer proceed with the above procedure in reverse.
- Repeat the procedure 3 and 4 on the bottom door. In case there is no bottom door limit peg, transfer the bearing (G) and washer to the opposite side of the door.
- To fit the doors on the opposite side of the fridge freezer proceed with the above procedure in reverse.

Troubleshooting

⚠ IMPORTANT: If your freezer appears not to be operating properly, before contacting the Baumatic Service Department, please refer to the checklist below.

Problem	What to do
MY FRIDGE FREEZER DOES NOT APPEAR TO BE WORKING/THERE IS NO POWER TO MY APPLIANCE.	Check that the plug is fully inserted into the power socket.
	Check that there is power to your mains supply (e.g. that there hasn't been a power cut or that the fuse hasn't blown).
	Check that the thermostat inside the appliance has not been turned to the off position.
	Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.
MY FRIDGE FREEZER APPEARS TO BE PERFORMING POORLY	Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
	The thermostat setting is too low; you should turn the thermostat up higher.
	Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
	Ensure that there is adequate ventilation for your appliance.
MY FRIDGE FREEZER WORKS CONTINUOUSLY WITHOUT INTERMITTENT STOPPAGES OR THE INTERMITTENT ALARM KEEPS SOUNDING.	The ambient temperature is too high.
	Frequent opening of the door/door is open for too long.
	Door not closed properly
	An excessive quantity of fresh food has been inserted at once.
	Check that there is sufficient ventilation around the appliance.
	The refrigerator sensor (A) has fresh food crammed around it. Free the sensor and allow air to circulate around it.
MY FREEZER IS NOISY	The refrigerant gas that circulates the pipework of the appliance may make a slight noise, even if the compressor is not running.
	If the noise worsens or the appliance gets louder than normal; check that it is leveled off correctly, that nothing is touching the rear of the fridge and that nothing placed inside the appliance is rattling.
ICE HAS FORMED ON THE INNER BACK WALL OF MY FRIDGE	Check that food has not been pushed too far back inside the appliance, so that it is in contact with the inner back wall.
	Frequent opening of the door/door is open for too long.
	Door not closed properly, check the door gasket is sealing correctly.
	Hot food has been placed inside the refrigerator.
THERE IS WATER IN THE BASE OF THE FRIDGE OR LEAKING OUT OF MY FRIDGE.	Follow the "Defrosting the refrigerator compartment" section on page 20-21.

Problem	What to do
THE DOOR IS DIFFICULT TO OPEN	<p>If you attempt to open the door immediately after you have just closed it, you may experience some resistance. This happens because a certain quantity of cold air escapes from the appliance through the open door and is replaced by warm ambient air.</p> <p>Cooling of such air creates negative pressure (a vacuum) and suction, which prevents easy opening of the door. This will normalise after several minutes and you should be able to open the door with ease again.</p>
THE GREEN LED IS FLASHING	Contact the Baumatic Service Department on telephone number 0118 933 6911.
AN ERROR CODE OF E1 APPEARS ON THE DIGITAL DISPLAY	Contact the Baumatic Service Department on telephone number 0118 933 6911.

Troubleshooting helpful hint



- ⚠ If the above hints do not seem to cure the difficulty that you are facing, then you should turn the thermostat dial to the off position and disconnect the power cord from your mains supply.
- ⚠ Wait ten minutes and then reconnect the appliance to your mains supply and turn the thermostat dial back to it's normal operating position (ECO).

If your appliance is still not working correctly, then please contact the Baumatic Service Department on telephone number 0118 933 6911.

Baumatic Ltd. - Conditions of guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

- * In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.
- * An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

This guarantee does not cover:

- X Sinks and taps
- X Failure to comply with the manufacturers instructions for use.
- X The replacement of cosmetic components of accessories
- X Accidental damage or wilful abuse.
- X Subsequent loss or damage owing to the failure of the appliance or electrical supply
- X Incorrect installation
- X Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts

X Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from it operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

SALES	SERVICE	SPARES	TECHNICAL / ADVICE
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	FAX: 0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 - 6266798

FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)

Baumatic Ltd

Make-up for your kitchen

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com

