



# OVENS

Installation - Use - Maintenance



## **DEAR CUSTOMER,**

We thank you and congratulate you on your choice.

This new carefully designed product, manufactured with the highest quality materials, has been carefully tested to satisfy all your cooking demands.

We would therefore request you to read and follow these easy instructions which will allow you to obtain excellent results right from the start.

## **THE MANUFACTURER**



## **IMPORTANT**

The oven's data plate is accessible even with the oven fully installed. The plate is visible simply by opening the door. Always quote the details from it to identify the appliance when ordering spare parts.

## CONTENTS

First use	pag. 4
Self-cleaning panel	4
Respect for the environment	5
Control panel	6

## INSTRUCTIONS FOR USE:

- conventional cooking	7
- fan cooking	7
- grill cooking	8
Thermostat	9
Cooking timer	9
Electronic timer	10
The control panel	11
Light replacement	22
Removing the oven door	22

 
## INSTALLATION INSTRUCTIONS

Flush fitting	23
Electrical connections	24

## THE FIRST TIME YOU USE THE OVEN

Clean the oven thoroughly with soapy water and rinse well. To remove the lateral frames from smooth-walled ovens, proceed as shown in the figure.

Operate the oven for about 30 minutes at maximum temperature to burn off all traces of grease which might otherwise create unpleasant smells when cooking.

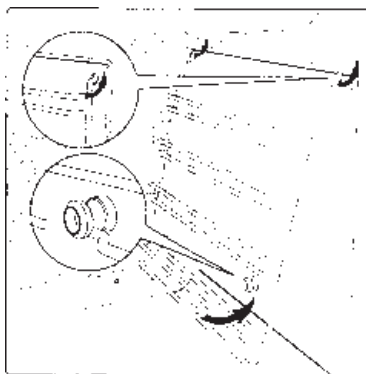

### **Important:**

As a safety precaution, before cleaning the oven, always disconnect the plug from the power socket or the power cable from the oven. Do not use acid or alkaline substances to clean the oven (lemon juice, vinegar, salt, tomatoes etc.). Do not use chlorine based products, acids or abrasive products to clean the painted surfaces of the oven.

 
## SELF-CLEANING CATALYTIC PANELS

Our smooth walled ovens can be fitted with self-cleaning panels to cover the inside walls.

These special panels are simply hooked on to the walls before the side frames are fitted. They are coated in a special, micro-porous catalytic enamel which oxidises and gradually vaporises splashes of grease and oil at cooking temperatures above 200° C.

If the oven is not clean after cooking fatty foods, operate the empty oven for 60 minutes (max.) at maximum temperature.

Never wash or clean self-cleaning panels with abrasive, acid, or alkaline products.

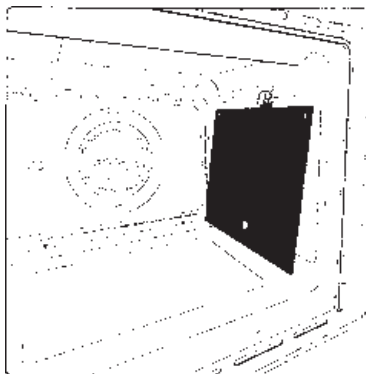


## RESPECT FOR THE ENVIRONMENT

The documentation provided with this oven has been printed on chlorine free bleached paper or recycled paper to show respect for the environment.

The packaging has also been designed to avoid environmental impact. Packaging material is ecological and can be re-used or recycled.

 By recycling the packaging, you will help save raw materials as well as reducing the bulk of domestic and industrial waste.

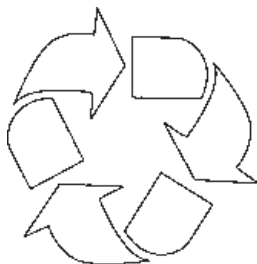

## CONTROL PANEL FUNCTIONS

### FUNCTION SYMBOLS ON THE SELECTOR



Oven light (stays on while oven is in use).



Bottom heating element.  
Thermostat setting from 50°C to MAX.



Top and bottom heating elements.  
Thermostat setting from 50°C to MAX.



Top and bottom heating elements with fan.  
Thermostat setting from 50°C to MAX.



Circular heating element with fan.  
Thermostat setting from 50°C to MAX.



Fan for defrosting.  
Thermostat setting at 0°C.



Bottom heating element with fan.  
Thermostat setting from 50°C to MAX.



Double top heating element with fan ( large area grill).  
Thermostat setting from 50°C to 200°C.



Double top heating element (large area grill).  
Thermostat setting from 50°C to 200°C.



Top heating element (small, low power grill).  
Thermostat setting from 50°C to 200°C.



Bottom heating element + Circular heating element with fan.  
Thermostat setting from 50°C to MAX.

## INSTRUCTIONS FOR USE

 
### CONVENTIONAL COOKING



Conventional cooking uses top and bottom heat to cook a single dish.

Place the food in the oven only once cooking temperature has been reached, i.e. when the heating indicator goes out.

If you want to increase top or bottom temperature towards the end of the cooking cycle, set the temperature control to the right position. It is advisable to open the oven door as little as possible during cooking.

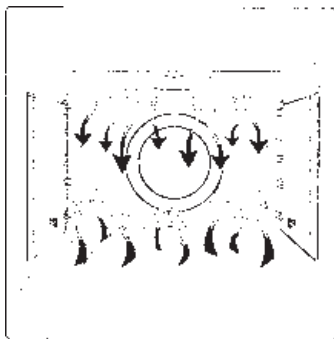

### FAN COOKING



 
For this type of cooking a fan positioned at the back allows the circulation of hot air inside the oven, creating uniform heat. In this way cooking is more rapid than conventional cooking. It is a suitable method for cooking dishes on more than one shelf, especially when the food is of different types (fish, meat etc.)

### DEFROSTING



By selecting one of the fan cooking functions and setting the thermostat to zero, the fan allows cold air to circulate inside the oven. In this way frozen food can be rapidly defrosted.

It is not essential to pre-heat the oven, but you are advised to do so when cooking pastries.

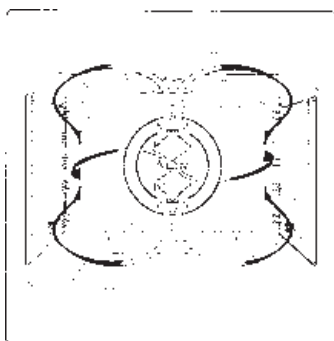

## GRILL COOKING

 


Use the grill to grill or brown foods. **KEEP THE DOOR CLOSED.**

Some ovens may be equipped with an electric motor, spit and skewers for turning on the spit.

Place the shelf with the food to be cooked in the 1st or 2nd position from the top.

Pre-heat the oven for 5 minutes. Turn the thermostat to a temperature between 50° and 200°.

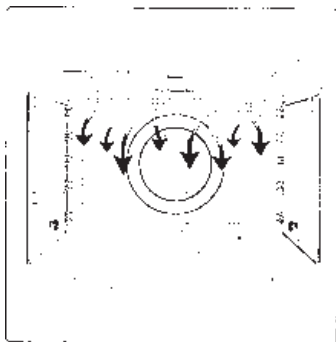

## COOLING FAN

The fan is positioned on the upper part of the oven and create a circle of cooling air on the inside of the furniture and through the door of the oven.

It is turned on when the temperature of the outer shell of the oven reaches 60°C.

By switching on the oven with the thermostat at 200°C the fan starts working after approx.10 min.

It is turned off when the temperature of the outer shell of the oven descends under 60°C.

By switching off the oven with the thermostat at 200°C the fan stops working after approx. 30 min.





### THERMOSTAT

Use the thermostat to set the cooking temperature you need. The thermostat can be adjusted from 50° to 250° C.



### 0-11 HEAT REGULATOR

### 0-6 SELECTOR

Use these to adjust the heat in the cast iron or glass-ceramic plates. Increase the setting from 0 to 6 or from 0 to 11 to raise the temperature.



### ALARM TIMER


You can set this timer to sound a buzzer after 0 to 60 minutes of cooking. First turn the knob fully clockwise, then turn it back to the desired alarm time.



### COOKING TIMER

First, turn the cooking selector to the required cooking function, and the thermostat to the desired cooking temperature.


Then, to set end of cooking time, turn the cooking timer to the right and to the desired time. First turn the knob fully clockwise, then turn it back to the desired alarm time. A buzzer sounds at the end of the timed cooking period, and the oven switches itself off.


To set only the start of cooking, turn the cooking timer to the left to the  symbol.

### PROGRAMMING END OF COOKING TIME WITH THE ANALOGUE TIMER

#### Setting the clock

Pull the knob out and turn it clockwise to set the clock.

First, turn the cooking selector to the required cooking function, and the thermostat to the desired cooking temperature. Then, to set end of cooking time, turn the cooking timer to the right and to the desired time. A buzzer sounds at the end of the timed cooking period, and the oven switches itself off. Push the timer knob in to silence the buzzer .



To set only the start of cooking, leave the knob in the manual  position.




## 6 KEY ELECTRONIC TIMER



### Setting the clock

Press the duration  key and the end of cooking  key simultaneously, then press the +/- keys to set the time.


### MANUAL OPERATION

To start cooking without setting *end of cooking time*, press the manual key .



### SETTING ONLY THE DURATION OF COOKING IN SEMI-AUTOMATIC MODE

To set the *duration of cooking*, press the duration key and press the +/- keys to set the duration of cooking. A buzzer sounds when the cooking period finishes, and the oven switches itself off. Turn the thermostat and selector knobs back to 0 position and press the manual key.

### SETTING ONLY THE END OF COOKING TIME IN SEMI-AUTOMATIC MODE

To set the *end of cooking time*, press the end of cooking key  and press the +/- keys to set the time at which you want the oven to switch off. A buzzer sounds when the clock reaches the set time, and the oven switches itself off. Turn the thermostat and selector knobs back to 0 position and press the manual key.

### FULLY AUTOMATIC OPERATION

To set the *end of cooking time*, press the duration key  and press the +/- keys to set the duration of cooking. Press the end of cooking key  and press the +/- keys to set the time at which you want the oven to switch off.

When you finish setting these times, the AUTO symbol flashes and the buzzer sounds. Press any key to silence it.

### ALARM TIMER

Press the alarm timer key and press the +/- keys to set the required duration of cooking. The *buzzer* sounds when the cooking time ends. Press any key to silence it.

### PROGRAMMING ERRORS

You cannot program in a cooking period which starts earlier than the time displayed on the clock. If you try to do so, the buzzer sounds and the AUTO symbol flashes. Simply change the duration or cooking time to correct the error.

### CANCELLING A COOKING PROGRAMME

To cancel a cooking programme, simply press the manual key.

## THE CONTROL PANEL

 
The panel shown here is purely indicative and may not be identical to the panel on the oven you have purchased.

Depending on the model of oven you have purchased, the *cooking functions* and *temperature functions* may be controlled by knobs instead of keys. The functions themselves are the same for keyboard and knob control ovens.


### Temperature display

### Time display

### Cooking functions

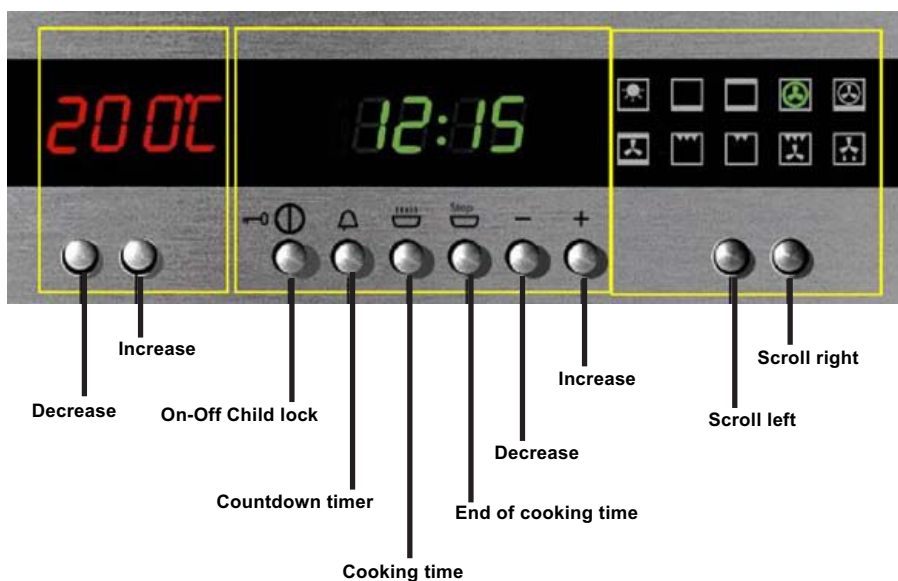

### Functions on knob control versions

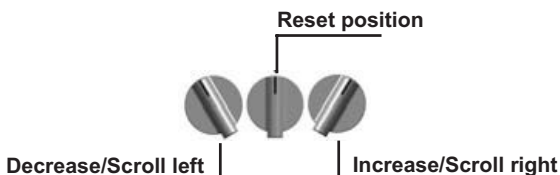 

## THE FIRST TIME YOU USE THE OVEN

 
Three zeroes flash on the display the first time you connect the oven to the mains electricity supply, and every time power returns after a power failure. This warns you that you must set the time on the clock before you can select any cooking function.



**You must set the time on the clock before you can use the oven.**

### • Setting the clock


Press the two keys shown below simultaneously to enter clock mode.

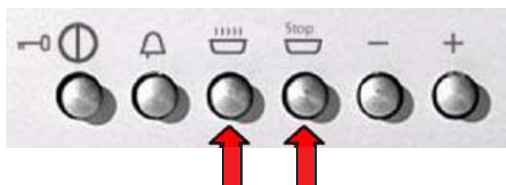

The two dots separating the hours and minutes flash to show you are in clock mode.



 Press the + or - keys

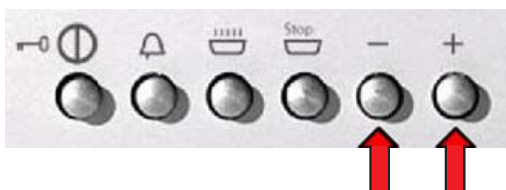

to increase or decrease the time.

After a few seconds the controller sets the time currently displayed and the two dots stop flashing.

Use one of the *cooking functions* to burn off any manufacturing residues from the heating elements and oven walls before actually using the oven to cook food.



**Important! If you change the time setting, you reset the timer and cancel all cooking settings.**

 
## · Cooking functions

For each cooking function, your new oven's electronic controller suggests a default cooking temperature. This is based on our own experience in obtaining the best results. You can nevertheless change the default value to suit your own requirements.

**Oven light**



**Griddle**  
150°C

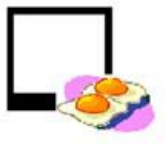

**Fixed**  
200°C



**Fan**  
180°C



**Pizza**  
230°C



**Fixed & fan**  
60°C



**Double grill**  
250°C



**Single grill**  
250°C



**Grill & fan**  
210°C




**Defrost**  
180°C




The food types shown are purely indicative of the sort of meal you can prepare with that function. To discover the tremendous versatility of this oven, feel free to experiment with all the functions on the basis of your own cooking experience.

## • Cooking

 You can start cooking in just a few simple moves.

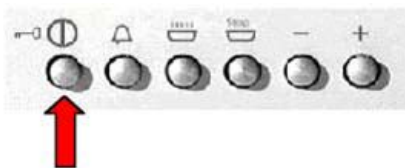

Switch on the oven.

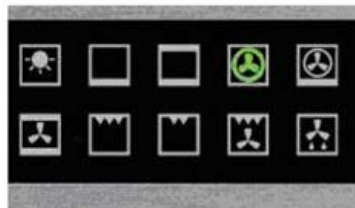 

Choose which cooking function you want to use.



Change the default temperature if you wish, or just wait 4 seconds to accept the default temperature.

After 4 seconds the electronic controller automatically switches on the oven. The degrees centigrade symbol flashes to show that the oven is warming up.

The *cooking time* symbol appears on the display to show that the oven is working.



The oven beeps and the degrees centigrade symbol stops flashing when the oven reaches the set temperature. You can now put in the food you want to cook.

**Important!** The oven switches itself off automatically if you do not select a *cooking function* within 8 seconds of switching the oven on. If this occurs, the *time display* reads “OFF” and the oven beeps to tell you that it has switched off.

## • Using the oven light

 
The oven is equipped with an intelligent light control to reduce electricity consumption. The light stays on while the oven is warming up and for 3 minutes after set temperature is reached, and then switches off.

Press any key to check on the food in the oven. The light comes on for another 3 minutes.

## • Child lock


Your new electronic oven has a *child lock* function to prevent young children from tampering with it or accidentally switching it on. You can activate the *child lock* at any time, even when the oven is switched off.

### Activating the *child lock*

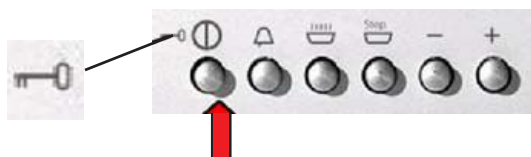

Press and hold the “On/Off” key for at least 3 seconds.

 The *time display* shows



The electronic controller is now disabled. All you can do with the controls is switch the oven off (if it is on) or use the *countdown timer*.




If you press any other key, a key symbol appears on the *time display* or *temperature display* to inform you that the *child lock* is active.




**Important!** You must deactivate the *child lock* before you can use the oven again.

## Deactivating the *child lock*

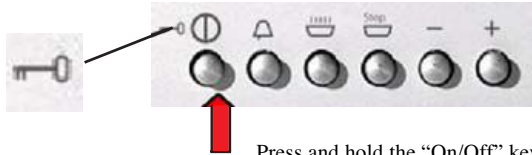 

Press and hold the “On/Off” key for at least 3 seconds.

 The *time display* shows



## · Using the *time display*

### 1. Using the countdown timer

The countdown timer works independently of all other timer functions, and can be used as a practical timer with buzzer even when the oven is switched off.



**Countdown timer key**



The time display appears and the dots separating the hours and minutes flash. Use the “+” and “-” keys to set the countdown period, then simply wait a few seconds for the controller to start the countdown.



The normal *time display* returns with the countdown symbol to show that the countdown is running.



At the end of the countdown time the oven beeps twice at an interval of two seconds and the countdown symbol flashes. Press any key to silence the buzzer. The oven beeps three times and the countdown symbol disappears.

## 2. Setting *cooking time*

Use the *cooking time* function to set the duration of cooking starting from the present time. You must select a cooking function before you can set *cooking time* (see the “*Cooking*” section).

Oven active: a cooking function has been selected.



Press this key to set *cooking time*.



The time display appears and the dots separating the hours and minutes flash. Use the “+” and “-” keys to set *cooking time*, then simply wait a few seconds for the controller to start timing the cooking period.



The normal *time display* returns with the auto-timer cooking symbol to show that the oven is working.

At the end of the *cooking time* the oven beeps twice at an interval of two seconds and the symbols flash. Then the *temperature display*, the *time display* and the heating elements switch off.

Press any key to silence the buzzer. The oven beeps three times and the symbols disappear.

**! If you select no other functions within 8 seconds from silencing the buzzer, the oven automatically switches off.**

### 3. Setting *end of cooking time*

Use the *end of cooking time* function to set the time at which you want cooking to finish. You must select a cooking function before you can set *end of cooking time* (see the “*Cooking*” section).

Oven active: a cooking function has been selected.



**Press this key to set *end of cooking time*.**

The time display appears and the dots separating the hours and minutes flash. Note that you must set a time different from the present time!



Use the “+” and “-” keys to set *end of cooking time*, then simply wait a few seconds for the controller to register it.



The normal *time display* returns with the auto-timer cooking symbol to show that the oven is working.

At the *end of cooking time* the oven beeps twice at an interval of two seconds and the symbols flash. Then the *temperature display*, the *time display* and the heating elements switch off.

Press any key to silence the buzzer. The oven beeps three times and the symbols disappear.



**If you select no other functions within 8 seconds from silencing the buzzer, the oven automatically switches off.**

#### 4. Setting cooking start and end times

You can combine the *cooking time* and *end of cooking time* functions to set the start and end times for cooking. In this way you can program your electronic oven to cook while you are out or to defrost foods ready for you to cook when you get back. A great help in the kitchen!



The order in which you set the two functions is not important.



**Example:** We want to start cooking a dish 30 minutes before we get home so that it will be ready for us when we do.

Place the dish in the oven and select the cooking function you want (*Grill + fan* shown by way of example only). Adjust the default temperature as required.



Set a cooking time of 30 minutes.

Set the *cooking time* (see section 2. Setting *cooking time*).



Before you set *end of cooking time*, note the present time.



When you set *end of cooking time*, the timer display present time plus *cooking time* by default.

Use the “+” key to set a time e.g. 10 minutes later. The timer registers this time after a few seconds. The display switches off and the oven enters stand-by mode. The present time is displayed.



At 12:25, the oven switches on in *Grill + fan* mode for 30 minutes, and switches off at 12.55 according to our time settings.



**Hint!** This is a good time to activate the *child lock* to prevent young children from tampering with or accidentally switching on the oven.



## REPLACING THE OVEN LIGHT

 
### IMPORTANT:

The oven light must have these precise features:

- a) it must be able to resist high temperatures (up to 300°C)
- b) power supply: see V/Hz indicated on data plate.
- c) power 25W.
- d) E 14 connection.

Before proceeding, disconnect the appliance from the main electricity supply.

- to prevent damage, place a tea cloth in the oven
- unscrew the glass cover of the light
- unscrew the old light bulb and replace it with the new one
- put back the glass cover and remove the tea cloth
- connect the appliance to the main electricity supply


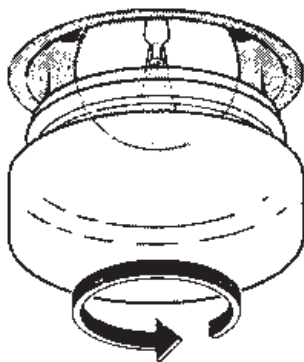


## REMOVING THE OVEN DOOR

The oven door can be removed quickly and easily. To do so, proceed as follows:

- Open the door fully.
- Lift the two levers shown in fig.
- Close the door as far as the first stop (caused by the raised levers).
- Lift the door upwards and outwards to remove it from its mountings.

  To replace fit the door, fit the hinges in their mountings and lower the two levers.

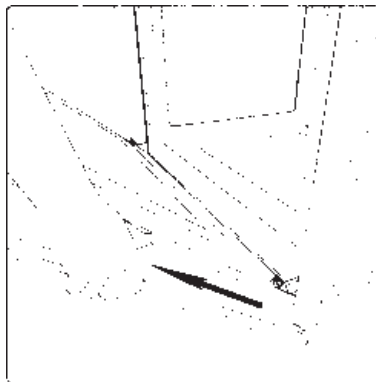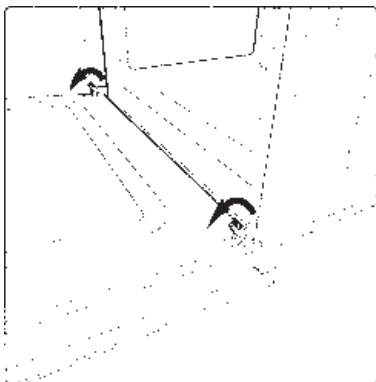


## INSTALLATION INSTRUCTIONS

### Flush fitting



The oven can be installed under a work top or in a cooking column. Figure shows the installation dimensions.

Make sure that surrounding materials are heat resistant. Align the oven centrally with respect to the side walls of the units surrounding it and fix it in place with the screws and Allen screws provided.

 **See the accompanying instructions for combining the oven with multi-functional gas or gas-electric cookers.**

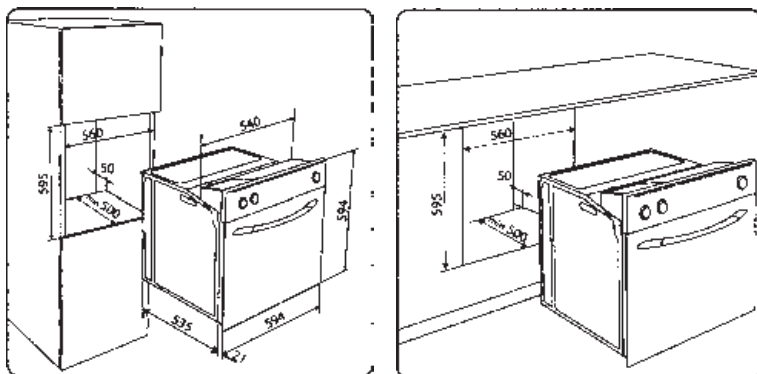

### **GAS OR ELECTRICAL CONNECTIONS**

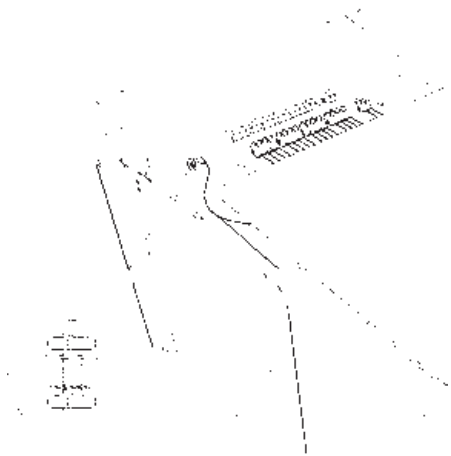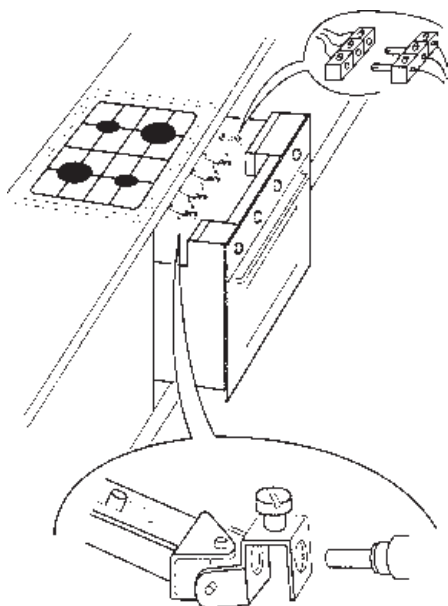  

## ELECTRICAL CONNECTIONS

 
Before connecting the oven to the mains power supply, make sure that:

- The supply voltage corresponds to the specifications on the data plate on the front of the oven.
- The mains supply has an efficient earth (ground) connection complying with all applicable laws and regulations. Correct earthing (grounding) is a legal requirement. If the appliance is not pre-fitted with a power cable and/or plug, use only suitable cables and plugs capable of handling the power specified on the appliance's data plate and capable of resisting heat. The power cable should never reach a temperature 50° C above ambient temperature at any point along its length. If the appliance is to be connected directly to mains terminals, fit a switch with minimum aperture of 3 mm between the contacts. make sure that the switch is of sufficient capacity for the power specified on the appliance's data plate, and compliant with applicable regulations. The switch must not break the yellow-green earth wire. The socket or switch must be easily reachable with the oven fully installed.


N.B. The manufacturer declines all responsibility for damage or injury if the above instructions and normal safety precautions are not respected.

### \* CABLE TYPES AND DIAMETERS

230V $\sim$  H05RRF 3 x 1,5 mm<sup>2</sup>

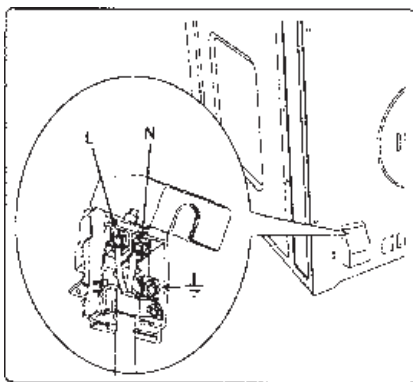

### \* H05RN-F

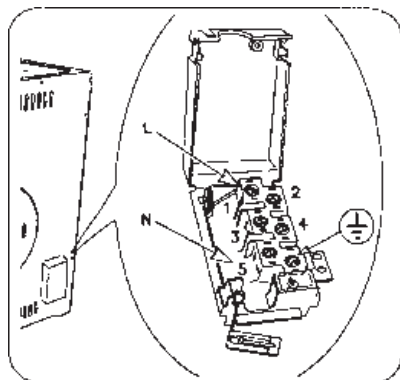 

$\sim$ 230V 	230V $\sim$	*3 x 4 mm <sup>2</sup>
$\sim$ 230V 3 	230V 3	*4 x 2,5 mm <sup>2</sup>
$\sim$ 400V 2N 	400V 2N $\sim$	*4 x 2,5 mm <sup>2</sup>
$\sim$ 400V 3N 	400V 3N $\sim$	*5 x 1,5 mm <sup>2</sup>




## PRESENTATION OF THE OVEN

 Dear Customer, the oven in your possession is controlled electronically in all its functions by an electronic circuit board which constantly controls the temperature. The commands are touch sensitive: this means they need only be touched lightly to activate them!

In addition, two large LCD displays give you all the information you need to operate it.

### VIEW OF THE FRONT CONTROL PANEL

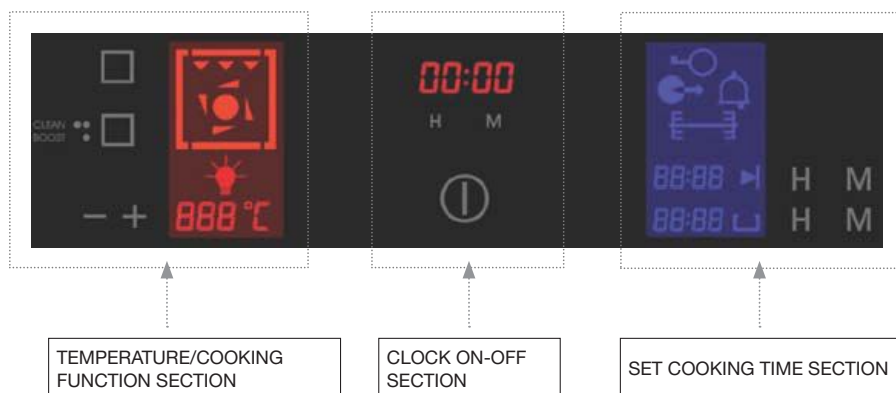


### IMPORTANT

Plugging in the oven will enable you to visualise the two displays without enabling the functions.


This means that the oven can be on display in public places while preventing activation of the heating elements.

To continue with the other functions keep the central ON/OFF button pressed for 5 seconds.

 
## DETAIL OF THE TEMPERATURE/FUNCTIONS SECTIONS

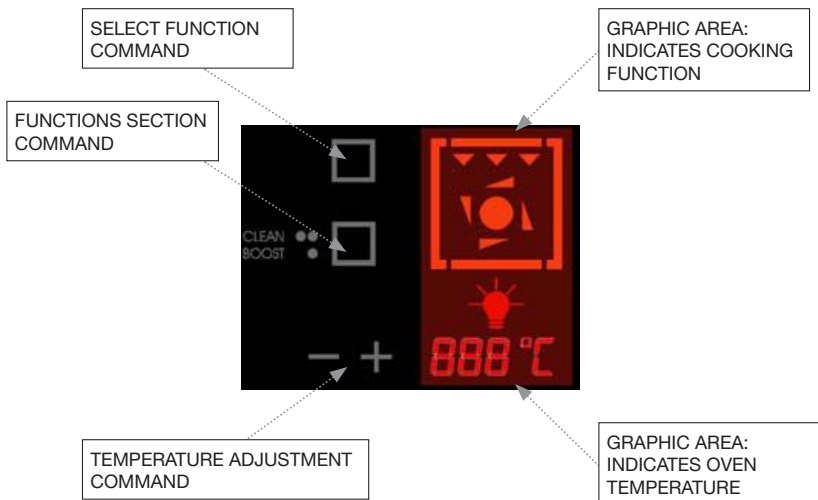

## DETAIL OF THE ON-OFF/CLOCK SECTION

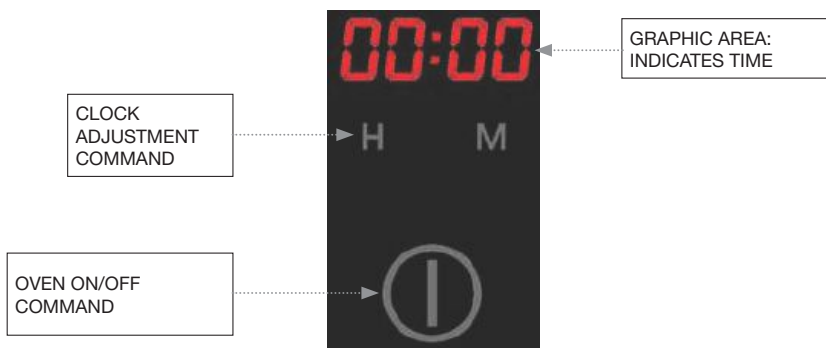 

## DETAIL OF THE SET COOKING TIME SECTION

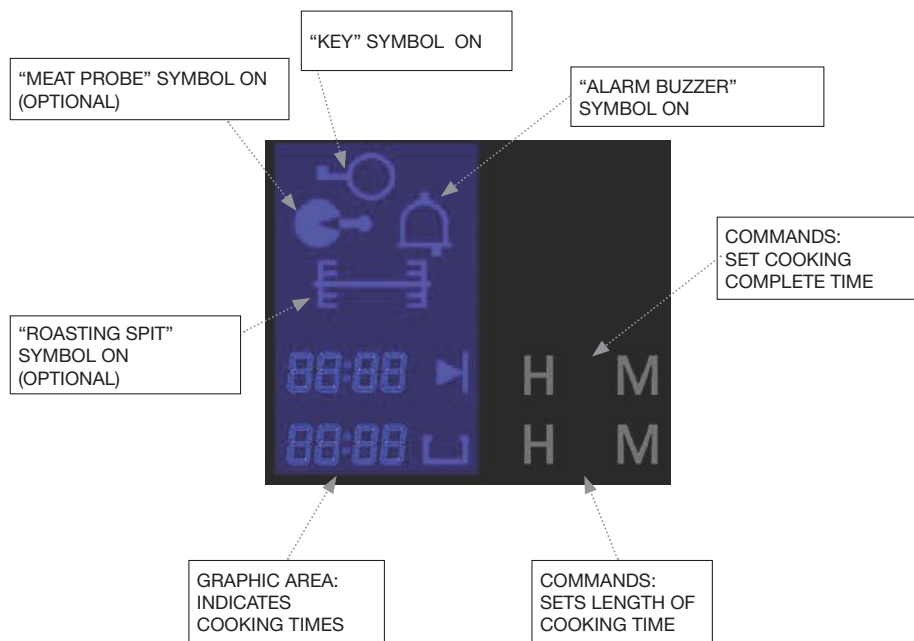 

























## THE FUNCTIONS OF THE OVEN
















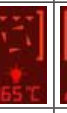



The oven has 12 functions which you'll see in the paragraphs below.


Each function has a set temperature established on the basis of cooking trials for recipes typically using such function and can easily be varied as required.

The table below shows the results of cooking trials carried out in our laboratories by a professional chef, but in any case these are merely recommended temperatures to start from when experimenting your own recipes and to then adapt to get the best results.

## INDICATIVE COOKING TIMES

 											
											
	1	2-3	2	2	1-3	2	2-3	2-3	4	2	2
	120'-150'	30'-50'	20'-40'	10'-40'	10'-20'	45'-60'	45'-60'	60'-70'	14'-18'	120'-150'	120'-160'

								
								
	2	2	2-3	2	2	2	3	2-3
	90'-120'	90'-120'	50'-60'	45'-60'	60'-70'	40'-50'	40'-50'	14'-18'

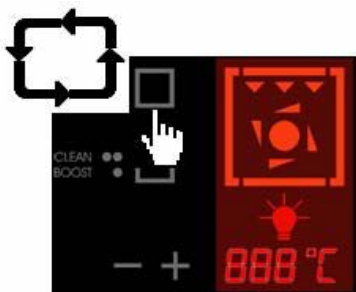

## SOME RECOMMENDATIONS DICTATED BY EXPERIENCE...

- Heat the oven to the desired temperature before cooking;
- Spitting is caused by too high a temperature, as well as dirtying the oven it alters the cooking;
- Do not use recipients which are small for the size of the foods to be cooked;
- Place the foods to be cooked in the centre of the oven, not resting on the floor or touching the glass door;

## TURNING ON FOR THE FIRST TIME/DISPLAY MODE

This section specifies how the oven reacts every time it is connected to the electricity supply and therefore both when turning on for the first time and when it is disconnected from the power supply or the latter fails for any reason.

The display mode needs to be deactivated to be able to use the oven normally.

The oven enters the display mode by showing two LCD's fully lit, with animated symbols to show the functions of the device.



The system clock is already active and set, to adjust it see the relevant paragraph. To exit the display mode press the ON/OFF button for at least 5 seconds



The oven then goes into standard mode for normal functioning.



**i** The display mode needs to be deactivated to be able to use the oven normally.

## ADJUSTING THE CLOCK

To synchronise the system clock with the current time proceed as follows:



ACTIVATE THE HOURS "H" AND MINUTES "M" COMMANDS SIMULTANEOUSLY



SET THE TIME USING THE "H" AND "M" COMMANDS

## JUST A FEW STEPS TO START COOKING...

The use of this oven is extremely practical and immediate thanks to the logic of the commands and the pre-set temperatures.

To cook without setting the cooking time just a few steps are required...



 
TURN ON THE OVEN

.....choose the cooking function depending on the dish being prepared by referring to the cooking times table...

**i** *Warning! If the oven is turned on by accident, it turns off after 8 seconds if no cooking function is selected.*

## CHOOSE THE DESIRED FUNCTION

Touch the box in the figure repeatedly until the function desired appears.

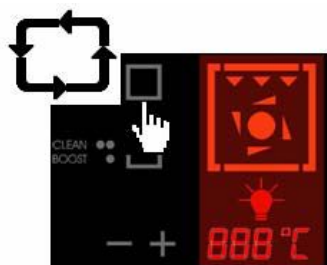

IF YOU THINK THE PRE-SET TEMPERATURE IS SUITABLE, THE OVEN WILL TURN ON IN A FEW SECONDS!!

- ① *You don't need to confirm the pre-set temperature or activate other commands, the oven will come on automatically a few seconds after the cooking function has been chosen*

## ADJUSTING THE TEMPERATURE

 
The temperature can be adjusted at any time using the “-” and “+” controls of the “cooking functions/temperature section”



THE TEMPERATURE SET DOES NOT NEED TO BE CONFIRMED BY OTHER COMMANDS!

## PRE-HEATING THE OVEN


For successful cooking professional chefs always recommend pre-heating the oven before putting the dish to be cooked inside.

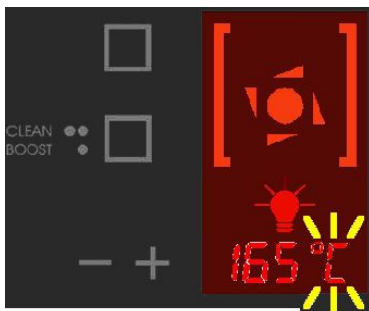

On reaching the cooking temperature the oven emits two beeps and the “°C” stops flashing.

## INSTANT TEMPERATURE READING

 The real temperature of the oven (with reference to the centre of the oven) can be read at any moment by simultaneously pressing the “-” and “+” controls of the “*cooking functions/temperature*” section.

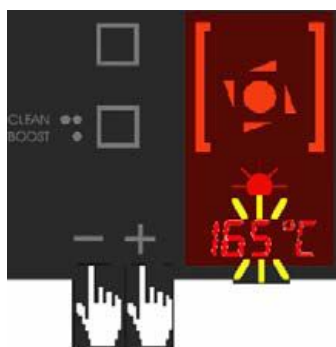

FOR A FEW SECONDS THE DISPLAY WILL VISUALISE THE TEMPERATURE REACHED BY THE OVEN AT THAT PRECISE MOMENT BY FLASHING IT ON THE DISPLAY.



## RESIDUAL HEAT

The term “Residual heat” is used to describe the heat which the oven has accumulated inside it while cooking foods.

This heat is gradually dispersed over time and may still be a culinary resource if managed properly: your oven indicates the internal temperature, after turning the oven off, until it drops to 50°C.

This way you can use it to heat up food, unfreeze foods at a low temperature, or to indicate the level of safety in the kitchen.

 



## SPECIAL FUNCTIONS

### “CLEAN” or “EASY CLEAN” FUNCTION

This function can only be activated when no other function of the oven has been activated. The correct functioning of the “easy clean” function is dependant on the use of self-cleaning side panels.

In this mode the special command assumes the “CLEAN” function

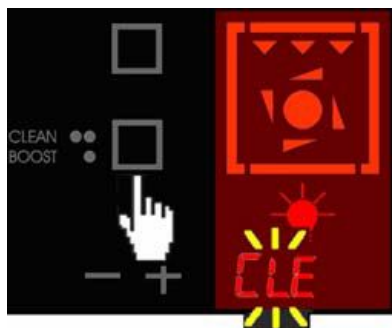

ACTIVATION  
LIGHTLY TOUCH THE KEY ON THE  
CONTROL PANEL  BY LIGHTLY  
TOUCHING THE KEY SHOWN IN THE  
FIGURE AND TRIGGERING THE “CLEAN”  
FUNCTION, THE OVEN REACHES THE  
TEMPERATURE OF 250°C AND STAYS AT  
THIS TEMPERATURE FOR 1 HOUR.


 Do not put dishes in the oven, do not use this special function for cooking!

Below are some general rules for normal cleaning of the oven:


- Clean the enamelled parts with soapy water and a soft cloth or with specific products but without using abrasive detergents;
- Clean the inside shortly after use since with time it becomes more difficult to clean;
- Avoid using chlorine-based products, caustic soda, muriatic acid, vinegar or any acid compound in general.

## "BOOST" FUNCTION

 The command assumes this function only after a cooking function has been activated and speeds up pre-heating of the oven.

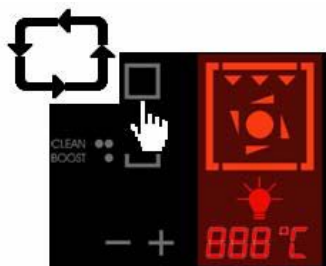


CHOOSE A COOKING FUNCTION...

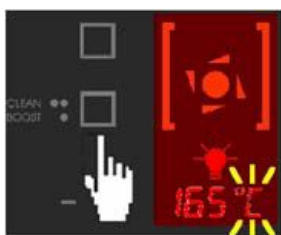 

ACTIVATE THE SPECIAL COMMAND  
"BOOST" BY TOUCHING THE BOX  
SHOWN IN THE FIGURE ONCE ONLY

 The display shows an animated symbol of an uphill stair to show that the command has been activated:

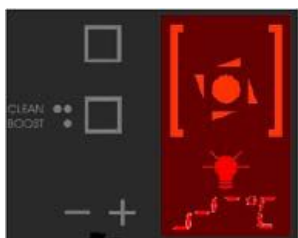

THE FUNCTION CAN BE DEACTIVATED  
AT ANY TIME BY CHOOSING ANOTHER  
OR BY TOUCHING THE "BOOST"  
COMMAND LIGHTLY ONCE AGAIN.

On reaching the temperature set the display will return to the normal display and emit two beeps.



### “LIGHT” FUNCTION WHEN THE OVEN IS OFF

The internal light of the oven can be activated even when the oven is off so as to perform cleaning operations.



ACT ON THE FUNCTION COMMAND  
WITHOUT TURNING ON THE OVEN



THIS WAY THE INTERNAL OVEN LIGHT  
WILL COME ON AND GO OFF WITHOUT  
THE OVEN TURNING ON!

## CONTROLLING THE OVEN LIGHT

 
The oven light stays on throughout the pre-heating phase and for 3 minutes after the temperature has been reached, afterwards it goes off in respect of the increasing attention paid to energy saving.

To turn on the oven light again, press any command *except on/off*, at the first touch the light will come on then it will assume its specific function.

## COOKING TO A PRE-SET TIME

The large blue LCD shows the commands for setting the following, fixed-time cooking modes:

- Cooking time;
- Setting the cooking complete time;
- Setting the start cooking and cooking complete times;
- Minute counter.

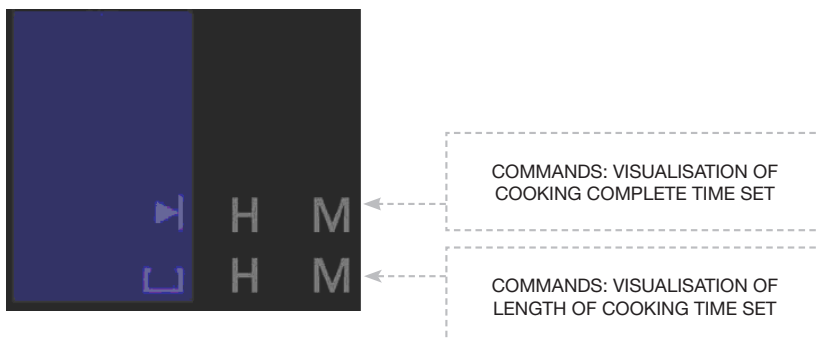


**i** All the timed cooking functions must be set after setting the clock to the right time!

## LENGTH OF COOKING TIME

 
This means a length of time expressed in hours and minutes which indicates the duration of cooking starting from now.

The length of cooking time can be set at any moment, even after cooking has already begun.


To set proceed as follows:

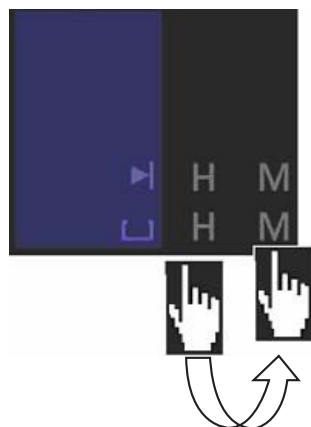

 ...BY USING THE "H" / "M" COMMANDS THE LENGTH OF COOKING TIME CAN BE REGULATED AND THE DISPLAY WILL SHOW AN ANIMATED STEAM SYMBOL

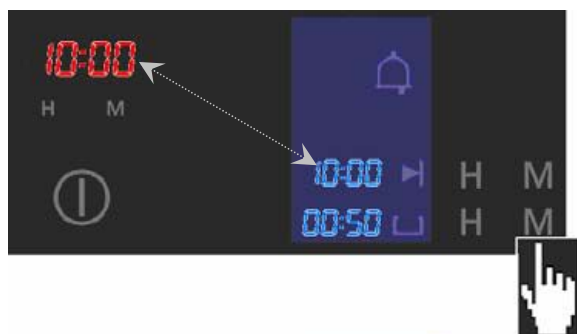


 ...WHILE SETTING THE LENGTH OF THE COOKING TIME THE DISPLAY WILL SHOW THE CURRENT TIME IN THE SECTION OF THE COOKING COMPLETE TIME TO SUGGEST SETTING OF DEFERRED COOKING IF NECESSARY ...

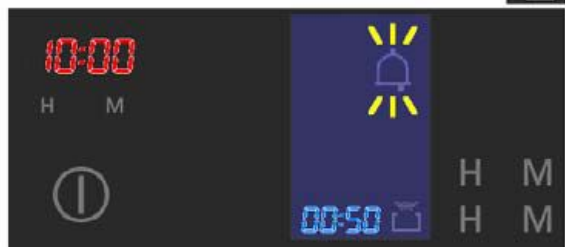


...AFTER A FEW SECONDS THE SYSTEM WILL REGISTER THE DATA AND ACTIVATE THE TIMED COOKING, SHOWING IT BY MEANS OF THE BELL SYMBOL AND AN ANIMATED STEAM SYMBOL IN THE LENGTH OF COOKING SECTION

 The display begins the countdown to zero, when it reaches it the functions/temperature display will go off, deactivating the heating elements, the cooking time display will be as shown below and an intermittent beeping sound will notify you of cooking complete:

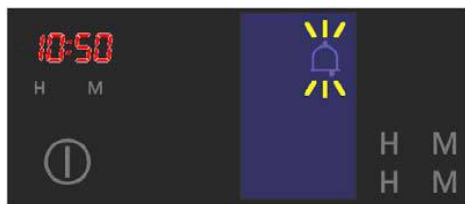


...PRESS ANY KEY TO STOP THE WARNING BELL, THE OVEN WILL TURN OFF AUTOMATICALLY

 **i** The oven is off now!

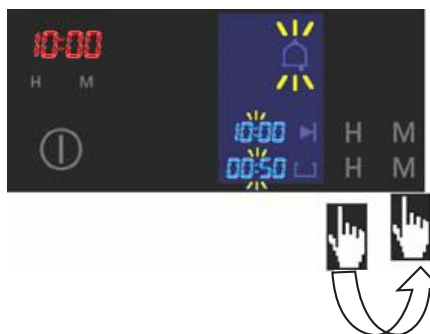

 ...TO CHANGE THE SETTINGS USE THE HOURS AND MINUTES COMMANDS "H" AND "M"...

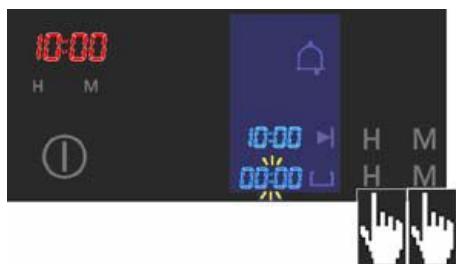


...TO ZERO THE SETTINGS USE BOTH COMMANDS SIMULTANEOUSLY


## SETTING THE TIME FOR COOKING COMPLETE

 This is the time at which cooking will stop starting from now.

The cooking complete time can be set at any moment, even after cooking has already begun.

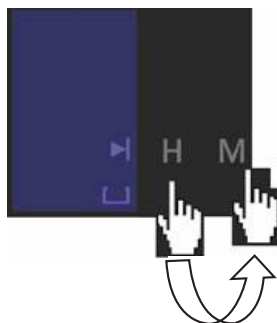

 
...USING THE COMMANDS "H" / "M"  
ACTIVATE THE ADJUSTMENT OF THE  
CLOCK STOPPING COOKING AND  
THE DISPLAY WILL VISUALISE OTHER  
SYMBOLS TO HIGHLIGHT IT...

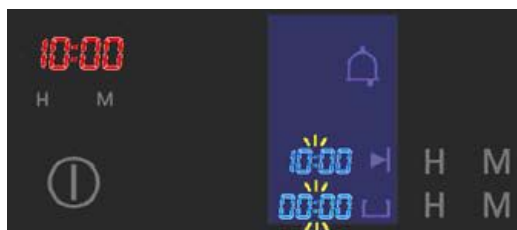

...THE CONTROL RETURNS  
TO THE CURRENT TIME FROM  
WHICH TO SET THE TIME FOR  
COOKING COMPLETE...




 ...SET THE TIME FOR COOKING  
COMPLETE USING THE "H" AND  
"M" COMMANDS

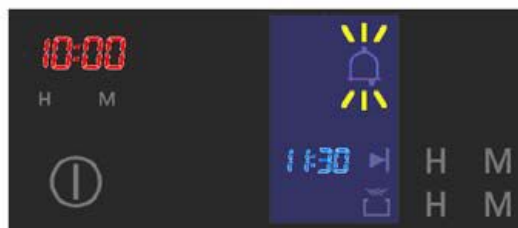

...AFTER A FEW SECONDS  
THE SYSTEM ACQUIRES THE  
DATA AND ACTIVATES THE  
TIMER CONTROLLED COOKING,  
SHOWING THIS BY MEANS OF  
THE BELL SYMBOL AND AN  
ANIMATED STEAM SYMBOL IN  
THE COOKING TIME SECTION...

 On reaching the cooking complete time the functions/temperature display will go off, deactivating the heating elements, the cooking time display will be as shown below and an intermittent beeping sound will notify you of cooking complete:

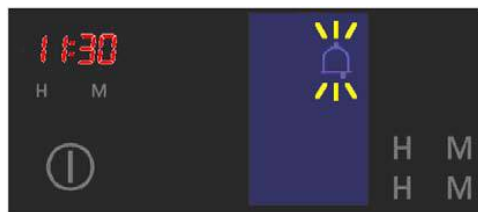


...LIGHTLY TOUCH ANY OF THE KEYS TO INTERRUPT THE ACOUSTIC SIGNAL, THE OVEN WILL TURN OFF AUTOMATICALLY.

❗ *Now the oven is off!*




...TO CHANGE THE SETTINGS USE THE "H" HOUR AND "M" MINUTES COMMANDS...

 ❗ **WARNING!** By setting a cooking complete time earlier than the current time the oven will begin to cook from now until the time set on the following day!!

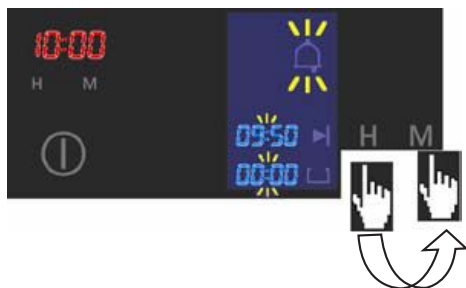

 ...IT IS NOW LATER THAN THE COOKING COMPLETE TIME SET SO THE ELECTRONIC CONTROL ACTIVATES COOKING UNTIL 9.50 OF THE FOLLOWING DAY!!

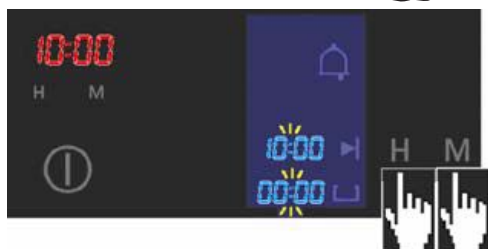

...TO ZERO THE SETTINGS USE THE H AND M KEYS SIMULTANEOUSLY



## SETTING THE TIME FOR STARTING AND STOPPING COOKING

This means the possibility of setting the start cooking time at a time other than the current time, setting the length of cooking time and the cooking complete time.

The paragraphs above remain valid as regards the settings since this requires a combination of setting the length of cooking time and cooking complete time.

By virtue of its nature this mode should not be used once cooking has started.

 
Here is an example.

Let's imagine that you go out at 10:00 in the morning and coming back at 12.00 you'd like to find a roast chicken ready, here's what to do:

The cooking table suggests a time of 70 min. using the forced convection mode with circular heating element and positioning the roasting tin on the second level.



...CHOOSE THE APPROPRIATE FUNCTION...

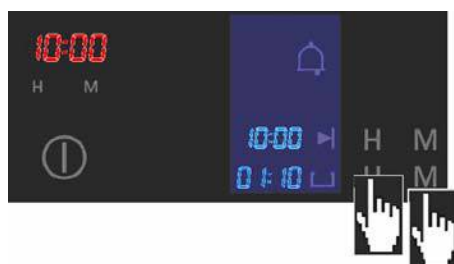

...SET THE LENGTH OF COOKING TIME



...SET THE COOKING COMPLETE TIME.

❗ *N.B.: the order of setting the length of cooking time and cooking complete time can be inverted!*


After a few seconds the system acquires the data and goes into stand-by, to show this state the animated symbols stop.

The oven will cook for 70 minutes, terminating cooking at 12.00, so cooking will start at 10.50.


When cooking is complete a beeping sound will be emitted which can be stopped by gently touching any key.

## MINUTE COUNTER

 The oven can be used as an acoustic timer for various domestic activities, among which timing other things being cooked on the hob:

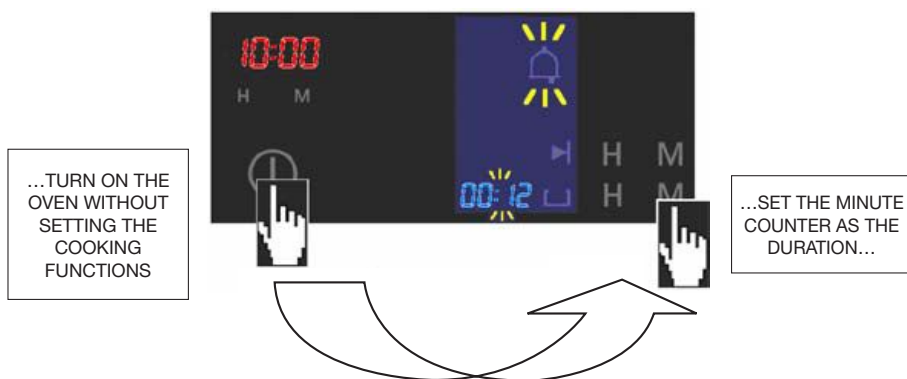

*...or as cooking complete*

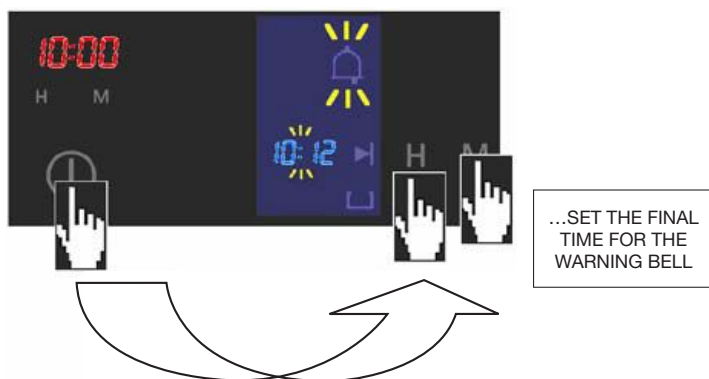 

In both cases the oven acquires the data after a few instants. A countdown starts after which a beeping sound is emitted. To turn it off gently touch any key.

## SAFETY

### THE KEY FUNCTION

At any time the oven can be safeguarded from accidental turning on or from tampering with the settings by using the “key” function.



...ACTIVATE THE  
“FUNCTION”+“CLEAN/BOOST”  
FUNCTIONS CONTEMPORARILY FOR  
AT LEAST 3 SEC.



...IN THE “COOKING TIME  
PROGRAMMING” DISPLAY THE KEY  
SYMBOL IS SHOWN FOR 10 SECONDS...



...IT THEN GOES OUT BUT THE  
FUNCTION IS ACTIVE IN ANY CASE

The commands will be deactivated from now on, to show this a flashing key symbol will be activated for 3 seconds at every attempt.

❗ *N.B.: the on/off key prevails over any setting: if the oven is turned off the key function remains active!*

To deactivate the function, repeat the procedure for activating it: the effect will be the opposite the corresponding symbol will be deactivated.

## **AUTOMATIC TURNING OFF**

The oven turns off automatically in the event of being turned on by accident: after 8 seconds from being turned on if no cooking function is chosen, the oven turns itself off autonomously, signalling such with a double beep.

## **CANCELLATION OF PROGRAMMING**

Turning off the oven, whether manually or automatically causes the cancellation of any programs for timed cooking.

*The manufacturer declines all responsibility for possible inaccuracies contained in this pamphlet, due to printing or copying errors. We reserve the right to make on our own products those changes to be considered necessary or useful, without jeopardizing the essential characteristics.*

---


# TIMER TOUCH CONTROL



## Setting the clock



Figure 1

“Auto” and “0:00” will start flashing when the unit is switched on for the first time. To set the clock, press the central button for about 3 seconds. When  appears, press “+” or “-” to set the correct time.

Wait until a beep tells you that the clock has been set (figure 1).


To set the time at a later stage, press “+” and “-” together for 3 seconds and then adjust the clock as described above.

## Minute counter



Figure 2

As this minute counter does not control the oven, when it finishes counting the oven will continue to work.

To set, press the central button for 3 seconds until  appears (figure 2). Press “+” and “-” to set the required time.

To set the minute counter at a later stage, press the central button for 3 seconds and adjust as described above.

The minute counter beeps when it finishes counting. To disable it, press any button.

## Cooking time



Figure 3

This is a semi-automatic cooking function. It can be used to set cooking times.

Press the central button for 3 seconds. Then press it again until “dur” appears (figure 3). Press “+” and “-” to set the required cooking time.

### ***End of cooking time***



***Figure 4***

The end of cooking time can also be set.

Press the central button for 3 seconds. Press the central button twice consecutively and wait for “End” to appear (figure 4). Press “+” and “-” to set the required end of cooking time.

The oven will work in the set mode and at the set temperature until the end of cooking time.

### ***Programming automatic cooking***



***Figure 5***

Cooking function with set times.

Press the central button for 3 seconds. Then press it again until “dur” appears. Press “+” and “-” to set the required cooking time. Wait a few seconds for the setting to be memorised.

Press the central button for 3 seconds. Press it another two times and wait for “End” to appear (figure 4). Press “+” and “-” to set the required end of cooking time.

E.g.:

Current time: 12.30

Cooking time: 10 minutes

End of cooking time: 14.00

The oven will start cooking at 13.50 (14.00 less 00.10) at the set temperature and in the set mode and will stop at 14.00

The oven will beep when it stops cooking. To disable it, press any button.

### ***Adjusting beep volume***



To adjust beep volume, press “+” and “-” together. Then press the central button and wait for “ton1” (high volume) to flash. Press “-” to select “ton2” (medium volume) or “ton3” (low volume).

Press the central button to set the selected volume.