



# WMI2004

Caple Integrated  
Washing Machine 1400rpm



# INSTRUCTION MANUAL

# Contents

<b>Identification</b>	<b>3</b>
<b>Installation</b>	<b>3</b>
<b>Using the Washing Machine</b>	<b>3</b>
<b>Maintenance</b>	<b>4</b>
<b>Troubleshooting</b>	<b>4</b>
<b>Safety</b>	<b>4</b>
<b>The Environment</b>	<b>4</b>
<b>Programme Chart</b>	<b>5</b>

# Instruction manual

*This appliance, for domestic use only, is designed for washing clothes.*

*Very important: Please, read the whole of this manual before installation and using the washing machine.*

*This manual is designed with the corresponding illustration accompanying the texts.*



## Identification



**Identify which model your washing machine is** ("a", "b", "c", "d", "e" or "f") by comparing the control panel with the illustrations.



## Installation



- 1.1 Unpacking the washing machine** (1.1.1, 1.1.2 and 1.1.3). Remove the transit brackers and the fixing and blocking elements used for transport.
- 1.2 Connection to the mains water** (1.2.1, 1.2.2 and 1.2.3). If the washing machine has a hot water intake, connect the red hose to the hot water tap (1.2.4). Always use the new hose supplied with the appliance. Remove any previously used supply tubes.
- 1.3 Draining.** Install the elbow supplied, in accordance with the measurements shown in the diagram.
- 1.4 Levelling.** Correctly level the washing machine to prevent any noise or shifting. The recommended order is as follows: 1. Position the rear legs and fix them in place (1.4.1). 2. Place the washing machine in its final location (1.4.2). 3. Position the front legs and fix them in place (1.4.3).
- 1.5 Connection to the mains electric.** Refer to the plate data (1.5).
- 1.6 Installation under a worktop.** If the worktop needs to be removed in order to recess-mount the washing machine, contact your distributor or Technical Assistance Service. For recess-mounting, the electrical plug must be accessible after installation. Recess dimensions are 600x600x850.



## Using the washing machine



- 2.1 Opening the door.** Press (2.1.1) after connecting the washing machine (2.3) or open the loading door (2.1.2).

- 2.2 Detergent and additives.** Load the clothes into the washing machine, after sorting them according to colour, soil and fabric type.

The detergent compartment has the following divisions: wash , prewash and fabric softener (2.2.1).

All the washing machines are designed to use detergent powder (2.2.2).

If you wish to use liquid detergent (2.2.5), you will see a blue tab for this purpose in the wash compartment (2.2.3). Pull it outwards as far as it will go, then release it. It will remain in vertical position (2.2.4), this will prevent the liquid detergent from running out. To use powder detergent again, place the blue tab in horizontal position and push it back as far as it will go to open the flap.

Remember that you must not exceed the MAX level marked on the fabric softener compartment.

- 2.3 Switching on the washing machine**

- 2.4 Programme selection.** Select the programme using the dial, after consulting the programme chart.

- 2.5 Selecting the spin speed** . You can choose or cancel a spin speed (2.5.1, 2.5.2, 2.5.3). If you select the Anti-crease option (2.5.4) the wash process will stop before the final spin and the clothes will be left submerged in water. If you deactivate the function, it will continue with the final spin.

- 2.6 Additional functions.** Easy iron ; extra rinse and intensive wash for heavily soiled items.

- 2.7 Time delay** . This option allows you to delay the start of washing.

- 2.8 Starting up the washing machine**

- 2.9 Child lock.** Press and hold it down approximately 3 seconds (2.9.1). This is used to prevent children from interfering with the washing machine. It is deactivated by pressing the button again and holding it down approximately 3 seconds (2.9.2).

- 2.10 Wash process.** You can check the programme phase and the remaining programme time.

**Recommendations for use:** As soon as the washing machine is installed you can perform a preliminary wash to check it is functioning correctly (standard wash, with no load and at 60°). Use a wash bag for small items: handkerchiefs and underwear.



**Observations:** **1.** If you stop the washing machine to add more items to the load, make sure the water level is below the loading door. **2.** The additional functions increase the washing time. **3.** When the wash programme ends, there is a time delay before you can open the door.

## 3

### Maintenance

#### 3.1 Cleaning the detergent compartment.

It is recommendable to do this once a month.

#### 3.2 Cleaning the filter. It is recommendable to do this once a year.

**For cleaning the outside of the washing machine,** use non-abrasive products and dry thoroughly with a soft cloth.

## 4

### Troubleshooting



**4.1** The washing machine includes a troubleshooting system which detects and warns of any anomalies. This can be viewed on the display or when the pilot lights on the control panel start to flash.

**4.1.1 No water is entering the washing machine.** Check the water supply, the inlet tap, or clean the inlet filter.

**4.1.2 The washing machine does not drain or spin.** Check the state of the filter.

**4.1.3 It does not spin.** Redistribute the load and press the spin button again.

**4.1.4 It will not start up.** Check the loading door is properly closed.

**4.1.5 Any other code.** Contact the technical service.

**4.2 Vibrations or noise.** Check it has been properly installed (points 1.1 and 1.4 of this manual).

**4.3 Water in the detergent compartment.** Check the detergent compartment is not clogged (3.1).

**4.4 Loading door opening.** In case of failure or electricity cut, pull out the detergent compartment by pulling the handle outwards and press the blue lever down (4.2.1). On the right side you will see a button with a groove. Turn this button to the left with the aid of a coin, and the loading door will open (4.2.2).

## 5

### Safety



- The mains water pressure must be between 0.05 and 1 Mpa (0.5 - 10 kg/cm<sup>2</sup>).
- Do not use extension leads or adapters to connect the washing machine.
- The electrical installation must be suitably dimensioned for the maximum power indicated on the reference plate and the plug must have the regulatory earth connection.
- If the power supply cable is damaged, it must be replaced by after-sales service or similarly qualified personnel so as to avoid any hazards.



- Do not interfere with the inside of the washing machine. If you have any problems you cannot solve yourself, call the technical service.
- Persons (including children) whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely should not use this appliance without initial supervision or instruction by a responsible person. Children should be supervised to ensure that they do not play with the appliance.

## 6

### The environment



**This washing machine has been designed with environmental protection in mind.**

**Respect the environment.** Always load the washing machine to the maximum recommended capacity for each programme: this will save water and power. Avoid the prewash whenever you can. Do not use too much detergent. Only use the extra rinse function for garments belonging to people with sensitive skin.

**Waste electrical and electronic equipment management.**

Do not dispose of these appliances together with the general domestic waste.

Take your washing machine to a special waste collection centre.

Recycling domestic appliances avoids negative consequences for health and the environment and saves power and natural resources.

For further information, contact your local authorities or the shop you purchased the washing machine at.



standard programmes

delicate programmes

special programmes

Programme and temperature	Fabric type	Maximum load (kg)	Consumption Kwh/L	Duration in minutes
<b>1.</b> cold	cotton/linen delicate colours very light soil	7/8	0,10/59	50
<b>2.</b> quick 30°C	cotton/linen whites/colours light soil	4	0,20/30	30
<b>3.</b> 30°C	cotton/linen delicate colours light soil	7/8	0,30/59	52
<b>4.</b> 40°C	cotton/linen fast colours light soil	7/8	0,60/59	57
<b>5.*</b> 60°C	cotton/linen fast colours medium soil	7 8	1,33/59 1,36/59	80
<b>6.</b> stains / prewash 60°C	cotton/linen whites/fast colours heavy soil	7/8	1,50/64	100
<b>7.</b> mixed 40°C	synthetics/cotton mix delicate colours medium soil	4	0,40/45	55
<b>8.</b> cold	synthetics delicate colours very light soil	4	0,10/45	50
<b>9.</b> 30°C	synthetics delicate colours light soil	4	0,20/45	50
<b>10.</b> high temp. (antibacterial) 90°C	cotton/linen whites heavy soil	7/8	2,20/64	110
<b>11.</b> duvet 30°C	curtains/cotton mix whites/colours very light soil	4	1,00/45	70
<b>12.</b> curtains 30°C	wool/wool mix whites/colours very light soil	2	0,45/55	40
<b>13.</b> hand wash cold	wool/wool mix whites/colours light soil	2	0,05/55	30
<b>14.</b> quick 15' cold	synthetics/cotton mix whites/fast colours very light soil	2	0,05/22	15
<b>15.</b> rinse	cotton/cotton mix synthetics/delicate wool/wool mix	7/8	0,05/25	23
<b>16.</b> spin dry	cotton/cotton mix synthetics/delicate wool/wool mix	7/8	0,05/0	10

\* programme for evaluating washing and power consumption in accordance with standard EN60456, using the intensive wash button.



	Programme and temperature	Fabric type	Maximum load (kg)	Turbo time			Turbo time plus		
				Consumption Kwh/L			Consumption Kwh/L		
				5 kg	6 kg	🕒	6 kg	7 kg	🕒
standard programmes	1. standard cold	cotton/linen delicate colours very light soil	5/6/7	0,15/46	0,15/49	60	0,10/49	0,15/54	50
	2. quick 30°C	cotton/linen whites/colours very light soil	1,5	0,20/25	0,20/30	30	0,20/30	0,20/30	30
	3. standard 30°C	cotton/linen delicate colours light soil	5/6/7	0,35/46	0,40/49	82	0,20/49	0,45/54	52
	4. standard 40°C	cotton/linen fast colours light soil	5/6/7	0,60/46	0,65/49	87	0,50/49	0,70/54	57
	5.* standard 60°C	cotton/linen fast colours medium soil	5/6/7	A:0,95/46 A+:0,85/46	1,02/49	91	1,02/49	1,13/54	70
	6. standard 90°C	cotton/linen whites heavy soil	5/6/7	1,60/51	1,90/55	120	1,90/53	2,15/60	110
delicate programmes	7. prewash 60°C	cotton/linen whites/fast colours heavy soil	5/6/7	1,40/55	1,45/60	105	1,40/53	1,70/65	100
	8. delicate cold	synthetics/cotton mix delicate colours very light soil	3	0,15/50	0,15/55	50	0,10/49	0,15/55	50
	9. delicate 30°C	synthetics/cotton mix delicate colours light soil	3	0,35/50	0,35/55	50	0,20/49	0,30/55	50
	10. delicate 40°C	synthetics/cotton mix delicate colours medium soil	3	0,55/50	0,60/55	55	0,40/49	0,60/55	55
	11. delicate 60°C	synthetics/cotton mix whites/fast colours medium soil	3	0,95/50	1,00/55	70	0,90/49	0,95/55	70
wool programmes	12. wool cold	wool/wool mix whites/colours very light soil	1	0,05/60	0,05/60	30	0,05/52	0,05/60	30
	13. wool 35°C	wool/wool mix whites/colours light soil	1	0,45/60	0,50/60	40	0,40/52	0,50/60	40
auxiliary programmes	14. rinse	cotton/cotton mix synthetics/delicate wool/wool mix	5/6/7	0,05/25	0,05/30	23	0,05/30	0,05/25	23
	15. spin dry	cotton/cotton mix synthetics/delicate wool/wool mix	5/6/7	0,05/0	0,05/0	10	0,05/0	0,05/0	10
	16. drain/end	cotton/cotton mix synthetics/delicate wool/wool mix	5/6/7	0,00/0	0,00/0	2	0,00/0	0,00/0	2

\* programme for evaluating washing and power consumption in accordance with standard EN60456, using the intensive wash button.