



Instruction manual for free standing wine cabinet

Model : WF121



Contact Caple on 0844 800 3830 or for spare parts www.4caple.co.uk

Thank you for purchasing this Caple Wine cabinet. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product

Important warnings and advice For WF121

- Unpack your wine cabinet carefully and remove all of the protective packing from inside and outside
- Packing materials (plastic bags, polystyrene, nails, metal, etc...) are a source of danger. Keep out of the reach of young children.
- After unpacking, make sure that the appliance is in perfect order. If you have any doubt, do not use it and contact your retailer.
- Check that all the fittings are in the correct position on the inside of the cabinet.
- Release the mains lead which is fitted with a 13amp UK plug.
- Move your wine cabinet to a suitable location.
- Do not move your cabinet when loaded with wine as this could distort the cabinet.
- Ensure that cabinet has adequate venting.
- Do not attempt to modify the cabinet's technical characteristics as this could be dangerous.
- This appliance should only be used for the specific purpose for which it was designed, i.e. storage of wine. It is not designed for food storage.
- Do not attempt to clean or maintain the appliance without first disconnecting from the mains.
- To prevent damaging the door gasket, make sure that the door is fully open when pulling shelves out.
- Ensure that you fully understand these instructions before operating this appliance.
- During the summer months, there may be a build up of moisture on the glass door which you can just wipe away.

Installation instructions

Before turning the wine cabinet on ensure that it is placed on a solid surface and that the cabinet is perfectly level. This should minimize any vibrations during use.

Your cabinet is equipped with adjustable feet at the front – use these feet to level the cabinet.

Important: Stand the wine cabinet vertically and wait 12 hours before switching it on for the first time.

Safety instructions

- Clean the interior surface with lukewarm water using a soft cloth and dry thoroughly.
- It must be installed away from any heat sources.
- It must not be placed in direct sun light.
- It must not be placed in a damp location (laundry, bathroom, etc.).
- It must be perfectly level.
- It must have a correctly installed and reliable electricity supply that is correctly earthed.
- Use of a multi-socket or extension lead is not recommended
- This wine cabinet must be earthed to provide protection in the event of an electrical short circuit.
- Consult a qualified electrician or service engineer if the earthing instructions are not completely understood.

Warning! Incorrect earthing can result in the risk of electrical shock.


Operating instructions

The wine cabinet should be placed where the ambient temperature is between 5-35oC (41-95oF). If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing you appliance in extreme cold or hot conditions may cause interior temperatures to fluctuate and the required temperature may not be achieved.

Setting the temperature control

The temperature within the cabinet can be controlled by adjusting the thermostat.

To turn off the wine cabinet turn the control to the "0" position.

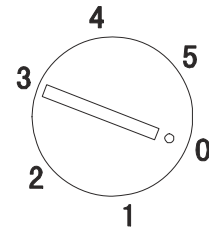

When using the cabinet for the first time the control should be adjusted to position "5". After 20 minutes the control should be reset to the desired setting.

Notes:

- Adjust the internal temperature according to the amount of product and the ambient temperature.
 - Winter (5-10oC/50-59oF) - Setting 2 - 4
 - Summer (15-30oC/59-86oF) - Setting 4 - 5
- The inner temperature varies in different parts of the cabinet .The back of the chiller will be colder than the front.
- There is a 4 to 6 C variance between the top and bottom shelves of the wine chiller. Therefore, if you have set the wine cabinet for red wine only and you want to place a mix of white and red wines, you should place the white wine bottles on the bottom shelves and the red wines on the top shelves.

Care and maintenance

Cleaning

- Turn off the power; unplug the wine cabinet, and remove the bottles.
- Wash the inside with a warm water and baking soda solution. (The solution should be about 1 tablespoon of baking soda to a litre of water.).
- Wash the shelves and trays with a mild detergent solution.
- The outside of the Wine Cabinet should be cleaned with mild detergent and warm water.
- It may also be necessary to periodically wipe the bottom part of the storage area as the Wine Cabinet is designed to retain humidity, and condensation may collect there.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your wine cabinet if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time you need to take the proper steps to protect the contents.

Holidays

- Short holidays: Leave the wine cabinet operating during holidays of less than three weeks.
- Long holidays: If the wine cabinet will not be used for several months, remove all the bottles and disconnect. Clean and dry the interior thoroughly. To prevent odour and mould growth, leave the door open slightly (blocking it open if necessary).

Moving your wine cabinet

- Remove all the bottles.
- Securely tape down all loose items inside your Wine Cabinet.
- Turn the leveling screws up to the base to avoid damage.
- Tape the doors shut.
- Be sure the Wine Cabinet stays secure and upright during transportation. Also be sure to protect the outer casing of the cabinet whilst in transit (e.g. with a blanket)

Energy saving tips

The wine cabinet should be located in the coolest area of a room, away from heat producing appliances and out of direct sunlight.

Troubleshooting

Try the suggestions below to see if you can solve the problem before calling the service engineer.

Problem	Possible cause
The wine cabinet does not operate.	The appliance is not plugged in. The appliance is switched off. The circuit breaker tripped or a fuse has blown.
The wine cabinet is not cold enough.	Check the temperature control setting. During hot weather a higher setting is needed. The door has been opened too often. The door is not closed completely. The door gasket does not seal properly. There is insufficient empty space around the cabinet.
The wine cabinet turns on and off frequently	The room temperature is hotter than normal. A large amount of un-cooled wine has been added. The door has been opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. There is insufficient empty space around the cabinet.
The wine cabinet vibrates.	Check to ensure that the wine cabinet is level.
The wine cabinet seems to make too much noise.	A slight rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant. Contraction and expansion of the inside walls may cause popping and crackling noises. The wine cabinet is not level.
The door will not close properly.	The wine cabinet is not level. The doors were reversed and not properly installed. The gasket is dirty. The shelves are out of position.
For technical advice or product service please call the helpline on: 0844 800 3830	

Notes

Repairs – after sales service

Your appliance comes with a one year warranty. If it is not working correctly; consult the fault finding guides within this instruction manual (Troubleshooting guide page 6). If a fault occurs which you cannot resolve through following the advice and information contained within this instruction manual, the next step is to contact Caple service on:

0844 800 3830

They will be able to provide you with details of your local service engineer. Before calling out an engineer, please ensure that you have read the details under the "Trouble shooting guide". When you contact your local service engineer you will need to give the following details:

1. **Your name, address and post code.**
2. **Your telephone number.**
3. **Clear and concise details of the fault.**
4. **The purchase date as found on your receipt.**
5. **The model and serial number of the appliance.**

So that you always have these numbers at hand, we recommend you to make a note of them here:

Model :

PNC :


S.N. :

IMPORTANT: If you call out an engineer to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Spare parts

Always insist on genuine spare parts. An authorized service engineer should service this product, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause an injury or serious malfunctioning.

Environmental information

This symbol  indicates that this product should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Gas type - R600A

Fuse rating – 5 amp 230v

