 


Integrated Tumble Dryer

LAM8800

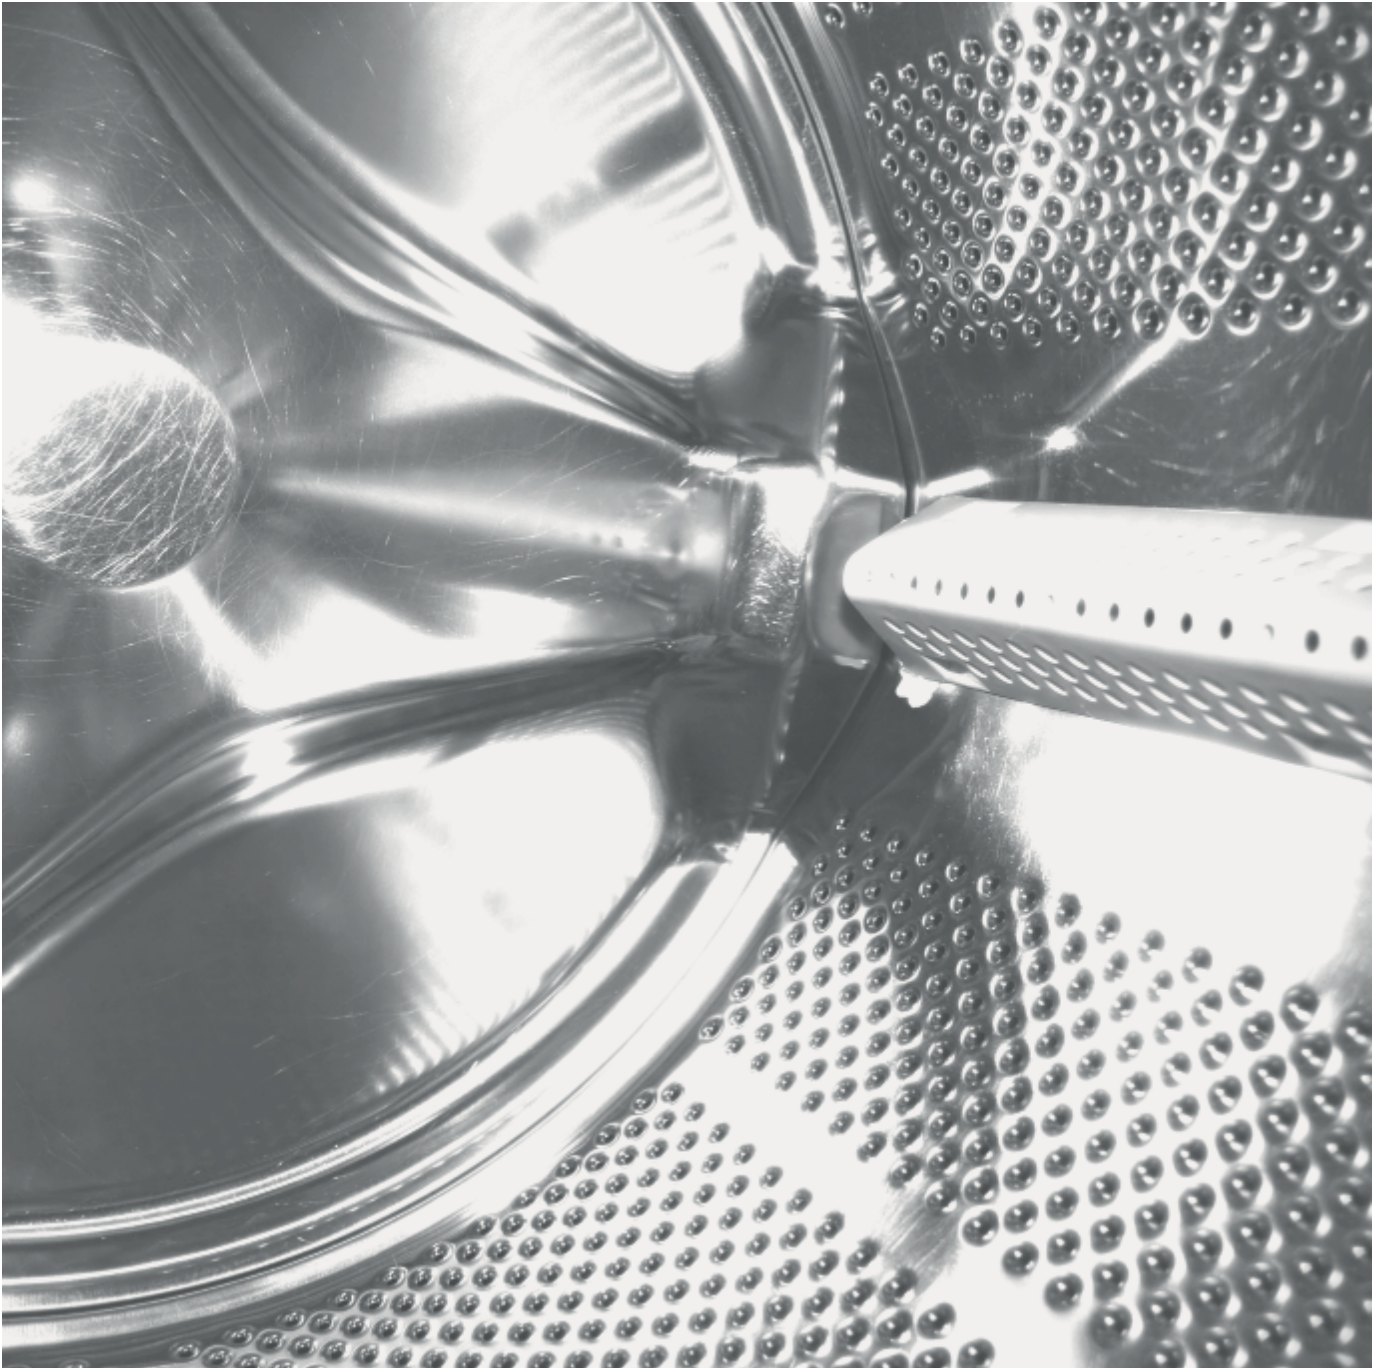

User & installation Guide

LAMONA

Exclusive to Howdens Joinery Co.

IMPORTANT USER INFORMATION

These notes are provided in the interest of safety.

You must read them before installing or using the appliance.

–This tumble dryer is intended for **NORMAL DOMESTIC USE ONLY.**

SECTION 1: BEFORE USE

*** Safety warnings**

These notes are provided in the interest of safety. You must read them before installing or using the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.

- Adequate ventilation must be provided to avoid back flow of gases into the room from appliances burning other fuels, including open fires.

- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuel.

- Please note it is not recommended that the dryer is placed directly next to ovens or cookers as the performance of the dryer may be affected.
- A carpet must not obstruct the ventilation openings in the base of the dryer.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is dangerous to alter or modify the product in any way other than fitting authorized accessories.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply for long periods (i.e. weekends, if it is to be left unattended for holidays etc.)
- The rear of the dryer gets quite hot during use. Position the dryer so that the back is not accessible while in operation, but ensure that the sides have a space available to allow airflow.

–The special mains cable and plug assembly must only be replaced with a genuine part by the manufacturer or his service agents in order to avoid a hazard.

–It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.

WARNING: Never stop a tumble dryer before the end of a drying cycle unless all items are quickly removed and spread out so that heat is dissipated.

Remove all objects from pockets such as lighters and matches.

DO NOT use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.

DO NOT block the air inlets at the base and side of your dryer.

DO NOT allow fluff to accumulate around the tumble dryer. Risk of fire

DO NOT exceed the recommended maximum load.

DO NOT dry unwashed items in the tumble dryer

DO NOT place articles in the dryer if anything other than a water solution has been used in the cleaning process.

DO NOT attempt to dry dripping wet articles.

DO NOT use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult

your local appointed service engineer and insist on genuine spare parts.

- The dryer must be installed by a Registered Installer.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is recommended that the dryer be serviced annually by a person competent to service gas fired tumble dryers.

Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local appointed service engineer and insist on genuine spare parts.

- The special mains cable and plug assembly must only be replaced with a genuine part available from the manufacturer or service agent.
- Keep the packing materials from your machine away from children to avoid hazards.
- Keep pets away from your machine.
- Your machine is designed for use in a domestic environment. The warranty will be invalid if you use it for commercial purposes.
- It could be possible for a child or pet to gain access to the tumble dryer through the porthole door. Therefore please check the drum before using the appliance.

- Any packaging that is removed from the machine should be kept away from children.

DO NOT - use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.

DO NOT - block the air inlets at the front and back of your dryer.

DO NOT - exceed the recommended maximum load.

DO NOT - place articles in the dryer if anything other than a water solution has been used in the cleaning process.

DO NOT - dry unwashed items in the tumble dryer.

DO NOT - attempt to dry dripping wet articles.

 
DO NOT - use the tumble dryer if you suspect that it is damaged in any way

WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

INSTALLATION

The tumble dryer is fully compatible with any 600mm deep kitchen units and complies with stringent EEC regulations.

Your dryer is provided with a venthose which will extend to approx 2.4m(8ft). We strongly recommend that this is vented through the wall with the attachment provided. The position of the hole (100mm diameter) for the vent directly behind the tumble dryer is shown in the diagram.

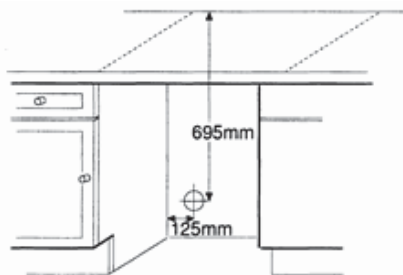

If the through the wall vent is to be positioned other than behind the dryer, the vent hose should be positioned at floor level and through adjacent side panel to relevant position. The plinth must be cut-out to accommodate the air vent grill at the bottom front of the tumble dryer.



The air vent at the front of the appliance must never be covered or blocked in any way as this will cause the dryer to overheat.

The dryer should not be placed directly next to ovens or cookers, as the performance of the dryer may be affected.

 
ELECTRICAL CONNECTIONS: We strongly recommend that any electrical work is carried out by a qualified person complying with the IEE 17th addition of the electrical regulations.

IMPORTANT

Please remember that the tumble dryer must be capable of being switched off, (disconnected from the supply), when fitted in position

THE FILTER

The filter is found, as seen from the diagram, by opening the door and must always be in position when drying items in the appliance. To allow the dryer to operate efficiently it should be cleaned after each drying cycle. Do not be alarmed by the amount of fluff deposited on the mesh. It is not due to excessive wear caused by the dryer but more an indication of its efficient operation. All fabric loses fluff when drying but it goes unnoticed into the air. In a tumble dryer it simply collects in the filter.

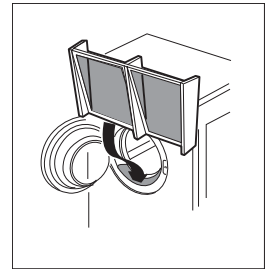

TO FIT THE FEET TO YOUR DRYER

 
IMPORTANT: Lay the dryer on its back to fit feet. Avoid moving the dryer sideways after the feet are fitted.

Using the short self tapping screws (A) attach the foot rails (B) to the bottom of the machine.

Screw the adjustable feet (C) into the inserts and place the dryer in position.


Using the adjustable feet make sure the dryer is level and at the correct height.

When the dryer is satisfactorily positioned and the vent hose correctly positioned, use the two long screws (D) to fasten the dryer to the adjacent cabinets.

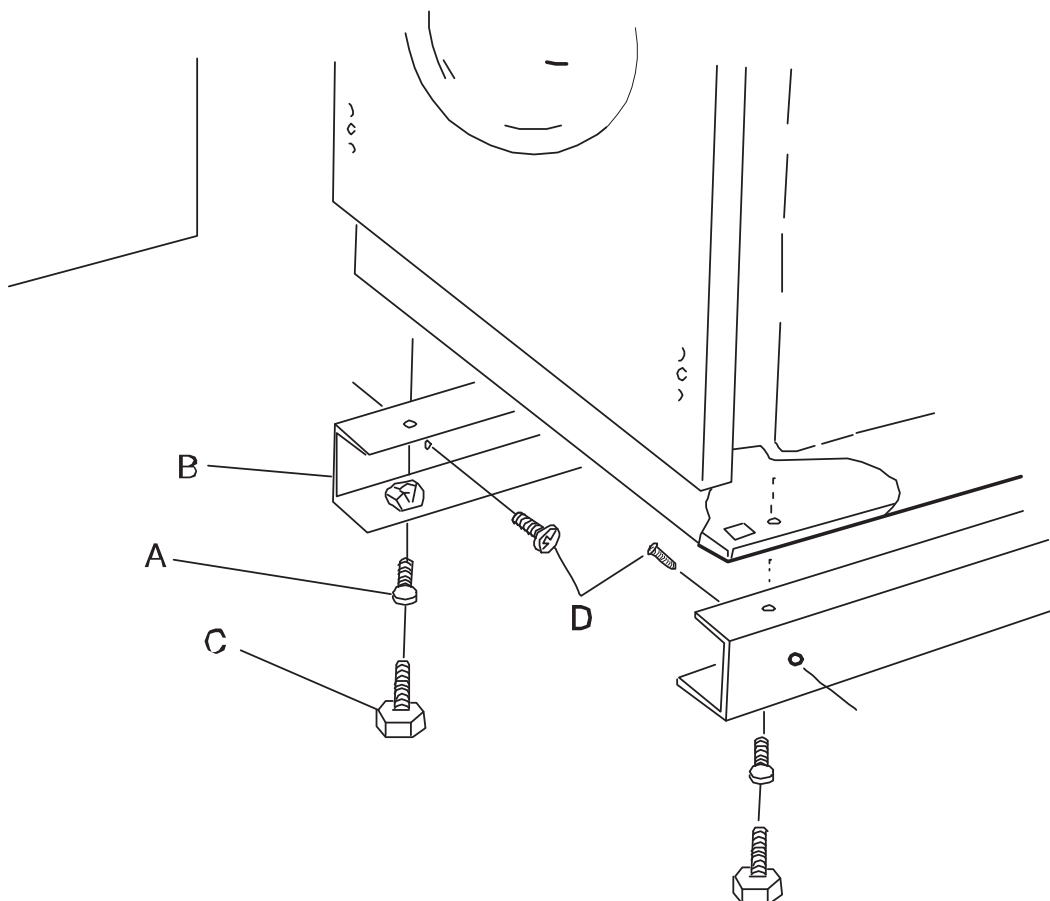


FIXING INSTRUCTIONS OF EXTERNAL VENT KIT

 1. Make hole in outside wall to fit vent kit

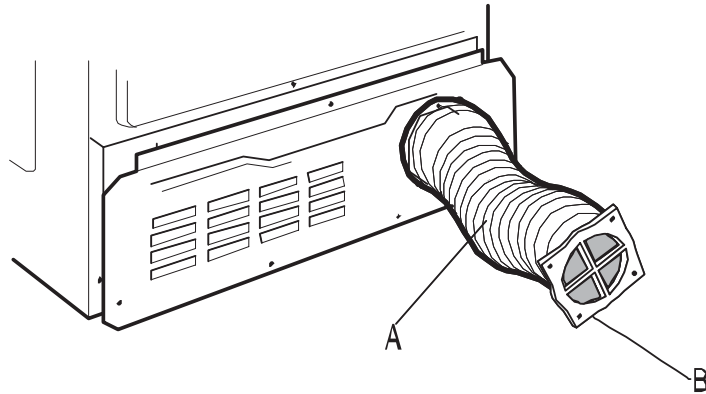


2. Pull the vent hose from the rear of the dryer, (A), and remove the end adaptor by removing the screw (B)

 
3. Pull vent through outside wall and attach to inner of venting (D), and tighten jubilee clip.

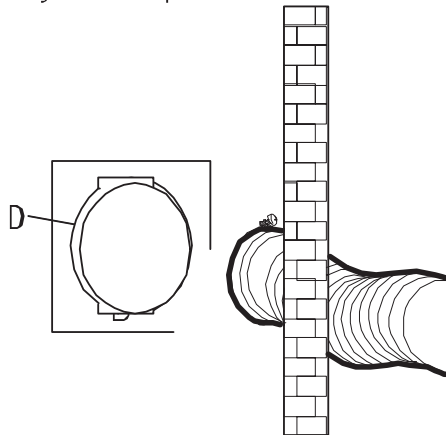

 4. Slide wall vent back and fix using 4 suitable screws (not supplied).

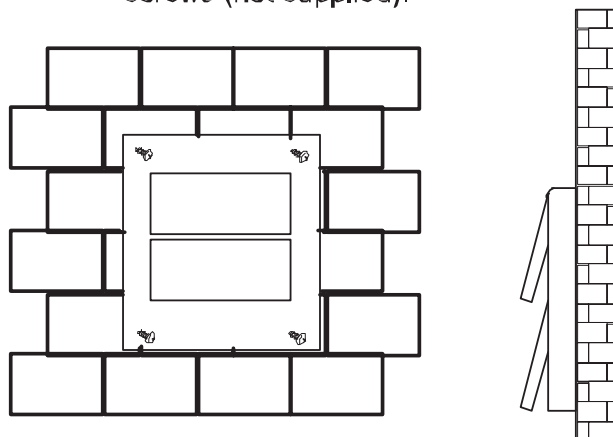


CONTROL PANEL GUIDE

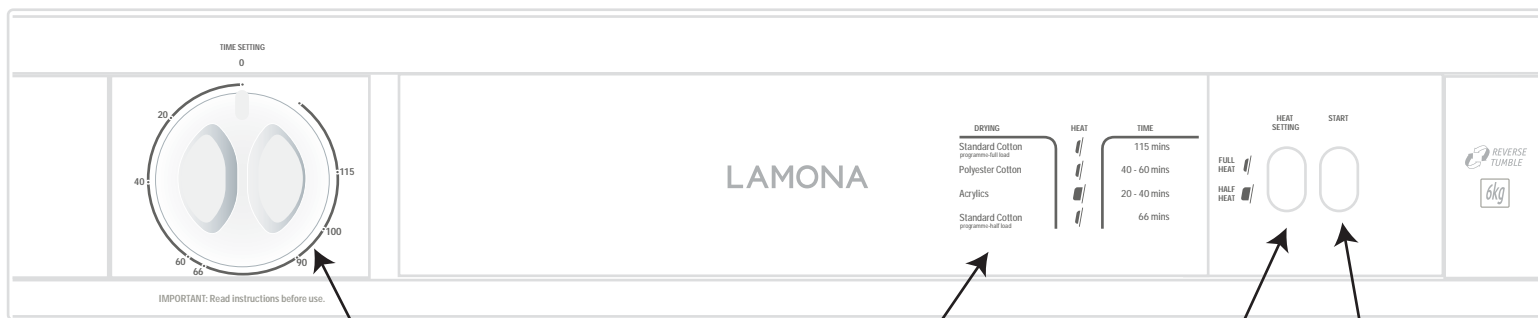 

1. The Timer

Select the drying time from the recommendations shown on the control panel (3). Turn the timer knob to the required drying time.

2. Heat Setting





Select half  or full heat  as recommended on the control panel.

3. Control Panel

See below

4. Start

Press the start button after selecting the required drying time

DRYING	HEAT	TIME
Standard Cotton programme-full load		115 mins
Polyester Cotton		40 - 60 mins
Acrylics		20 - 40 mins
Standard Cotton programme-half load		66 mins

OPERATION

Sort out the clothes into groups of similar fabrics and colours. Check the care label inside the garment. We suggest that a fabric conditioner be used to reduce static electricity. Delicate articles e.g. tights should be placed inside a pillowcase. It is better to dry small and large articles together.

Open the door.

Load clothes loosely into the drum.

Load sheets first starting with one corner.

Close the door.

Dry your hands.

Check the timer is in the '0' position.

Switch on the machine.

Select correct heat position (See programme chart on fascia panel).

The standard cotton programme is suitable to dry normal wet cotton laundry. It is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

Your appliance is a reversing, small door opening; a full load will typically take 115 minutes and will use approximately 3.92kWh of electricity. A half load will typically take 66 minutes and will use approximately 2.08 kWh of electricity.

The power consumption of the off-mode and the left-on mode is zero.

Set the timer to the correct position (See programme chart on fascia panel).

Press the start button.

The drum will now begin to rotate and stop when the timer automatically reaches the '0' position.

Should the clothes become dry before the cycle has finished the thermostat will automatically switch off the heater and prevent over drying and save energy although the drum will still rotate.

When drying large items such as sheets, we suggest you stop the dryer to redistribute the load.

To stop the machine during the middle of a programme simply open the door: the drum will stop rotating automatically and reset when you close the door. To lengthen or shorten the programme, turn the timer knob.

After removing the dried clothes clean the filter as follows:

Pull the filter upwards.

Remove any threat of fluff by hand or with a soft brush.




Slide the filter back.

Wash the filter occasionally in detergent solution and with a soft brush remove small particles.

Switch off the electricity supply.

The final part of the drying cycle occurs without heat (cool down cycle) to ensure that the items will not be damaged.

CARE LABELS YOU MAY FIND ON YOUR FABRICS


	'Tumble drying beneficial'
	'Do not tumble dry'
	'Dry flat'

DOOR REVERSAL

APPLIANCE DOOR


The door on the dryer can be positioned either with the left or right hand hinging.

 Please follow illustrations below to change the door position.

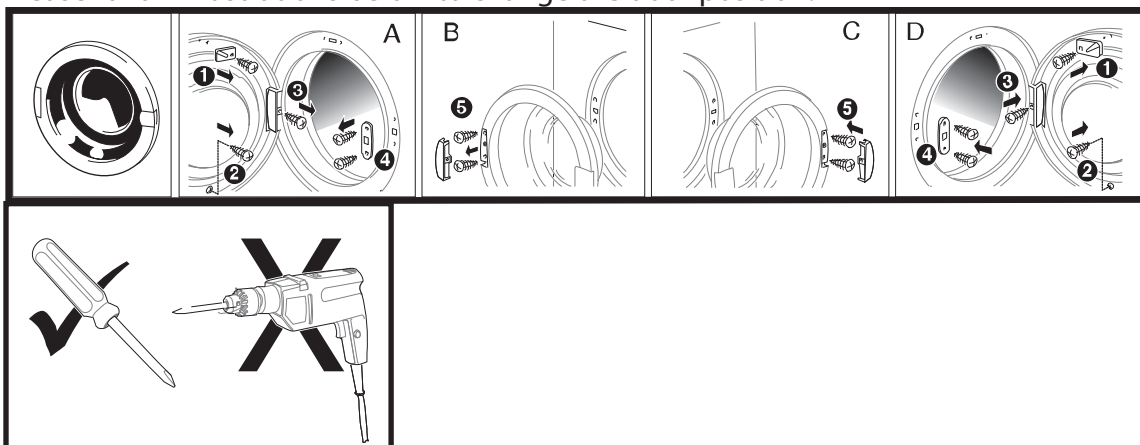

THE DECOR DOOR

 The hinges can be fastened through the pre-drilled holes on either the left or right hand with the door stops being fitted on the other side.

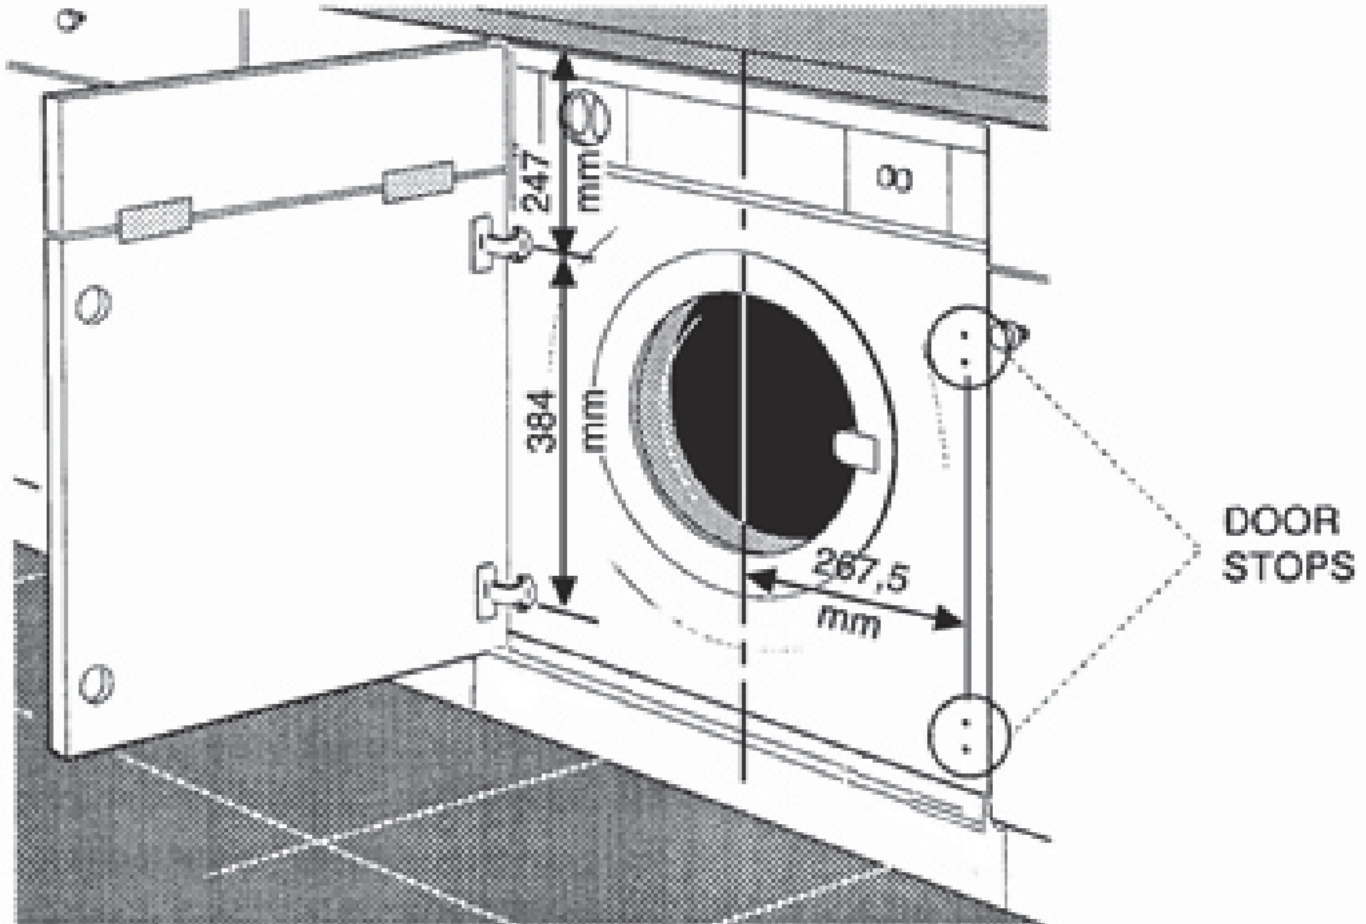

TECHNICAL DATA

Overall dimensions : height 86.5 – 89cm width 59.5cm depth 53cm

Maximum dry weight of cotton, linen 6.0kg synthetics 6.0kg.

For electrical ratings see plate on rear of machine.

This product is manufactured to comply with the radio interference requirements of the Council directive 89/336/EEC, 2004/108/EC.

Fuse rating: 13amp.

DON'TS....

Do not – Overload the dryer.

Do not – Dry articles singly as they tend to roll up and so increase drying time.

Do not – Dry woolen or wool mixture articles unless the article is labeled as suitable. This should avoid shrinkage.

Do not – Allow venting hose (where applicable) or filter to become blocked.

Do not – Allow fluff to accumulate around the tumble dryer.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM – RISK OF FIRE.

WARNING: Never stop a tumble dryer before the end of a drying cycle unless all items are quickly removed and spread out so the heat is dissipated.

 
ANY PROBLEMS

If the clothes are not dry after normal drying time:

- Check that the filter is clean.
- Check that you used the correct heat setting.
- Check that the venting hose is not blocked (sometimes a strong wind may cause a back pressure).
- Check that you have not set the timer within a cool down period.

If your machine does not work, check the following points before contacting the Free –phone service number.

- Check that there is a supply of electricity.
- Check that the machine is switched on and the door properly closed.
- Some machines are fitted with a resettable cut-out. Check this has not operated. If your dryer has a red button on the right hand side at the back of your dryer, press it. If it has operated the sharp “click” will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean and that all other restrictions are removed before restarting.
- Check the fuse in the moulded plug.

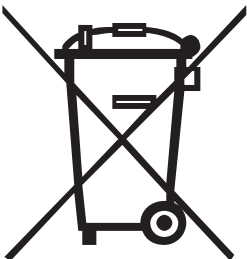

This appliance is marked according to the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). This guideline is the frame of a European wide validity of return and Recycling on Waste Electrical and Electronic Equipment.



Product Fiche

Commission Regulation (EU) No 392/2012

LAMONA

Model	LAM8800
Capacity	6kg
Technology	Air Vented
Energy Class	C
A _{Ec}	459kWh/a

The figures above is based on 160 drying cycles of the standard cotton programme at full and partial load and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

Automation	Non - Automatic
EU Ecolabel	N/a
E _{Dry}	3.92kWh
E _{Dry 1/2}	2.08 kWh
E _{g,Dry}	N/A
E _{g,Dry 1/2}	N/A
E _{g,Dry,a}	N/A
E _{g,Dry 1/2,a}	N/A
P _o	0W
P _i	0W
Duration of left on mode	N/A

The standard cotton program used at full and partial load is the standard drying programme to which the information in the label and fiche relates. This programme is suitable for drying normal wet cotton laundry is the most efficient program in terms of energy consumption for cotton.

T _t	86 min
T _{dry}	115 mins
T _{dry1/2}	66 mins
Noise	62dBA
Installation	Built In

Product Guarantee Details (UKonly)

Your appliance has the benefit of a comprehensive Manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your proof of Purchase Document).

- Any claim during the period of the guarantee (MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE)
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorized person.

(The guarantee in no way affects your statutory or legal rights)

What to do if you need to report a problem-

Please ensure you have ready:

- The product's model & serial numbers
- Howdens Proof of Purchase document
- Your full contact details.

Call the Service Line on 08450060006

