
Stainless Steel and Glass Angled Extractor

HJA2600



User & Installation Guide

LAMONA
Exclusive to Howdens Joinery Co.

CONTENTS

Environmental Note	3
Product information	4
Parts Identification	4
Parts List	4
Method of Extraction	5
Installation	6
Hanging Your Extractor	6
Fixing To The Wall	7
Fitting The Glass Canopy	7
Decorative Chimney Fitting	8
Fitting Remote Control Batteries	8
Electrical Connections	9
Operating Your Extractor	10
Extractor Controls	10
Timer Function	10
The Carbon Filters	10
Maintenance	11
General Cleaning	11
Replacement of the Light Bulbs	11
The Grease Filters	11
The Carbon Filters	11
Troubleshooting	12
Your Guarantee	13
Guarantee Conditions	13
Reporting a Fault	13
Contact details	14


ENVIRONMENTAL NOTE

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

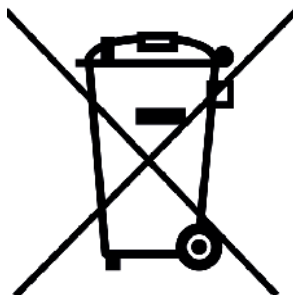

- The packaging materials that Lamona uses are environmentally friendly and can be recycled
- Please discard all packaging material with due regard for the environment.

This appliance conforms to the following EEC Directive:

This appliance meets the provisions of the following directives: 89/336/EEC (electromagnetic compatibility), 73/23/EEC (electrical equipment designed for use within certain voltage limits) as amended.



PRODUCT INFORMATION

Keep this book in a handy place for reference; it contains important details on the safe and proper use of your appliance. Should you sell the extractor please remember to pass the instruction book on to the new owner.



The extractor is designed to give you the option to extract air by ducting to the outside and away (via an exterior wall), or to re-circulate through charcoal filters to minimise odours, steam and condensation. The choice is yours to decide at installation, and both systems are explained in the booklet. We recommend that you read this booklet thoroughly before attempting to install or operate the extractor.

PARTS IDENTIFICATION

On opening your box you will find the extractor hood, a two-piece telescopic decorative chimney and a bag of wall fixings and screws, wall fixing bracket, a ducting connector, and a wall fixing template drawing.

PARTS LIST

- 1) Upper Telescopic Chimney
- 2) Lower Telescopic Chimney
- 3) Extractor Body
- 4) Upper Chimney Bracket
- 5) Lower Chimney Bracket
- 6) Ducting Connector
- 7) Remote Control
- 8) Canopy Glass

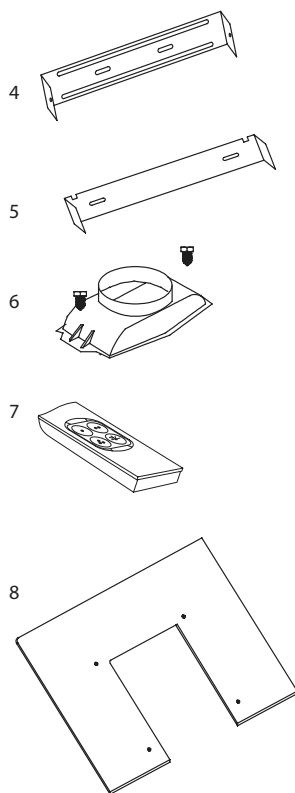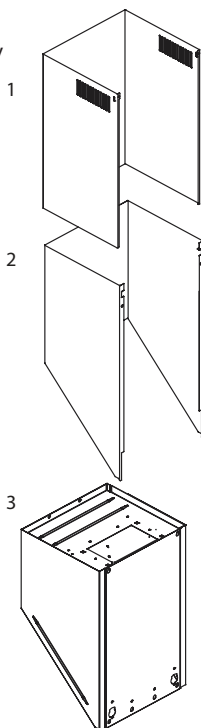

DATA

Power Supply:
230/240v ~ 50Hz

Rating:
370 W

Fuse Rating:
3 A

2 Bulbs
Halogen Lamps 50 W each

METHODS OF EXTRACTION

The very best method of cleaning the kitchen of unwanted odours is by connecting the appliance to an exhaust duct and venting to the outside atmosphere via the ceiling to an exterior wall. (Suitable ducting kits may be purchased from the store where you bought your extractor.) You do not need a charcoal filter when using the ducting mode.

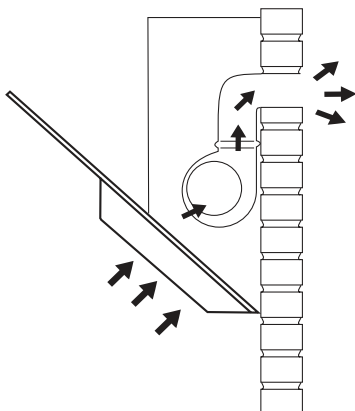


Fig 1.
Ducting mode
(No charcoal filter required)

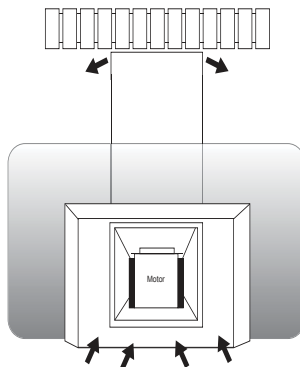


Fig 2.
Recirculating mode
(Charcoal filters required)

REMEMBER: Before drilling or chiselling the ceiling or wall, check for pipes and power cables.


- Ensure the ducting tube is kept as short as possible and with the minimum of bends to permit the smoothest airflow. (Maximum length 3 metres.)
- Ducted air must not be discharged into a flue, which is used for exhausting fumes from appliances supplied with energy other than electricity.
- Ensure the requirements of the local authorities are adhered to concerning the discharge of exhaust air.
- Ensure adequate room ventilation is provided when the extractor is used in the same room as appliances supplied with energy other than electricity.
- Never duct into a hot air flow such as a central heating duct

We strongly advise that all exterior outlets be fitted with a non return valve or louvered slatting.

INSTALLATION

HANGING YOUR EXTRACTOR

IMPORTANT: This instruction must be strictly adhered to. Failure to comply could result in overheating and serious damage to your appliance.

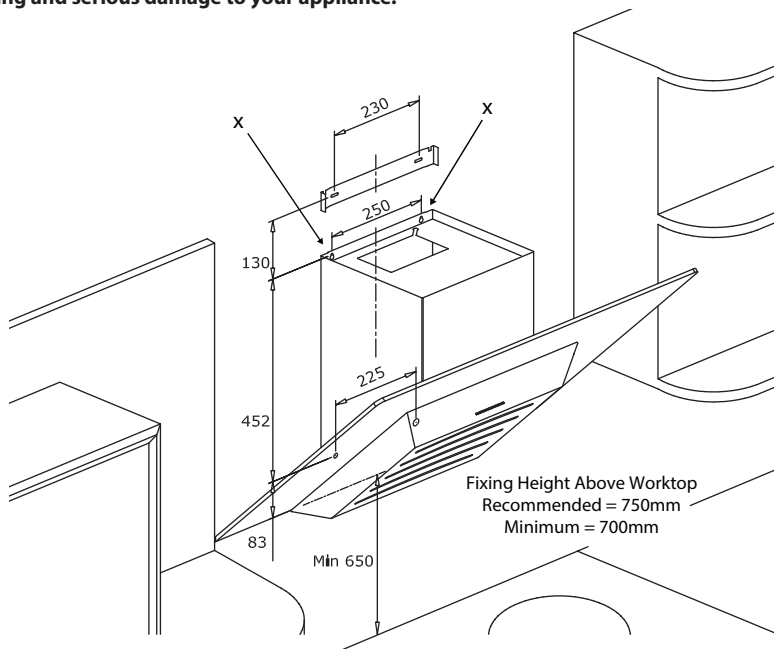


NOTE: It is recommended that the installation is carried out by two people. If access and/or height is restricted it may be necessary to fit the glass canopy and part assemble chimney prior to securing the extractor body to the wall

- Ensure that the wall is capable of supporting the weight of the extractor.
- Prepare the wall by drilling holes and fitting wall plugs for the extractor hood and chimney brackets according to the diagram above. The recommended fixing height for the hood is 750mm from the worktop to the lowest part of the extractor. This can be reduced to a minimum of 700mm if required.
- Screw in the top two extractor body screws 'X' until the screw heads are 2mm away from the wall; keyhole slots have been provided in the extractor body to hang the unit on the wall.
- The upper chimney bracket should be aligned vertically above the lower bracket (shown) at ceiling height.
- If the extractor is to be ducted out, prepare the hole for the ducting and fit the ducting adapter to the top of the extractor body.


FIXING TO THE WALL

- Remove the grease filter.
- Remove the inner housing to gain access to the lower fixing holes.
- With the help of an assistant, hang the extractor on to the top screws and secure the hood to the wall, with the remaining two screws.
- If the extractor is to be ducted out install the wall vent kit and connect the ducting to the ducting adapter and to the wall vent.
- If the recirculation mode has been selected, fit the carbon recirculation filters to the sides of the motor.
- Replace the inner housing and grease filter.
- **DO NOT attempt to operate the extractor without the grease filters in position**

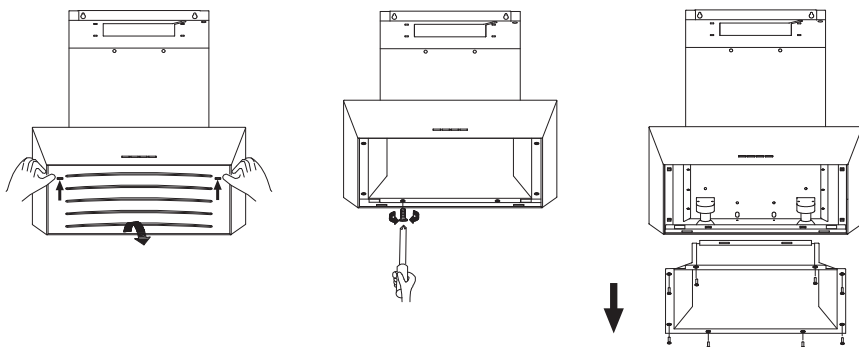


FITTING THE GLASS CANOPY

- Carefully secure the glass panel to the extractor body using the screws, washers and allen key supplied as illustrated below.

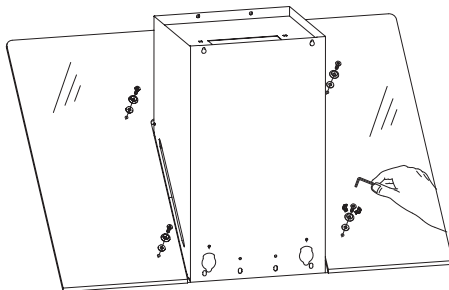


DECORATIVE CHIMNEY FITTING

- Connect the extractor to the electricity supply.
- Slide the upper chimney section inside the lower chimney section and fit into recess on the top of the hood; ensuring that the two return flanges on the top of the lower chimney section fit into the recesses provided on the lower chimney bracket
- Extend the upper chimney section to the ceiling and secure to the upper chimney bracket with the screws provided.

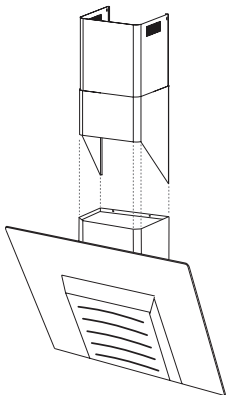



Chimney Location

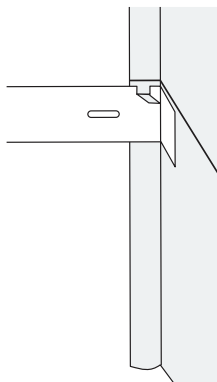

Chimney Bracket

FITTING AND REPLACING REMOTE CONTROL BATTERIES

- Slide the remote control cover slightly to open (fig 11).
- Lift the cover to gain access to the battery compartment.
- Remove used batteries if present, and dispose of in a suitable manner.
- Fit two LR03 (AAA) batteries as shown, taking care to observe the polarity markings
- Note: Do not mix normal and rechargeable batteries.
- Replace the battery cover.

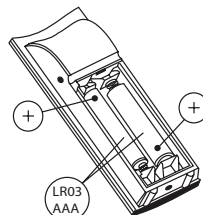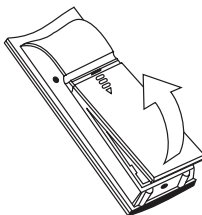

ELECTRICAL CONNECTIONS

IMPORTANT: Ensure that the electricity supply is switched off before connecting.

Your appliance must be connected to fixed wiring via the use of a double pole switched fused spur outlet with at least 3mm contact separation. The isolation switch must be accessible after installation. (See technical data for fuse rating).

We strongly recommend the appliance is connected by a qualified electrician who is a member of the N.I.C.E.I.C. or Corgi who will comply with the I.E.E and any local regulations.

NOTE: The terminology **DOUBLE POLE** -/+ means that both the live and neutral supplies are switched and disconnected at the same time.

The terminations labelled **SUPPLY** are for the connection for the internal house wiring and the terminations labelled **LOAD** are for the connection for the appliance.

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:-

Blue.....Neutral

Brown.....Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your spur box, proceed as follows;

The wire which is coloured blue must be connected to the terminal which is marked with the letter '**N**' or coloured **BLACK**. The wire which is coloured brown must be connected to the terminal which is marked with the letter '**L**' or coloured **RED**.

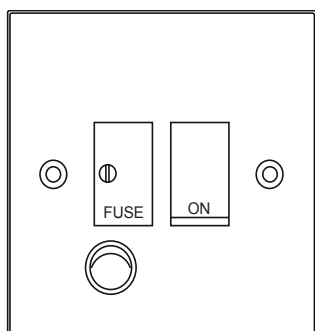


Fig 8. (Fused Switch)



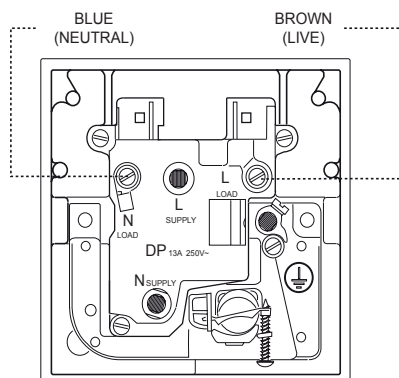


Fig 9. Wiring Example

OPERATING YOUR EXTRACTOR

EXTRACTOR CONTROLS

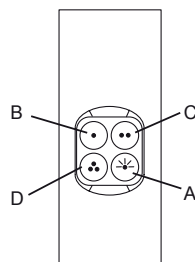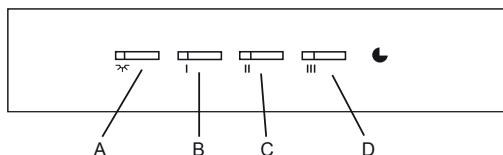

Extractor Controls

- A) Operates the lights
- B) Selects motor speed 1.
- C) Selects motor speed 2.
- D) Selects motor speed 3.

Remote Control

To use the remote control, point it at the extractor and press the appropriate button. Select the desired speed using the appropriate button on the extractor or remote control.

The extractor can be turned off by pressing the appropriate speed button again. To turn the lights ON or OFF, press button A.

Note: Remove the batteries from remote control if not in use for a long time. Do not mix normal and rechargeable batteries. When the batteries become weak the remote control may not function correctly.

TIMER FUNCTION

The extractor has a timer function which enables the fan to remain running for 15 minutes after the timer has been set.

1. Select the desired speed.
2. Press and hold the same speed button again for approximately 2 seconds, until the light(s) begin to flash.
3. The extractor will turn off after approximately 15 minutes.
4. To cancel, press the same speed button, this will turn off the extractor.

MAINTENANCE

IMPORTANT: Before cleaning or attempting any type of maintenance, always make sure that the electric supply is disconnected.

To avoid the possibility of fire, adhere strictly to all of the recommendations included in this booklet, paying particular attention to the grease filters to ensure grease deposits do not build up.

NOTE: The manufacturer declines all liability in cases where the instructions for the appropriate installation, maintenance and use of the extractor hood are not observed.

If the power supply is cut or damaged in any way, disconnect the extractor from the electricity supply and call the service number on the rear cover of this booklet.

GENERAL CLEANING

Wipe the external surfaces of the appliance regularly using warm water and a mild detergent. NEVER use abrasive cleaners.

THE GREASE FILTER

The grease filter is of a metallic material and should be washed using a neutral detergent or in a dishwasher.

Removal of grease filter:

- 1 Press grease filter upward at the front edge.
- 2 Lower filter to remove.

THE CARBON FILTERS

Carbon filters have a limited life. We advise you to change them when there is a noticeable drop in performance. The intervals between changing the filter will depend entirely upon the amount of cooking you do, but on average they will last around 6 months.

To gain access to the carbon filters, remove the grease filter as above. Remove the old filters and reposition new charcoal filters (HJA2900 - pack of 2).

REPLACING THE LIGHT BULBS

- Ensure that the power is switched off.
- Remove the grease filters to gain access to the bulbs.
- Unscrew to remove the lamp and replace it with a new lamp of the same type and wattage.
Remove grease filters to make it easier.

IMPORTANT WARNING: The replacement lamps must have aluminium reflector, never use dichroic lamps, to avoid unnecessary overheating on the lamp holders. NOTE: Lamp replacement is not covered by your guarantee

REPLACING THE BATTERIES IN REMOTE CONTROL

Instructions on replacing batteries can be found on page 8.

TROUBLE SHOOTING

Before you assume the worst, check this simple fault-finding guide to get to the root of the problem:

Lamps fail to operate?

- A replacement is probably necessary, but first check that the lamp is correctly fitted into its holder. Remember that the light bulbs are not covered by our guarantee. Remember to disconnect the mains electricity supply before replacing the lamps. Do not touch the lamps with fingers - use a suitable cloth.

Motor is on but fan does not seem to be as efficient as usual?

- Check the grease filter. If it has not been cleaned recently, it might be clogged with grease. If this filter is relatively clean, check carbon filters (if fitted). If they have not been replaced for more than six months, remove and insert new ones. As time goes by, accumulated grease tends to stifle the carbon filters in just the same way as the grease filter, thereby reducing the efficiency of both the fan and the filter itself.

Works normally but cooking smells linger?

- If you're using the unit in recirculating mode, change the charcoal filter. It may require replacement.

Appliance does not work at all?

- Check your extractor is switched on at the mains. Next, check there is power to your home by switching on adjacent lights etc.

Still not working? Call the service

- If, having consulted the above diagnostics and you are still unable to remedy the situation, please call the service number on the rear cover of this manual.

YOUR GUARANTEE

Product Guarantee Details (UK only)

YOUR APPLIANCE HAS THE BENEFIT OF A COMPREHENSIVE MANUFACTURER'S GUARANTEE WHICH COVERS THE COST OF BREAKDOWN REPAIRS. (DETAILS OF WHICH ARE SHOWN ON YOUR PROOF OF PURCHASE DOCUMENT).

- Any claim during the period of the guarantee (MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE)
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person.

(The guarantee in no way affects your statutory or legal rights)

What to do if you need to report a problem-

Please ensure you have ready:

- The product's model & serial numbers
- Howdens Proof of Purchase document
- Your full contact details.

Call the Lamona Service Line on 0845 00 60 006

CONTACT DETAILS

Issue: 09/2014

Lamona Customer Care
Telephone number (0845) 006 0006.

Lamona operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.