

---

# 60cm Chimney Extractor

**LAM2401**  
**HJA2480**



User & Installation Guide

---

**LAMONA**  
Exclusive to Howdens Joinery Co.

|                                               |            |
|-----------------------------------------------|------------|
| <b>Environmental note</b>                     | 3          |
| <b>IMPORTANT SAFETY INFORMATION</b>           | 4 – 6      |
| <b>Specifications of your extractor</b>       | 7 – 8      |
| Dimensions                                    | 7          |
| Specifications                                | 7 - 8      |
| <b>Using your extractor</b>                   | 9 - 10     |
| Before first use                              | 9          |
| To use your extractor                         | 9 - 10     |
| <b>Cleaning your extractor</b>                | 10         |
| General cleaning                              | 10         |
| The grease filters                            | 10         |
| <b>Maintenance</b>                            | 11 - 13    |
| Removing and cleaning the grease filters      | 11         |
| Changing a light bulb                         | 12         |
| Fitting the carbon filters                    | 13         |
| <b>Installation</b>                           | 14 - 22    |
| Electrical connection                         | 14 - 15    |
| Before beginning installation                 | 15 - 16    |
| Installing your extractor                     | 16 - 18    |
| Connecting to external ducting                | 19         |
| Fitting the chimney                           | 19 – 21    |
| Completing the installation                   | 22         |
| <b>Extraction mode or recirculation mode?</b> | 22         |
| <b>Troubleshooting</b>                        | 23         |
| <b>Guarantee</b>                              | 24         |
| <b>Contact Details</b>                        | Rear Cover |

## ENVIRONMENTAL NOTE

***Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person.***

**This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.**

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

**Disposal must be carried out in accordance with local environmental regulations for waste disposal.**

**For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.**




- o The packaging materials are environmentally friendly and can be recycled.
- o Please discard all packaging material with due regard for the environment.

## IMPORTANT SAFETY INFORMATION



Your safety is of the utmost importance. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance.

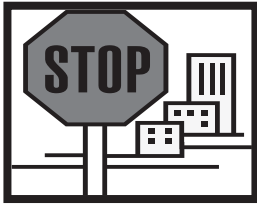

**IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.**

- o The extractor must be installed in accordance with the installation instructions and all measurements followed.
- o If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS.6172, BS.5440 & BS.6891 (Natural Gas) and BS.5482 (LP Gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Department of the Environment, the Building Standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department.
- o It is dangerous to alter the specifications or to modify this product. Do not tamper with it or attempt to modify the appliance in any way.
- o When installing the hood, ensure that the following distances are observed between the worktop and the bottom of the cooker hood:

- **Recommended:** 750 mm
- **Minimum:** 700 mm



**IMPORTANT: DO NOT SET YOUR EXTRACTOR LESS THAN 700mm ABOVE YOUR WORKTOP.**

- o When installed between adjoining wall cabinets, the cabinets must not overhang the hob.
- o The edges of the extractor are sharp – be mindful of this as you handle your appliance, especially during installation and cleaning. **DO NOT CLEAN IN BEHIND THE GREASE FILTERS!**

- o If the room where the extractor is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the sealed or balanced flue type.
- o If other types of flue or appliances are fitted, ensure that there is an adequate supply of air in the room.
- o When the extractor is being used in its extractor function, ensure that the ducting is fire retardant and that there are no bends sharper than 90 degrees as this will reduce the efficiency of the hood.
- o Ensure the ducting for the extractor function has the same diameter as the outlet hole all the way through.

- o Keep young children from using, playing with or tampering with the cooker hood. Older children and infirm persons should be supervised if they are using the cooker hood.



- o Your extractor is for domestic use only.



- o Please dispose of the packing material carefully – children are especially vulnerable to it.

- o Dirty oil is an even greater fire risk.




- o Always put lids on pots and pans when cooking on a gas cooker.



- o The manufacturer refuses to accept any responsibility for damages arising to the extractor or it catching on fire, from a failure to observe the fire safety advice contained in this instruction booklet.
- o Remember that when in extraction mode, your extractor is removing air from your room. Ensure that proper ventilation measures are being observed.

- o **Note: Your extractor is designed to remove cooking odours from the room and not steam.**

- o **Warning - Always ensure that the extractor has been disconnected from the power supply before carrying out any work, including replacing light bulbs.**

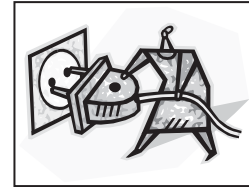

- o Do not connect the ducting system of this appliance to any existing ventilation system which is being used for any other purpose.

- o Do not install above a cooker with a high level grill.

- o Never leave frying pans unattended during use as overheated fats and oils might catch fire.




- o The lights on this appliance should only be used during operation of the extractor. They should not be left on permanently and used as a lighting source.
- o The extractor should not be exposed to a direct heat source from the cooking device underneath it, i.e. a naked flame from a gas burner or heat from electric hob zones without a pan on them.
- o Do not attempt to use the extractor if it is damaged in any way. Never attempt to use it without the grease filters fitted or if the filters are excessively greasy!
- o Never flambé cook under this extractor.

**THE MANUFACTURER DECLINES ALL RESPONSIBILITY IN THE EVENT OF FAILURE TO OBSERVE THE INSTRUCTIONS GIVEN HERE, FOR INSTALLATION, MAINTENANCE AND SUITABLE USE OF THE EXTRACTOR.**



## Specifications

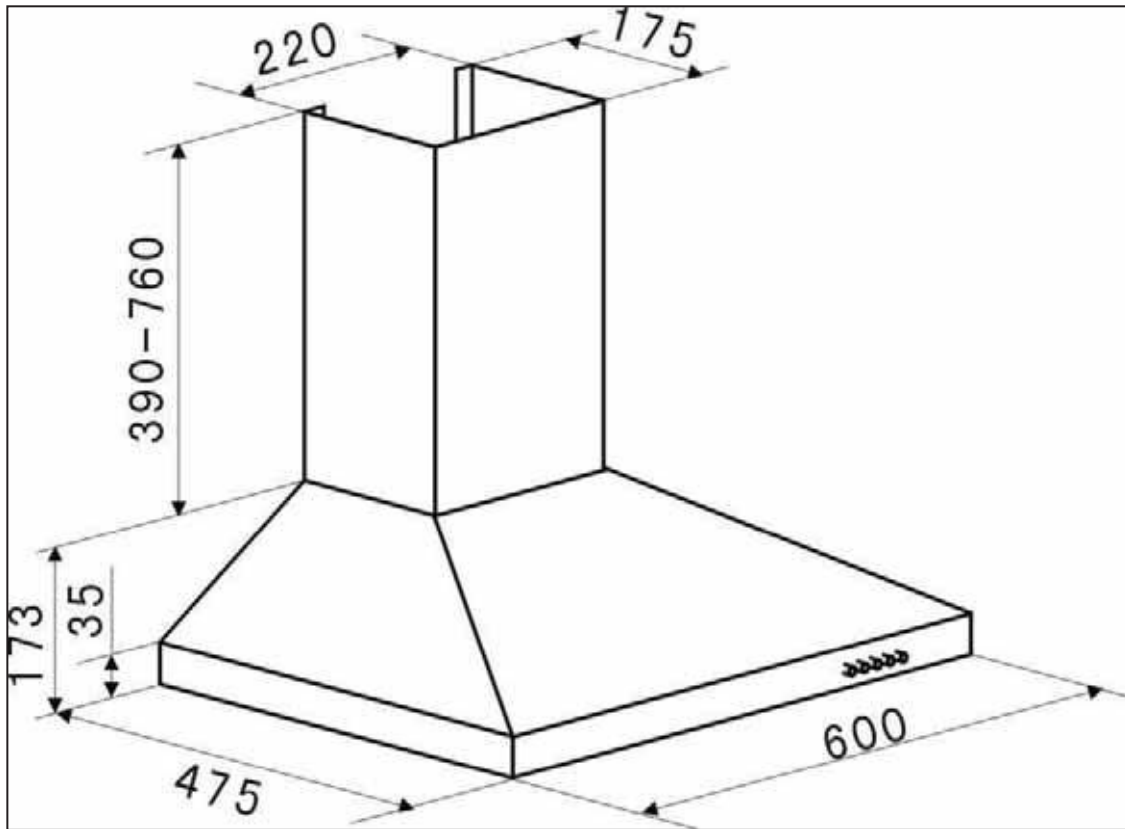

### PRODUCT DIMENSIONS

Height: 563\* mm – 933 mm

Width: 600 mm

Depth: 475 mm

### DIMENSIONS OF CHIMNEY SECTION:

175 mm x 220 mm

***Your stainless steel extractor is fitted with:***

- o High extraction tangential motor
- o Push button control operation
- o 3 Speeds
- o 2 Metallic grease filters
- o 2 lights

Extraction capacity: 350 m<sup>3</sup>/hr

Noise level min/max: 52 – 62 dB

\* If you are using the appliance in recirculation mode, then PLEASE NOTE that some of the vent in the upper chimney section must be exposed. You will have to take this into account when calculating the minimum height of the extractor when installed.




## Using your extractor



**IMPORTANT: THIS PROCESS MUST BE FOLLOWED BEFORE THE EXTRACTOR IS USED FOR THE FIRST TIME.**

- o You should use a good quality stainless steel cleaner and polish on ALL of the stainless steel areas of your extractor, before it is used for the first time.
- o This will help to leave a silicone water-resistant film to protect the stainless steel surfaces.

### To use your extractor

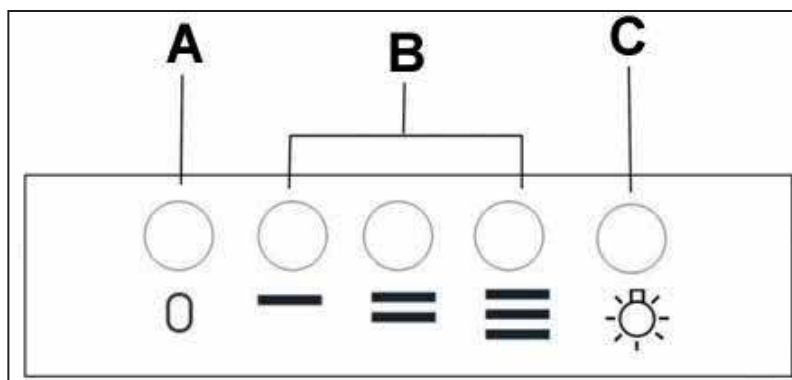

- o **A** = ON/OFF button
- o **B** = Speed selection buttons

 = Low speed

 = Medium speed

 = High speed


- o **C** = Light on/off button

- o Before operating the extractor, make sure that it has been installed by a suitably qualified person, as per the information contained in these installation instructions.
- o Find the control panel, which is located at the front right.
- o There are several buttons on the control panel, which perform separate functions.



**IMPORTANT: IDEALLY YOU SHOULD SWITCH ON YOUR EXTRACTOR TEN MINUTES BEFORE YOU START TO COOK, OR AT THE VERY LEAST WHEN YOU BEGIN COOKING. YOU SHOULD ALSO RUN YOUR EXTRACTOR FOR TEN MINUTES AFTER YOU HAVE FINISHED COOKING.**

## Cleaning your extractor

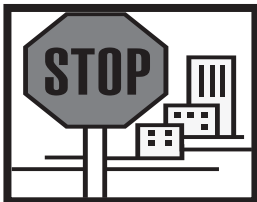

**IMPORTANT: BEFORE CLEANING, ALWAYS ENSURE THAT YOU HAVE SWITCHED YOUR EXTRACTOR OFF AT THE OMNI-POLAR SWITCH, SET AT THE WALL FROM THE CABLE.**

### Cleaning


- o Clean the external parts of your extractor with mild liquid detergent and a new damp cloth.
- o Never use abrasives, corrosive solvents or brushes.
- o Never insert pointed objects into the motor's protective grid.
- o Only clean the control panel and grease filter grill with mild liquid detergents and a new damp cloth.
- o If you are using the appliance in recirculation mode, then be sure to replace the carbon filters at the recommended intervals (see section on "Fitting the carbon filter"). A build up of grease could cause a fire hazard.
- o Never attempt to clean the area above the grease filters.

### The Grease Filters



- o Your extractor is fitted with grease filters, which help to absorb grease particles and protect your kitchen and furniture from greasy residues.
- o These metallic filters may become inflammable if you allow them to get saturated with this greasy residue.
- o To prevent this fire hazard, the filters should be cleaned regularly. Depending on use, this should be done every 10-15 days or at least once a month, using hot water and normal washing-up detergent.
- o **DO NOT WASH THE GREASE FILTERS IN A DISHWASHER.**

## Maintenance

### Removing and cleaning the grease filters

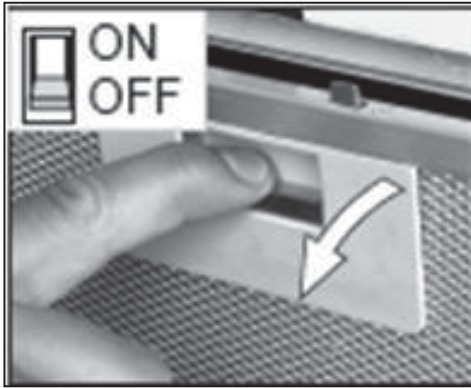

 - o First remove the grease filters by pulling down on the handle and pulling them away from the extractor.

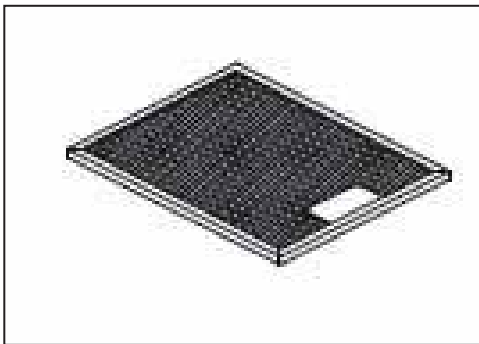


- o Soak the grease filters in hot water and washing up liquid for about an hour.
- o Rinse them off thoroughly with hot water.
- o Repeat the process if required.



- o Refit the grease filters once they have dried.

- o **IMPORTANT: Let the grease filters dry thoroughly before refitting them.**

## Changing a light bulb

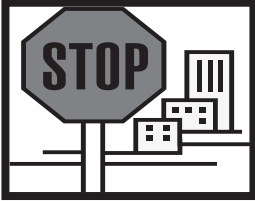


**IMPORTANT: BEFORE ATTEMPTING TO CHANGE A LIGHT BULB, YOU MUST ENSURE THAT YOU HAVE DISCONNECTED THE EXTRACTOR FROM YOUR MAINS SUPPLY.**



- o Remove the grease filters (as described on page 11).

- o Prior to touching the light bulbs ensure they are cooled down.
- o Find the bulb that requires replacement, you will find it located in the light fixture which is inside the exposed section of the canopy.

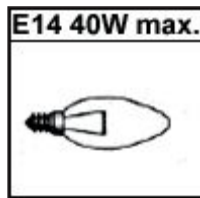


- o Unscrew the light bulb that needs to be replaced and insert a new E14 40W (max) bulb.
- o **IMPORTANT:** Defective bulbs should be replaced immediately.
- o If the lights still do not work, make sure that the lamps are fitted properly into their housings before you call for technical assistance.




- o Refit the grease filters.

## Fitting the carbon filters


If the appliance is being used to be used in recirculation mode then it is necessary to fit carbon filters. This will help to absorb unpleasant odours caused by cooking.

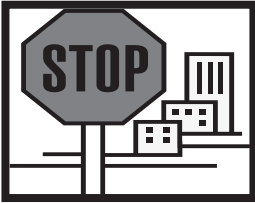

**IMPORTANT: BEFORE ATTEMPTING TO FIT OR REMOVE THE CARBON FILTERS, YOU MUST ENSURE THAT YOU HAVE DISCONNECTED THE EXTRACTOR FROM YOUR MAINS SUPPLY.**

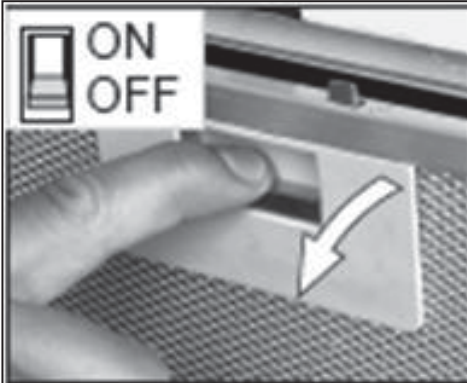

1) Remove the grease filters.

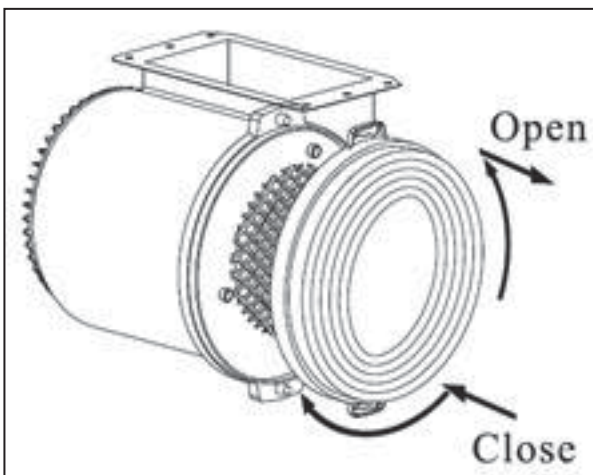

2) Press the carbon filter against one end of the motor, the fixing point is in the centre of the carbon filter.


3) Turn the carbon filter clockwise, until you feel it click into place.

- o Repeat this process for the second carbon filter. You need to place a carbon filter at either end of the



motor.

- o Refit the grease filters.
- o The carbon filters should be replaced every 3 - 6 months or if they show signs of damage.

## Installation

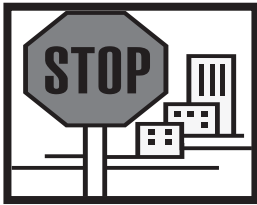

**IMPORTANT:** Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found behind the grease filter.

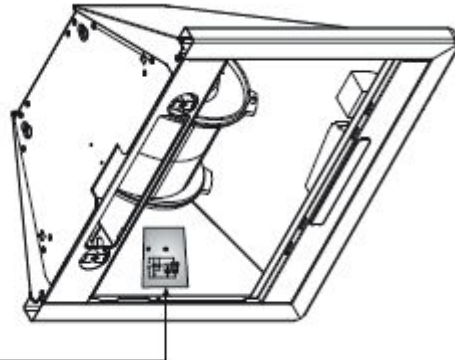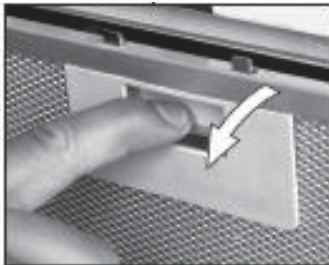

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

### Electrical connection

**YOUR EXTRACTOR IS INTENDED FOR FITTED AND PERMANENT INSTALLATION.**



- o The extractor's power cable must be fitted upstream from the electrical connection, using an omni-polar switch with a contact distance of at least 3 mm. **THE FUSE MUST BE RATED AT 3 AMPS.**


**WARNING: THIS APPLIANCE MUST BE EARTHED.** It should only be connected by a competent person, using fixed wiring via a double pole switched fused spur outlet with a minimum contact clearance of 3mm in all poles. **(UK ONLY).**



We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations. The wires in the mains lead are coloured in accordance with the following UK code:

**Blue = Neutral, Brown = Live, Green / Yellow = Earth**

- o As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

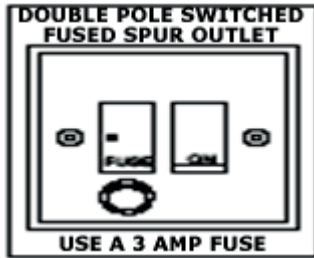

- o The **blue wire** must be connected to the terminal marked "N" (neutral), or **black**.
- o The **brown wire** must be connected to the terminal marked "L" (live), or **red**.
- o The **green/yellow wire** must be connected to the terminal marked "⏏" (earth) or **green**.

## Before beginning installation

- o Check that the product purchased is of a suitable size for the chosen installation area. In addition check whether there is an electrical socket available that will be accessible once the extractor is mounted. If the product is going to be used in extraction mode, then there should also be space to connect a ducting hose to the outside.
- o Carry out all necessary masonry work prior to the fitting of the extractor.
- o Ensure that all electrical connections are carried out by a suitably qualified person.
- o Before commencing installation of the extractor the grease filters should be removed.
- o Check inside the product and insure that there is no transit packaging or any other materials, such as packets of screws, guarantees etc. These should be removed and kept for future use.
- o If possible, disconnect and move freestanding or slot-in cookers from their position, to provide easier access to the rear wall and ceiling. If this is not possible, then a thick, protective covering should be placed over the worktop, hob top or cooker. This will help to protect these surfaces from damage and debris.
- o Select a flat surface for assembling the extractor. Cover that surface with a protective covering and place all parts and fittings on to it.
- o Rawl plugs are provided to secure the extractor to most types of walls and ceilings. However a qualified technician must verify the suitability of the materials, in accordance with the type of wall



and ceiling. The wall and ceiling must be strong enough to take the weight of the extractor.

- o Do not tile, grout or silicone this appliance to the wall. This appliance is designed to be surface mounted only.


## Installing your extractor




**IMPORTANT: YOU WILL HAVE TO DECIDE BEFORE INSTALLING YOUR EXTRACTOR WHETHER TO USE IT IN EXTRACTION MODE OR RECIRCULATION MODE. PLEASE TURN TO PAGE 22 NOW TO UNDERSTAND THE DIFFERENCES BETWEEN THESE TWO MODES.**

- o We recommend that at least two people install this extractor.


**IMPORTANT: YOUR EXTRACTOR SHOULD BE CONNECTED TO YOUR MAINS SUPPLY AFTER THE REST OF THE INSTALLATION PROCESS HAS BEEN COMPLETED.**

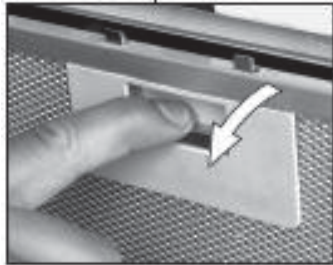

**1)** Remove the metal grease filters.

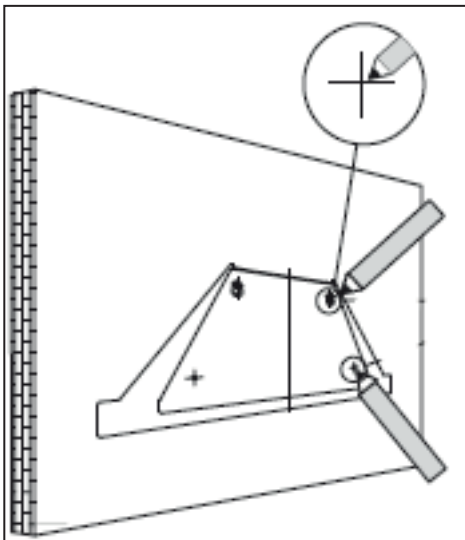


**2)** Position the extractor against the wall that you are intending to install it on and mark the position of the support holes that are to be drilled (as shown in the figure below).

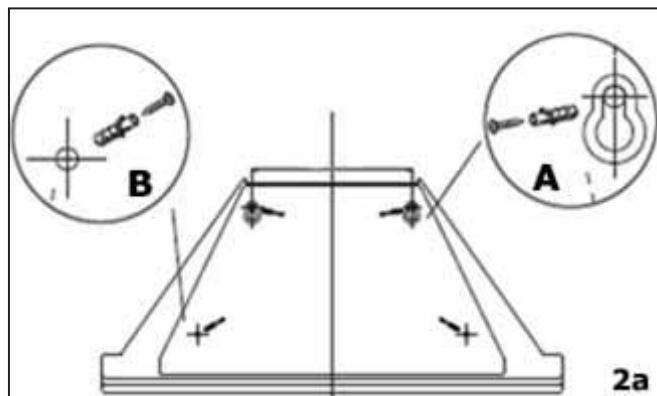


**2a)** The support screw holes are indicated by figure **A** in this drawing and the anchoring screw holes are indicated by figure **B**.




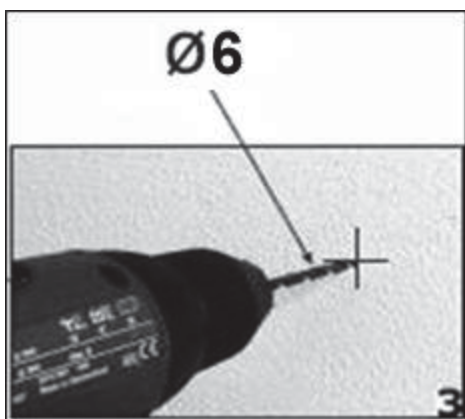


**3)** Using a drill bit with a 6 mm diameter, make holes in the wall on the positions that you have marked in step 2.

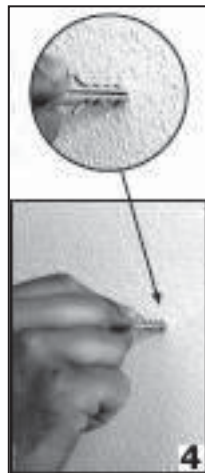


**4)** Insert rawl plugs into all of the holes that you have drilled.

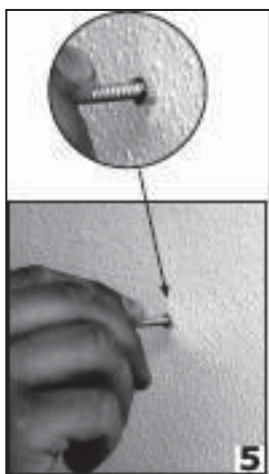

**5)** Fasten the support screws halfway in, leaving them 10 mm out of the wall.

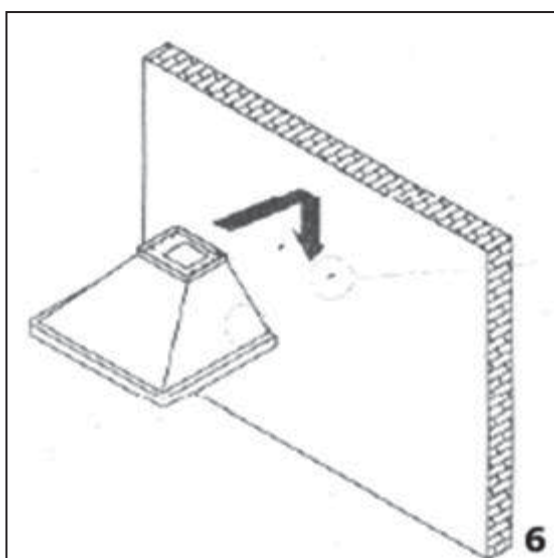


**6)** Hang the extractor onto the support screws.

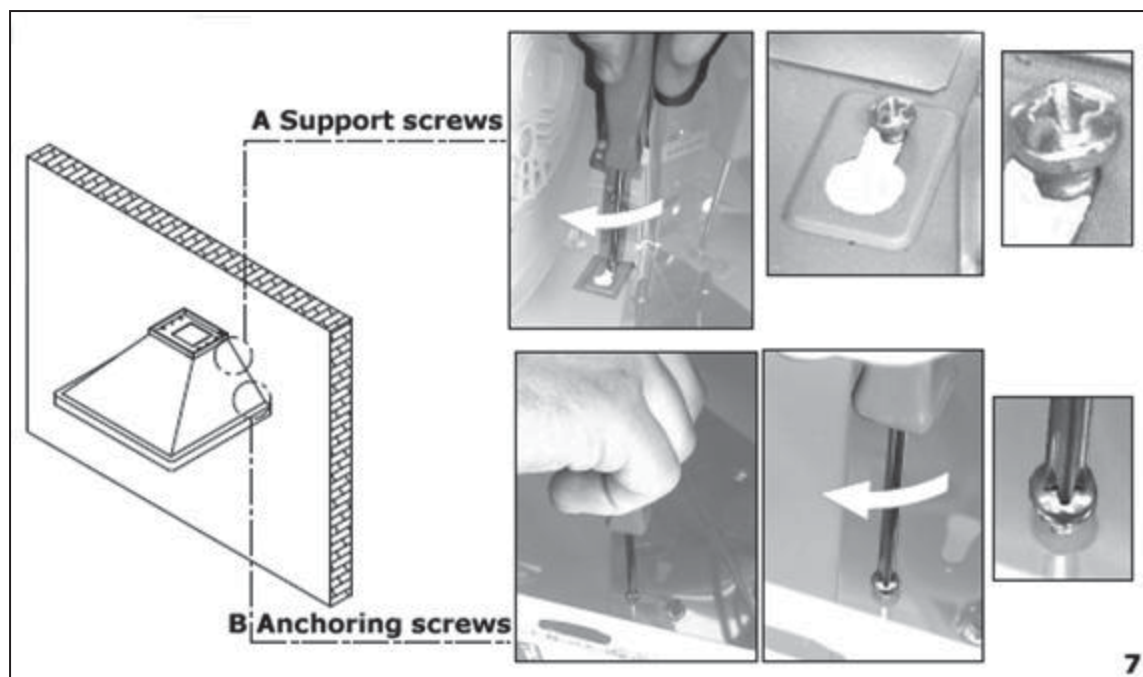

**7)** Fully tighten the support screws (**A**) and then screw the anchoring screws (**B**) through the relevant holes in the extractor. Fully tighten the anchoring screws into the wall.


## Connecting to external ducting

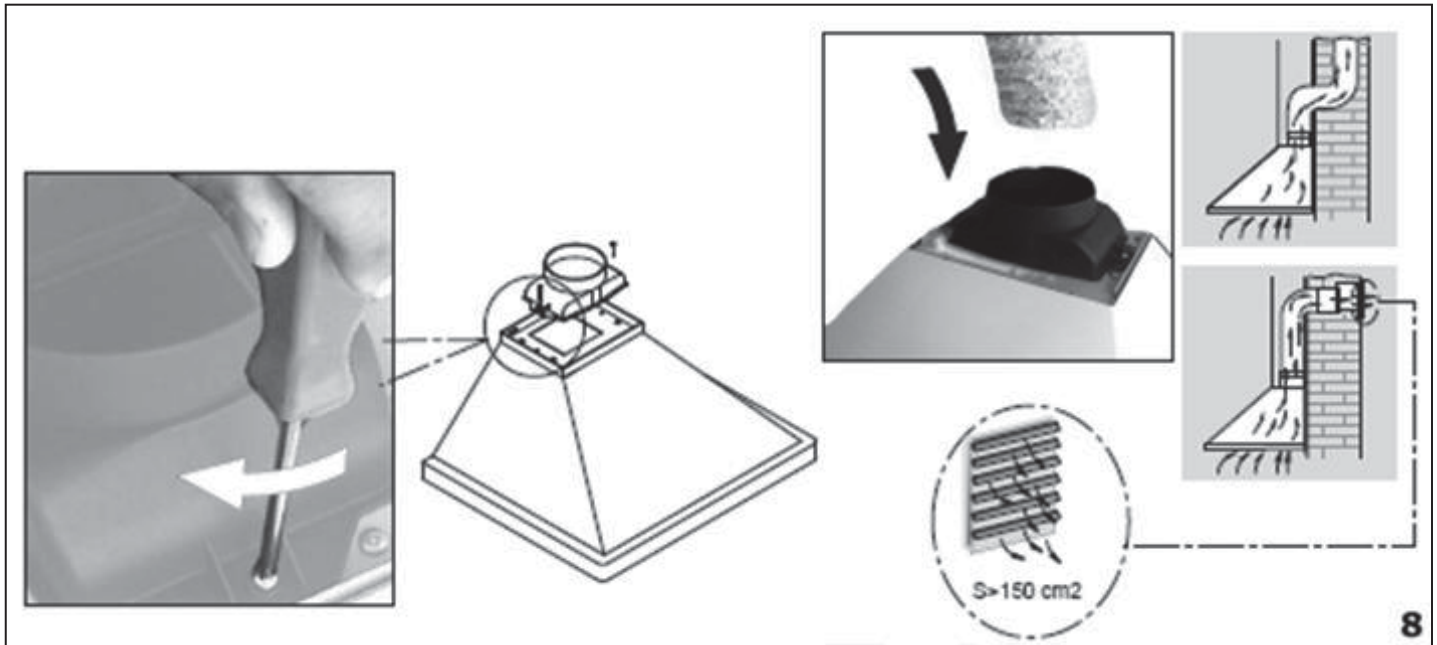

**8)** Connect the coupling to the top of the extractor, and then connect a 125 mm ducting hose to the coupling (please note that the ducting hose is not supplied with the appliance).


- o The other end of the ducting hose should be connected to a discharge outlet that is suitable for cooking vapours. It should have a cross section of at least 150 cm<sup>2</sup>.
- o The maximum distance between the coupling and your discharge outlet should be 3 metres, with one 90 degree bend. For each additional 90 degree bend, the maximum distance is reduced by a further metre.

## Fitting the chimney

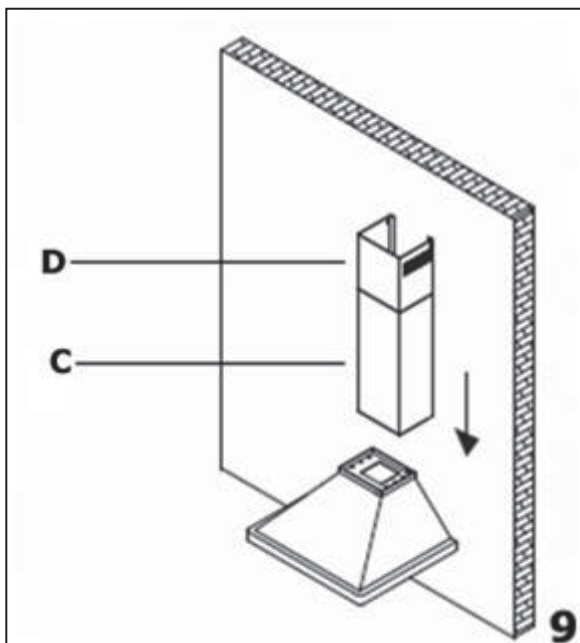


**9)** Take the two chimney sections (**C**) and (**D**).

- o Rest the bottom of chimney section (**C**) on the top of the extractor. You should take care to position the tabs on the chimney section into the rear of the extractor.
- o Mark the side measurement of both sides of chimney section (**C**) on the wall with a pencil.

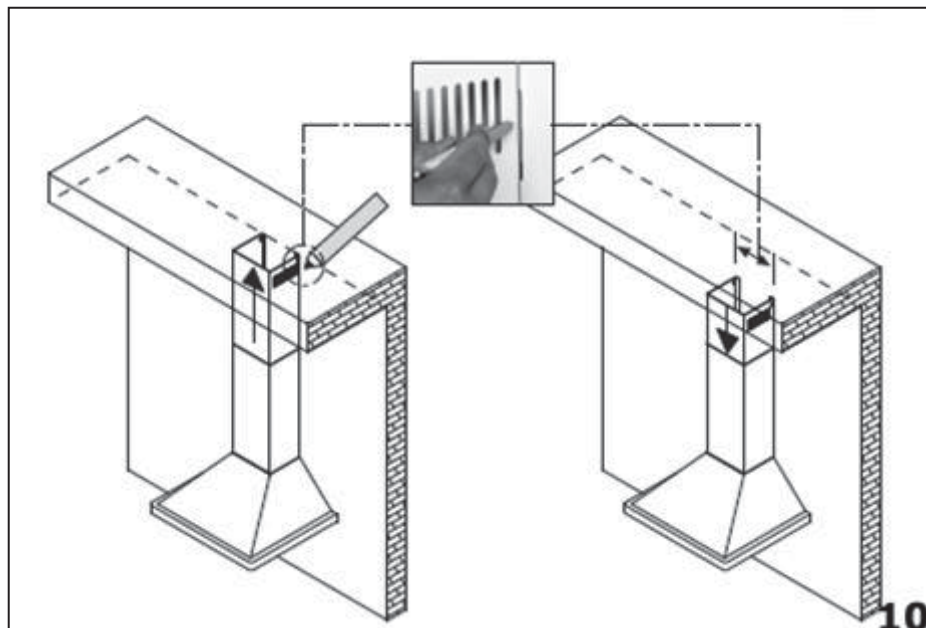


**10)** Lift chimney section **(D)** upwards until it reaches the ceiling. You must ensure that it is perpendicular to the extractor.

- o Mark the side measurements of both sides of chimney section **(D)** on the wall with a pencil and then remove chimney section **(D)**.

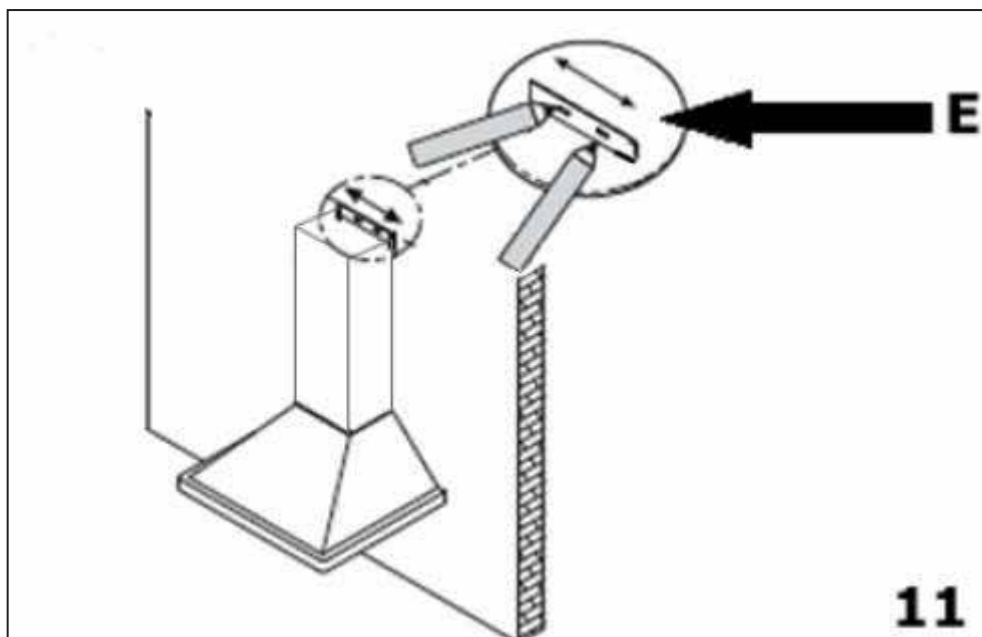


**11)** Take the flat bracket **(E)** and place it between the two pencil marks that you made in step 9

- o Keeping the bracket in contact with the wall, use a pencil to mark on the wall the anchoring holes that are cut out of the bracket.

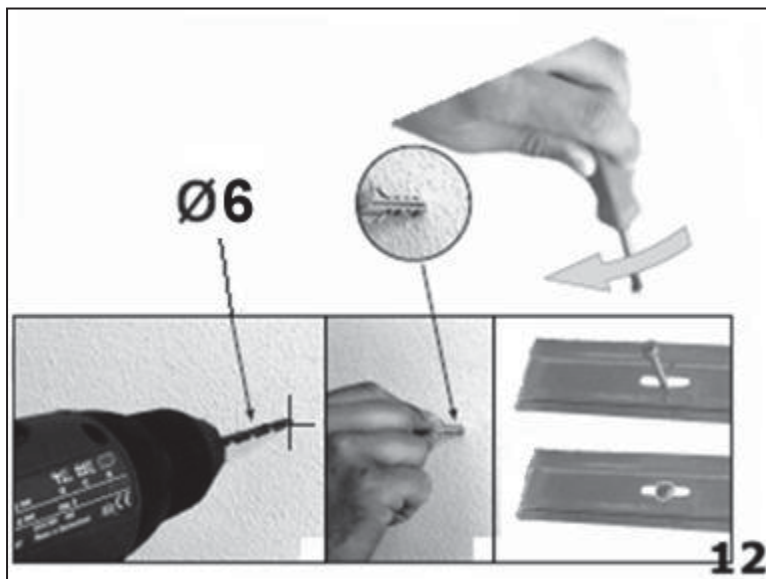

**12)** Using a 6 mm drill bit, drill out two holes on the pencil markings that you made in step 11. Insert rawl plugs into the holes and then use a screwdriver to secure the fixing bracket to the wall.

- o Refit chimney section **(C)** to the extractor and fix it using the two screws that are supplied.
- o Secure the top of chimney section **(C)** to the flat bracket, using the screws provided.

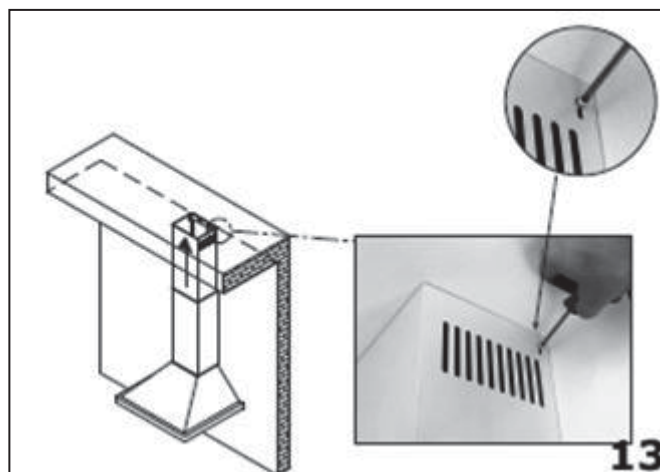

- o Slide chimney section **(D)** inside of chimney section **(C)**. Then secure the L shaped bracket to the wall, using the same method as you have just used to secure the lower bracket.

**13)** Lift chimney section **(D)** up to the ceiling and secure it to the L shaped bracket using the screws provided.

## Completing the installation

- o If you are setting the appliance to recirculation mode, then you should now fit the two carbon filters. See the “Fitting the carbon filters” section on page 13 - 14.
- o The electrical connection must correspond to the electrical requirement noted on the rating plate, which is placed inside the extractor. The appliance should now be connected to the electrical supply. See page 14 - 15 for detailed information on the electrical connection.
- o Use a stainless steel cleaner and polish on the stainless steel sections of the appliance.



- o Refit the grease filters and then switch on the mains supply to the appliance. Check that the appliance is operating correctly by selecting each speed and switching the light bulbs on and off.

## Extraction mode or recirculation mode?

### ***What is the difference between extraction and recirculation modes?***

- o To get optimum performance from your extractor, the air will be taken out of the room via external ducting.
- o Unfortunately if you live in a flat or the hood is too far from an outside wall, this may not be possible. The only alternative is to recirculate the air.
- o In recirculation mode stale air is taken via the grease filter, and passed through a charcoal filter for purification. The air then re-enters the kitchen via an opening in the extractor.

### ***What is a charcoal filter and do I need one?***

- o All extractors have grease filters but if you are using it hood in recirculation mode, then charcoal filters must be fitted in addition to the grease filters.
- o ***IMPORTANT:*** *If you are using the appliance in recirculation mode, then PLEASE NOTE that some of the vent in the upper chimney section must be exposed. You will have to take this into account when calculating the minimum height of the extractor when installed.*

**IMPORTANT:** *If your extractor appears not to be operating properly, please refer to the checklist below.*



***My extractor will not start.***

- o Check that the extractor is connected to the electricity supply
- o Check that the fan speed control is set correctly.



***My extractor is not working effectively.***

- o The fan speed is not set high enough
- o The grease filters are dirty and require cleaning.
- o The kitchen is not well ventilated enough.
- o If the extractor is set up for recirculation mode, check that the carbon filters do not need replacing.
- o If the extractor is set up for extraction mode, check that the ducting hose and discharge outlet are not blocked.



***My extractor has switched off during operation.***

- o The safety cut-out device has been tripped.
- o Turn off the hob and then wait for the safety cut-out device to reset.
- o **IMPORTANT:** *If you have installed your extractor too low, the safety cut-out device will frequently trip. Your extractor may become damaged if the safety cut-out device is tripped frequently.*



## **Your Guarantee**

YOUR APPLIANCE HAS THE BENEFIT OF A COMPREHENSIVE MANUFACTURER'S GUARANTEE WHICH COVERS THE COST OF BREAKDOWN REPAIRS. (DETAILS OF WHICH ARE SHOWN ON YOUR PROOF OF PURCHASE DOCUMENT).

- Any claim during the period of the guarantee (MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE)
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person.

(The guarantee in no way affects your statutory or legal rights)

## **What to do if you need to report a problem-**

Please ensure you have ready:

- The product's model & serial numbers
- Howdens Proof of Purchase document
- Your full contact details.

**Call the Lamona Service Line on 0845 00 60 006**







## Product Information

Commission Regulation (EU) No 66/2014

# LAMONA

|                     |                         |
|---------------------|-------------------------|
| Model               | HJA2480                 |
| AEC                 | 76.5 kWh/a              |
| f                   | 1.71                    |
| FDE <sub>hood</sub> | 8.5                     |
| EEl <sub>hood</sub> | 98.4                    |
| Q <sub>BEP</sub>    | 190.8 m <sup>3</sup> /h |
| P <sub>BEP</sub>    | 92 Pa                   |
| Q <sub>max</sub>    | 329.3 m <sup>3</sup> /h |
| W <sub>BEP</sub>    | 57.5 W                  |
| W <sub>L</sub>      | 56 W                    |
| E <sub>middle</sub> | 64 lux                  |
| P <sub>s</sub>      | -                       |
| P <sub>o</sub>      | 0.03 W                  |
| L <sub>WA</sub>     | 63 dB                   |

**Lamona Customer Care  
Telephone number (0845) 006 0006.**

**Lamona operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.**