

---

# Drinks Cooler (300mm)

LAM6911



User & Installation Guide

---

**LAMONA**  
Exclusive to Howdens Joinery Co.

---

Dear Customer,  
Congratulations on your choice of drinks cooler which has been designed to give you excellent service.

**The user manual will help you use your product quickly and safely.**

- Please make a note of your products serial number on the rear of this booklet, this is important should you have any after sales queries. The serial number can be found on the rear of the product.
- Please read this user manual before installing and using the appliance.
- Always follow the safety instructions.
- Keep this user manual within easy reach for future reference.
- Please read any other documents supplied with the product.

Explanation of symbols

Throughout this user manual the following symbols are used:



Important information or useful tips about usage.



Warning for possible hazards to health and property.



Warning possibility of electric shock.




This product and its packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose. Your product also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home. We thank you for doing your part to protect the environment.

# Index

|  |           |
|--|-----------|
| <b>01 - Before using the drinks cooler</b> | <b>04</b> |
| <b>02 - Safety</b>                         | <b>04</b> |
| General                                    | 04        |
| <b>03 - General information</b>            | <b>05</b> |
| Drinks cooler layout / control panel       | 05        |
| <b>04 - Operating your drinks cooler</b>   | <b>06</b> |
| Power On/Off control                       | 06        |
| Unlocking the control panel                | 06        |
| Interior light On/Off                      | 06        |
| Temperature display window                 | 06        |
| Temperature setting                        | 06        |
| Selecting between Fahrenheit & Celsius     | 06        |
| <b>05 - Care and maintenance</b>           | <b>07</b> |
| Cleaning your drinks cooler                | 07        |
| Power failure                              | 07        |
| Absence & holidays                         | 07        |
| Moving your drinks cooler                  | 07        |
| Shelves                                    | 07        |
| Energy saving tips                         | 07        |
| <b>06 - Installation</b>                   | <b>08</b> |
| Before installation                        | 08        |
| Integrated Installation                    | 08        |
| Installing the Handle                      | 09        |
| Reversing the Door Swing                   | 09        |
| Adjusting the plinth cover                 | 10        |
| Connection to the mains supply             | 10        |
| <b>07 - Troubleshooting</b>                | <b>11</b> |
| <b>08 - Your Guarantee</b>                 | <b>13</b> |

## 01 - Before using the Drinks Cooler

- Please remove all packaging, stickers and  from the products surface and clean the product surfaces with a damp cloth and mild detergent before using for the first time.
- We recommended that you leave you drinks cooler to stand for at least 24 hours before switching on to allow compressor oil to settle.

## 02 - Safety



This appliance is for domestic purposes only and is intended to be used exclusively for the storage of sealed bottled drinks. Commercial use or anything beyond it's intended purpose will void the guarantee.

The manufacturer shall not be liable for any damage caused by improper use or handling errors

### General

This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are supervised by a person who will be responsible for their safety or who will instruct them accordingly in the use of the product. Children must be supervised to prevent them from tampering with the product.

- Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
- To protect against the risk of electric shock, do not immerse the unit, cord, or plug in water or spray any other liquid nearby.
- Unplug the appliance from the plug socket when not in use, when moving from one location to another and before cleaning.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out by the cord.
- **Do not** operate the appliance in the presence of explosive or flammable gases.
- **Do not** place the appliance or any of its parts near an open flame, cooking or other heating appliance.
- **Do not** use outdoors.
- **Do not** operate the appliance with a damaged cord or plug, if the product malfunctions, or if it is dropped or damaged in any manner.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Place the unit on a dry level surface.
- **Do not** operate if the housing is removed or damaged.
- A loose fit between socket and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace any loose or worn sockets.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- This appliance is CFC and HFC free.
- Ensure that the ventilation openings to and from a built-in appliance are never blocked or covered and keep children and animals away from the slots.
- No liability will be accepted for any damage incurred owing to misuse of the appliance or as a result of repairs carried out by unqualified personnel. In this case neither the guarantee nor any other liability claims will apply.




**Do not** operate any electrical appliance inside the Drinks Cooler.



To reduce the risk of fire electric shock or personal injury, unplug or disconnect the appliance from the power supply before moving or cleaning the appliance.

## 03 - General Information

### Drinks cooler layout / control panel

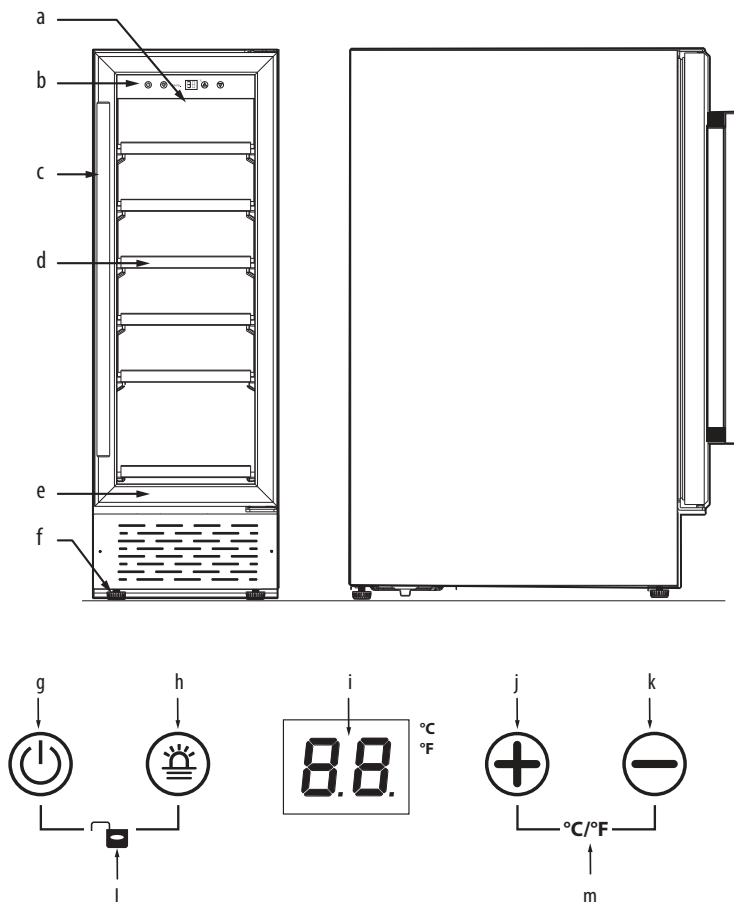

#### Features

- a. Interior LED Light
- b. Digital control panel
- c. Handle
- d. Shelf
- e. Door
- f. Adjustable feet

#### Control Panel

- g. Power
- h. Lighting
- i. Display window
- j. Temperature up
- k. Temperature down
- l. Lock / unlock
- m. / terchange


#### Dimensions


- Height. 870 - 890mm
- Width. 150mm
- Depth 570mm (inc handle)

## 04 - Operating Your Drinks Cooler

 For your drinks cooler work at optimum efficiency it is recommended that the product is installed in a domestic environment where the ambient temperature is maintained between 22-25°C (72-77°F)



If the ambient temperature is above or below the recommended range, (for example; extreme hot or cold conditions) this may cause interior temperatures to fluctuate, and the temperature range of 5-22°C may not be reached.

 The Drinks Cooler will run continuously until the required temperature range is achieved. This is quite normal and not a cause for concern.



 When you use the Drinks Cooler for the first time or restart the Drinks Cooler after having been turned off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the Drinks Cooler is running for a few hours everything will be back to normal.

If the unit is unplugged, power lost, or turned off it is recommended you wait 3 to 5 minutes before restarting the unit.

### Power On/Off Control


- When the appliance is plugged in to a power outlet, it powers on automatically.
- Touch the power mark  and hold for 10 seconds to turn off (or turn on) the appliance.
- No matter if it is under a locked or unlocked situation, you can turn off the appliance by touching the power mark  and holding for 10 seconds.

### Unlocking the Control Panel

- To unlock the control panel, touch the power mark  and lighting mark  with 2 fingers at the same time and hold for 3 seconds. When unlocked a **Beep** sound will be heard.

- The control panel will be automatically locked with a **Beep** sound heard after 10 seconds without being touched.
- Under the locked situation, the control panel will not react to any touching order for Lighting On/Off and Temperature Setting.






 
### Interior light On/Off control

- Under the unlocked situation, touch the light mark  to turn on (or turn off) the interior cool LED light
- The light will be continuously on if it is not turned off.



### Temperature display window

- The numbers in the digital display reflects the current temperature within the cooler. When setting or adjusting the temperature the desired temperature will be displayed for 10 seconds before returning back to the products current temperature.

### Temperature setting

- The temperature setting range is 5-22°C
- Directly touch the  or  to set the drinks temperature that you would like.
- The first touch on  or  will recall the previous set temperature displayed in the digital window. If the appliance runs after a power failure (or unplugging), the previous set temperature does not exist and is replaced by the default temperature of 12°C
- Touch the  to increase the set temperature by 1°C and touch the  to decrease the set temperature by 1°C
- The digital number will change to display the temperature inside the cabinet after 10 seconds without being touched.

### Selecting between fahrenheit & celsius display.

- Touch the   with 2 fingers at the same time and hold for 5 seconds, you can interchange the Fahrenheit and Celsius display.

## 05 - Care and Maintenance

### Cleaning Your Drinks Cooler

- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- To remove any of the shelves from the compartment, open the door fully and slide them out carefully taking care not to lose the anti-vibration pads. Please ensure these are replaced when the shelf is put back (For further information please refer to the **Shelves** section listed below)
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a litre of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning any area of the controls.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

### Power Failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents

### Absence & Holidays

- For short holidays, leave the Drinks Cooler in operation for periods of less than three weeks
- For long absences or if the appliance will not be used for several months, remove all items, turn off the appliance and unplug. Clean and dry the interior thoroughly. To prevent odours and mould growth, leave the door open slightly: blocking it open if necessary.

### Moving Your Drinks Cooler

- Remove all items.
- Securely tape down any loose items (shelves) inside your appliance.
- Turn the adjustable legs up to the base to avoid damage.
- Tape the door shut.
- Protect the outside of the appliance with a blanket, or similar item.

### Shelves

- To prevent damaging the door gasket, make sure the door is fully opened when pulling shelves out of the compartment. (You may need to pull the cooler forward to remove shelves once it has been installed depending upon size of unit gap)
- The shelves are designed for 75cl Bordeaux bottle storage. The maximum loaded amount of bottles may vary according to the different size or dimensions of bottles you store.


### Energy Saving Tips


- The Drinks Cooler should be located in the coolest area of the room, away from heat producing appliances, and out of direct sunlight.
- Ensure that the unit is adequately ventilated. Never cover air vents.
- Only open the door for as long as necessary.

# 06 - Installation


## Before installation

The product should only be installed by a suitably competent person.

 The product must be installed in accordance with all local regulations.

 Prior to installation, visually check the product for any damage/defects. Do not install if any issues are found.

Damaged products may cause risks to your own safety.

 **Let the appliance stand upright for approximately 24 hours before connecting it to the power source. This helps to reduce the possibility of a cooling-system malfunction from handling during transportation.**


The appliance is intended for installation in Howdens kitchen cabinets.

Kitchen cabinets must be set level and fixed.


The following installation drawings are representational and may not match exactly with your appliance.

## Integrated Installation

When integrating your Drinks Cooler into a fitted kitchen sufficient space is required to allow the Drinks Cooler to be fully ventilated and for the door to be opened fully. The appliance may need to be positioned off centre to overcome any door collision issues.

 Ensure your cabinet aperture meets the minimum dimensions listed below.

| CABINET OPENING DIMENSIONS |              |
|----------------------------|--------------|
|                            | mm (Minimum) |
| Height                     | 870          |
| Width                      | 305          |
| Depth                      | 525          |

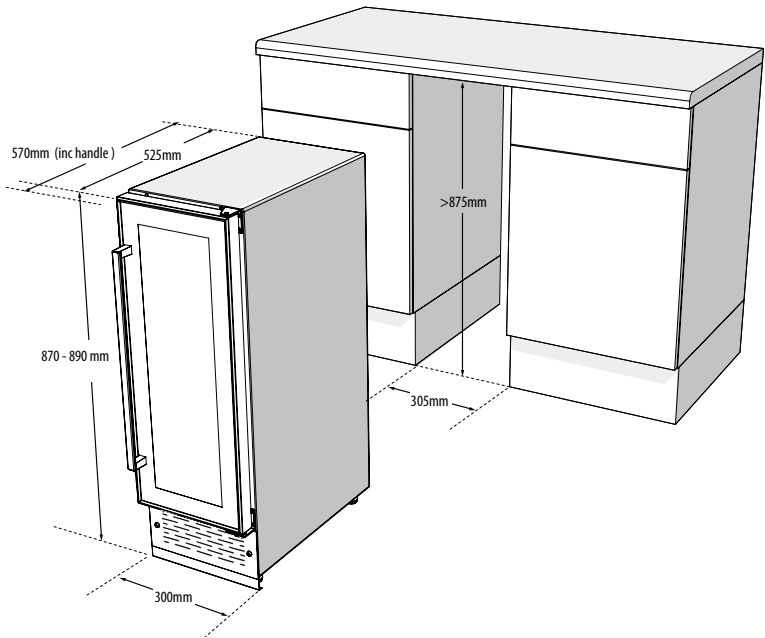




## Installing the Handle

Gently pull the door gasket to one side to reveal the two designated holes for handle installation.

Install the handle tightly as shown below with the two screws, and washers provided.

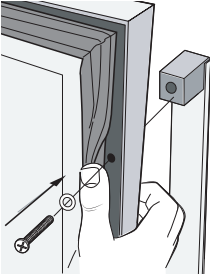


## Reversing the Door Swing

This Drinks Cooler door can open from either the left or right-hand side. The unit is delivered with the door opening from the left-hand side. Should you wish to reverse the door swing, please follow the reversal instructions below.


**⚠** All parts removed must be saved to reinstall the door

Open the glass door and remove the two screws (1), under the right bottom corner of the glass door, that are used to hold the right lower hinge (2), to the door shaft assembly (3). Be careful to support the glass door with both hands to prevent it dropping after removing the screws.

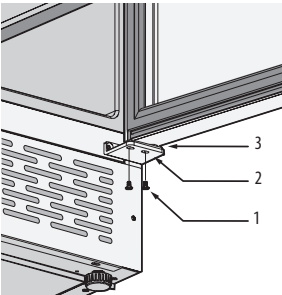


Pull down to remove the glass door and place it on a padded surface to prevent scratching it.

Remove the right top hinge (4), and right lower hinge (2).

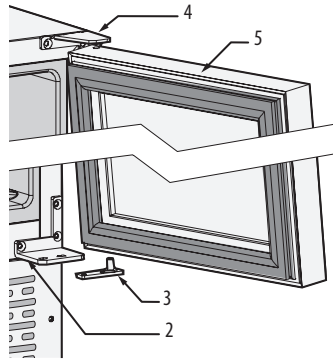


Remove the left top hinge (7), and left lower hinge (8) from the component bag that includes the instruction manual then install them at the designated positions at the left side of the cabinet (pictured below)

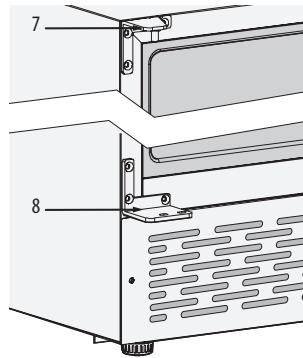

Turn the glass door 180° and reinstall

## Adjusting The Plinth Cover

- The adjustable plinth cover is located behind the louvered plinth, and is held in position by two screws.
- Loosen the two screws. Slide the adjustable plinth down to cover the gap between the wine cooler and the floor.
- Retighten the screws.

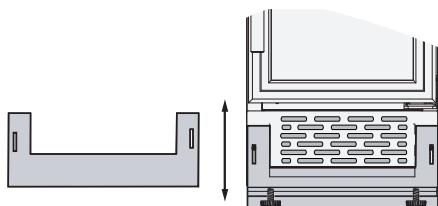

## Connection to the mains supply

Check that the voltage marked on the product corresponds with your supply voltage.



This Appliance Must Be Earthed




The wires in the mains lead are coloured in accordance with the following code:

GREEN / YELLOW □ EARTH


BLUE □ NEUTRAL

BROWN- LIVE

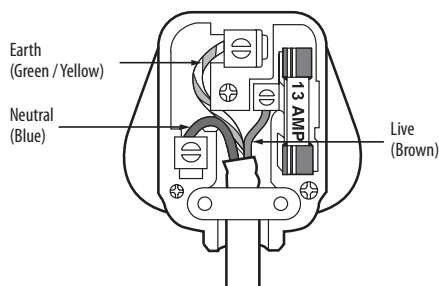

This appliance is fitted with a plug which has a 13 amp fuse. Should the fuse fail, then it must be replaced with an ASTA approved fuse (conforming to BS1362) of the same rating. If you need to replace

the plug or if the plug is incorrect for your type of socket, remove it and replace it with an appropriate plug. Dispose of the old plug safely.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The **GREEN / YELLOW** wire is the **EARTH** and must be connected to the terminal which is marked with the letter **E** or by the earth symbol .

The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.

The **BROWN** wire is the **LIVE** wire and must be connected to the terminal which is marked with the Letter **L** or coloured **RED**.

Always ensure that the plug cord grip is fastened correctly, if in doubt consult a qualified electrician who will be pleased to do this for you. This product conforms to EC Directive 92/31/EEC with respect to Electromagnetic Compatibility.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead, you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier. Should the fuse need replacing, you must use an ASTA approved one (conforming to BS1382) of the same rating.


 


If the fuse cover is lost, the plug must not be used until a replacement is obtained from an electrical supplier.



If you need to remove the plug, cut it from the mains lead and immediately dispose of it. Never attempt to re-use this plug or insert it into a socket outlet as there is a very great risk of an electric shock.

## 07 - Troubleshooting

### TROUBLESHOOTING GUIDE

| Symptoms   | Possible Cause  | Solutions  |
|--|---|--|
| <b>No cooling</b>  | <ul style="list-style-type: none"> <li>• Plug not put in correctly</li> <li>• Low voltage</li> <li>• Fuse blown</li> </ul>  | <p>Ensure the plug is in and the socket is switched on</p> <p>Ensure normal voltage</p> <p>Replace the fuse with the recommended AMP rating</p>  |
| <b>Temperature inside is not cold enough</b>   | <ul style="list-style-type: none"> <li>• The Drinks Cooler is placed too close to a heat source</li> <li>• Bad ventilation</li> <li>• The door is not closed tightly, or opened too frequently or for too long</li> </ul>   | <p>Keep the Drinks Cooler away from sunshine or other heat sources .</p> <p>Place the Drinks Cooler in an area with good ventilation and keep objects away from the fans</p> <p>Close the door tightly and do not open the door too frequently or for too long.</p>                                    |
| <b>Strange smell inside the Drinks Cooler</b>  | <ul style="list-style-type: none"> <li>• Check contents for anything sour or perishable.</li> </ul>   | <p>Remove any perishable items and clean thoroughly.</p>   |
| <b>Display light flashes</b>   | <ul style="list-style-type: none"> <li>• The set temperature is higher than the inner temperature of the Drinks Cooler</li> <li>• The Drinks Cooler is defrosting</li> </ul>  | <p>Adjust the temperature accordingly</p> <p>This is a normal automatic function, and no repair is needed</p>  |
| <b>Frost is forming on the cooling surface</b>   | <ul style="list-style-type: none"> <li>• There may be too much humidity or the temperature is too low inside the case.</li> </ul>   | <p>Disconnect the power to the Drinks Cooler and defrost manually, reconnect the power once the frost has thawed.</p>  |
| <b>The Drinks Cooler seems to make noises</b>  | <ul style="list-style-type: none"> <li>• Noises may come from the working of the compressor or refrigerant, which is normal.</li> <li>• As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant.</li> <li>• Contraction and expansion of the inside walls may cause popping and crackling noises.</li> </ul> | <p>Some noises are normal and no cause for concern however you may wish to try the following:</p> <ul style="list-style-type: none"> <li>• Check to assure that the appliance is level and not touching the surrounding cabinetry.</li> <li>• Ensure no parts within the product are loose.</li> </ul> |
| <b>The door will not close properly.</b>   | <ul style="list-style-type: none"> <li>• The drinks cooler is not level</li> <li>• The door gasket may dirty.</li> <li>• The shelves or bottles may be misaligned</li> </ul>  | <p>Adjust the products feet to ensure the product is level</p> <p>Clean the door gasket with warm water</p> <ul style="list-style-type: none"> <li>• Re-adjust the shelves</li> </ul>  |
| <b>The display window is shown with  or  instead of a digital figure, and/or with continuous /buzz  sound.</b> | <ul style="list-style-type: none"> <li>• The temperature probe is out of order.</li> </ul>  | <p>Consult your authorized service agent.</p>  |



If you cannot eliminate the problem after following the instructions in this section, consult your depot or the authorized service agent. Never try to repair a nonfunctional product yourself.

## 08 - Your guarantee

### Product Guarantee Details (UK only)

---

**Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).**

- Any claim during the period of the guarantee (MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE)
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person.

**(The guarantee in no way affects your statutory or legal rights)**

**What to do if you need to report a problem-**

**Please ensure you have ready:**

- **The product's model & serial numbers**
- **Howdens Proof of Purchase document**
- **Your full contact details**



**Call the Service Line on 0845 00 60 006**



## Notes





If supplied, please stick your self adhesive product rating plate here, or make a note of the product serial number below in the box below for future reference.

Serial Number : .....



**HOWDENS** JOINERY CO.

MAKING SPACE MORE VALUABLE



This brochure is printed on FSC certified paper