



C195/53 Integrated Fridge Freezer

INSTRUCTIONS FOR USE

Caple Quality Products
Consumer Help Line 0870 2411142

Thank you for purchasing this Caple appliance which, if these instructions are followed, will give you many years trouble free service.

Please keep these instructions for use close at hand and available to anyone other than yourself who may use the appliance. By following all the recommendations made in the instructions you will be able to make the best possible use of your new appliance's facilities.

Should you have any queries on this product, please call our Customer Service desk on: 0870 2411142

Please be ready to supply details of your appliance. We will need to know the Model Number and Serial number. You will find these details on the data badge which is attached to the inside cabinet.

GUARANTEE

This appliance is guaranteed for a period of 12 months against faulty materials. In the unlikely event of a service engineer being required please call our help desk on 0870 2411142. You will need to provide the engineer with a copy of the invoice to confirm date of purchase. Without this information work will be on a chargeable basis.

This appliance is designed for domestic use only. Use for any other purpose will invalidate any warranty claim.

The manufacturer declines all liability for any direct or indirect damage if these regulations are not complied with.

SAFETY WARNINGS

Read them attentively, before installing and using the appliance.

- Always keep the instruction handbook. Should the appliance be sold, pass it on to its new owner.
- The appliance must be used only for household cool storage and/or freezing of foods.
- Packaging materials, such as plastic bags, polystyrene and plastic clasps, must not be kept within children's reach, as they are potential sources of danger.
- Do not let children play with the appliance e.g. by sitting in the drawers, rocking or clinging onto the door. The refrigerator might overturn, or some objects placed on top might fall.
- Do not use the plinth, drawers, and doors, wire shelves as a footboard or support.
- Take care not to damage the pipes of the cooling circuit while placing, installing and cleaning the appliance.
- Make sure that no electric appliances or components are installed near the vents. (E.g. fans, switches, power sockets etc.)
- After installing the appliance make sure that it does not stand on the power cable.
- We suggest you do not use extension leads or multiple plugs to plug the refrigerator to the mains (line).
- Before commencing any cleaning and maintenance jobs, unplug the appliance or switch off the main power switch of the local power system.
- To unplug the appliance from the mains power supply, remove the plug. without pulling its power cable.
- Do not place liquids in glass containers in the deep-freeze compartment because they might explode.
- Prevent all fires or sparks inside the appliance.
- Do not consume foodstuffs when their maximum storage date has expired, as they might cause food poisoning.
- Do not block the vent slits or grilles required in the appliance or in the enclosing cabinet.
- While defrosting never use metal objects to speed the defrost process. Failure to heed this warning might lead to irreparable damage to the refrigerating circuit.
- Do not use electric appliances (such as ice cream machines, deodorizers etc) inside the appliance.
- All maintenance, including replacing the power cable, must be carried out by the technical support service. Otherwise the user might cause serious hazards.
- This appliance is designed to food-grade standards and conforms with European directive 89/109/EU. This appliance has been developed, manufactured and marketed in compliance with: Low voltage directive 73/23/EU Directive EMC 89/336/EU Marking directive CE 93/68/EU. Energy efficiency directive 96/57/EU

ENVIRONMENTAL INFORMATION

- This appliance has been designed and manufactured to optimize environmental protection measures.
- To ensure the same environmental friendliness when the appliance is dismantled, as it contains some pollutants or flammable materials such as the compressor lubricating oil, we suggest that you never dispose of the appliance haphazardly and contact local authorised pickup and disposal specialist.
- Do not throw the packaging of your appliance straight into the bin, sort the various materials (e.g. polystyrene, cardboard, plastic bags) according to local waste disposal guidelines and effective regulations.
- This appliance is CFC-free (the refrigerating circuit contains R134a) or HFC-free (the refrigerating circuit contains R600a ISOBUTANE). To check the gases used refer to the specification plate on the appliance.
- For appliances with ISOBUTANE (R600a) ISO-butane is an environmentally friendly but flammable natural gas. Therefore, it is important to ensure that the refrigerating circuit tubes are not damaged, before connecting the appliance to the mains power supply.

INSTALLATION

Two workers, so as not to injure people or damage things, should install the appliance.

If damage occurs while the appliance is being dispatched, advise the supplier immediately before connecting it.

Read the climatic class of the appliance on the specification plate located on the inner left side: -

- If: iSNi (works at ambient temperatures ranging) from +10°C to +32°C
- If: iNi (works at ambient temperatures ranging) from +16°C to +32°C
- If: iSTi (works at ambient temperatures ranging) from +18°C to +38°C
- If: iTi (works at ambient temperatures ranging) from +18°C to +43°C.

Install the appliance in a dry and well-aired place, away from heat sources, such as radiators, stoves, cookers, sunrays etc.

The appliance must be installed on stable and flat surface, by adjusting the feet, if any.

A gap of at least 20mm and 100mm must be left between the rear of the appliance and the wall towards any wall-mounted units above the appliance.

Do not place on the refrigerator/freezer any heat-emitting appliances such as: microwave ovens, toasters etc.

Should the refrigerator be enclosed, in the kitchen cabinet make sure airing gap A is at least 200 cm³, and the venting duct on the rear of the cabinet is at least 50mm deep, follow the instructions in the figures about installation.

Make sure that no appliances or electric components are installed near the vents

CAUTION

Easy access must be provided to the appliance power socket so that it can be unplugged if necessary. If this cannot be done, connect the appliance to the mains (line) via a two-way switch with an opening contact of at least 3 mm, located in an accessible place.

ELECTRICAL CONNECTION

The appliance must be by law, plugged into a socket fitted with an earth (ground) contact. Therefore the appliance is supplied with an earthed plug that must be plugged into a compatible socket. The manufacturer declines all responsibility for any injuries or damage caused by the non-compliance with this regulation.

Check the voltage shown on the specification plate located on the inner left side of the unit, and make sure that it matches the mains voltage.

How to replace the internal lamp bulb:

Remove the power plug or switch off the main power switch of the local electric system before replacing the bulb. Use only bulbs with a power equal to the value given on the bulb guard (e.g. max 15W).

GETTING TO KNOW THE APPLIANCE.

The refrigerator you have purchased, with model variations, is designed to store fresh foods and, if supplied with a Deepfreeze compartment it can store frozen foods and freeze fresh foods (see paragraph on freezing).

Temperature control.

The thermostat lets you regulate the temperature gradually.

- Setting 0 means appliance off.
- Setting 1 means minimum operation.
- Setting 7 means maximum operation.

Remember that thermostat regulations are sensitive to variations owing to the ambient temperature, amount of stored food, location and how often the doors are opened.

By experience you will learn the best regulation for your needs.

The space inside the refrigerator can be organized varyingly by moving the wire shelves and solid shelves to suit your requirements. To move the shelves, lift the rear, pull them forwards until the front slides out of the runners, turn them down and pull them out fully, select the required position and insert the shelf by repeating the above steps in reverse order.

FOOD STORAGE

In the refrigerator compartment the temperature varies from section to section.

The coldest sections are immediately above the fruit and vegetable drawers, next to the rear wall.

In the deep-freeze compartment where temperatures reach -18°C , frozen foods can be stored for several months. We suggest the thermostat be set to settings 4 to 5.

The storage time of frozen foods is usually indicated on the package.

If a product starts to defrost it must not under any circumstances be refrozen and must be consumed as soon as possible. Every drawer and every cooling plate can bear a maximum distributed load of 20 kg.

To optimize preservation of aromas, substance and freshness, we suggest food be wrapped in aluminum foil or polythene film and/or placed in special containers with lids.

CAUTION:

Do not place glass containers with liquids in the deep-freeze compartment or hot foods in the refrigerator compartment.

Foodstuffs that tend to absorb odors and tastes, liquids and foods with high alcoholic proof, must be stored in airtight containers and stood upright.

ICE CUBE PRODUCTION

Only per freezers and appliances with a deep-freeze compartment.

Fill the special containers three quarters with water and place them in the compartment.

Should the pans stick on the bottom of the compartment as they freeze, do not try to remove them with sharp or pointed objects, as this might damage the appliance, instead use a spoon handle.

CAUTION: Do not eat ice cubes or ice-lollies immediately after removing them as they might cause frozen burns.

FREEZING GUIDELINES

Only for appliances without a quick-freeze button.

- Prevent the foods you wish to freeze from contacting any pre-frozen items.
- Always insert dry packages to stop many packages from freezing together into a single block.
- Always split foods into portions so they can be quickly frozen.
- To freeze the maximum amount of foodstuffs shown on the specification plate follow the guidelines below.
- Turn the thermostat knob to settings 4 to 5, 24 hours before freezing.
- Spread the foodstuffs on the top shelf (where provided) and do not open the door unnecessarily. If required, open it only briefly.
- 26 hours after freezing started, turn the thermostat knob back to the required setting.

DEFROSTING OF THE APPLIANCE

If the refrigerator does not have a deep-freeze compartment, defrosting will occur automatically. While defrosting water drops run down the rear wall of the unit. The water is conveyed along a raceway and flows onto the tub located on the compressor where it evaporates.

If the refrigerator is equipped with a deep-freeze compartment, we suggest you periodically wipe excess hoarfrost from the inside and/or wire cooling shelves (3/4mm) to minimize electricity consumption.

Never use sharp objects or metal tools, humidifiers, heaters, hair-dryers, antifreeze spray for this operation. They might damage the refrigerating circuit irreparably and pose a hazard in appliances operating with R600a.

Take the following steps to defrost: -

- Unplug the appliance or switch off the main power switch.
- Take foods out of the deep-freeze compartment.
- Turn the thermostat to setting 0.
- Wipe up the water produced by defrosting with a sponge or cloth.
- Dry the walls and/or wire cooling shelves Plug in the appliance, turn the thermostat as required (Refer to the paragraph entitled "Getting to know the appliance").

MAINTENANCE AND CLEANING

Unplug the appliance before commencing any kind of maintenance.

- To clean the inside of the appliance and accessories we suggest you use a water and vinegar solution; never use abrasives, detergents or soap.
- The shelves are attached to the sides of the doorframe.
- Clean periodically the water drain hole, located on the rear wall with a ramrod or a blunt stick.
- Clean the door gasket with water and dry carefully.
- What to do when the appliance is idle: If the appliance must be idle for a long period of time, unplug and empty it, clean the inside and leave the door open (to prevent bad odors).

BUILDING-IN INSTRUCTIONS

Fitting the appliance into the enclosing cabinet: Fig. 1-Fig 2a-Fig 2b.

- Check that the dimensions of the enclosing cabinet and appliance are compatible.
- If necessary, mount plastic beam B on the upper frame C made of sheet steel.
- Position the appliance by aligning the upper frame C (or the plastic beam B) with the corner of the enclosing cabinet. Shorten strip D to height of the notch and mount it with its adhesive side glued to the wall of the appliance.
- Push the appliance against the cabinet wall to press in strip D and tighten the top and bottom fastening screws.
- Mount the brackets for runner E on the outside of the appliance door (using the existing holes) and with the doors fully open, fit the door runner F on the cabinet door. - Adjust the coupling between the appliance door and cabinet door and cover the runner screws with special adhesive caps.

REVERSING THE DOORS

- Remove the caps of pin R from the top and bottom left hinge.
- Remove the caps of the top and bottom door heads and replace them with the sleeves supplied.
- Close the appliance door, loosen side screws S used to lock pins T Then slide the lock pins into their hinges. Then remember to fasten them.
- Move the plastic-adjusting washers, making sure you do not reverse the numbers between the top and bottom hinges.
- Loosen the side screws used to support the left hinge pins. Then slide the hinge pins into the previously fitted door head sleeves and remember to insert the adjusting washers and fit the pins.

NB: The material supplied is contained in the bag placed in the vegetable drawers.

REVERSIBLE FREEZER COMPARTMENT DOOR (IF SUPPLIED)

- Detach doorstopper Y, hinge bracket X and remove the door.
- Remove the 4 hole caps (2 on the right and 2 on the left)
- Fit doorstopper Y on the right side of the appliance.
- Turn over and insert the door with its handle on the right.
- Turn over and mount hinge bracket X on the left.
- Seal the remaining holes using the 4 caps that you removed.

TECHNICAL SUPPORT

Irregular operation is not always caused by a defect in the appliance, but rather by bad installation or misuse. To avoid unnecessary maintenance jobs and expenses incurred by calling technical support, we suggest you follow the guidelines below : -

The internal temperature is not cold enough.

Check: -

The door closes perfectly.

The thermostat is correctly positioned.

The refrigerator is not near any heat sources.

The refrigerator is not leaning against the walls and air circulates freely.

There is no excess hoarfrost in the deep-freeze compartment.

The internal temperature is too cold

Check: -

The thermostat is turned to the correcting setting.

The appliance is too noisy.

Check: -

The appliance is properly leveled.

The rear coil does not touch the back wall.

The appliance does not work at all.

Check: -

The thermostat is not set to 0.

Power supply is not disconnected.

The plug has a firm contact in the wall socket.

The power cable is not broken (see "Caution" paragraph).

Some water seeps out of the refrigerator.

Check: -

The drainage circuit.

The compressor evaporation tub is full of residues and must be cleaned.

If normal operation cannot be achieved after completing the above checks, contact your nearest service centre. Please see back page for details.

The manufacturer shall not be held responsible for any damages that may, directly or indirectly, be caused by persons, pets or things, resulting from the failure to comply with all the guidelines given in the instruction handbook. These especially concern precautions to be taken during installation, operation and maintenance. The manufacturer also reserves the right to make any changes that may be deemed appropriate for technical refinement or commercial development at any time and without having to give prior notice.

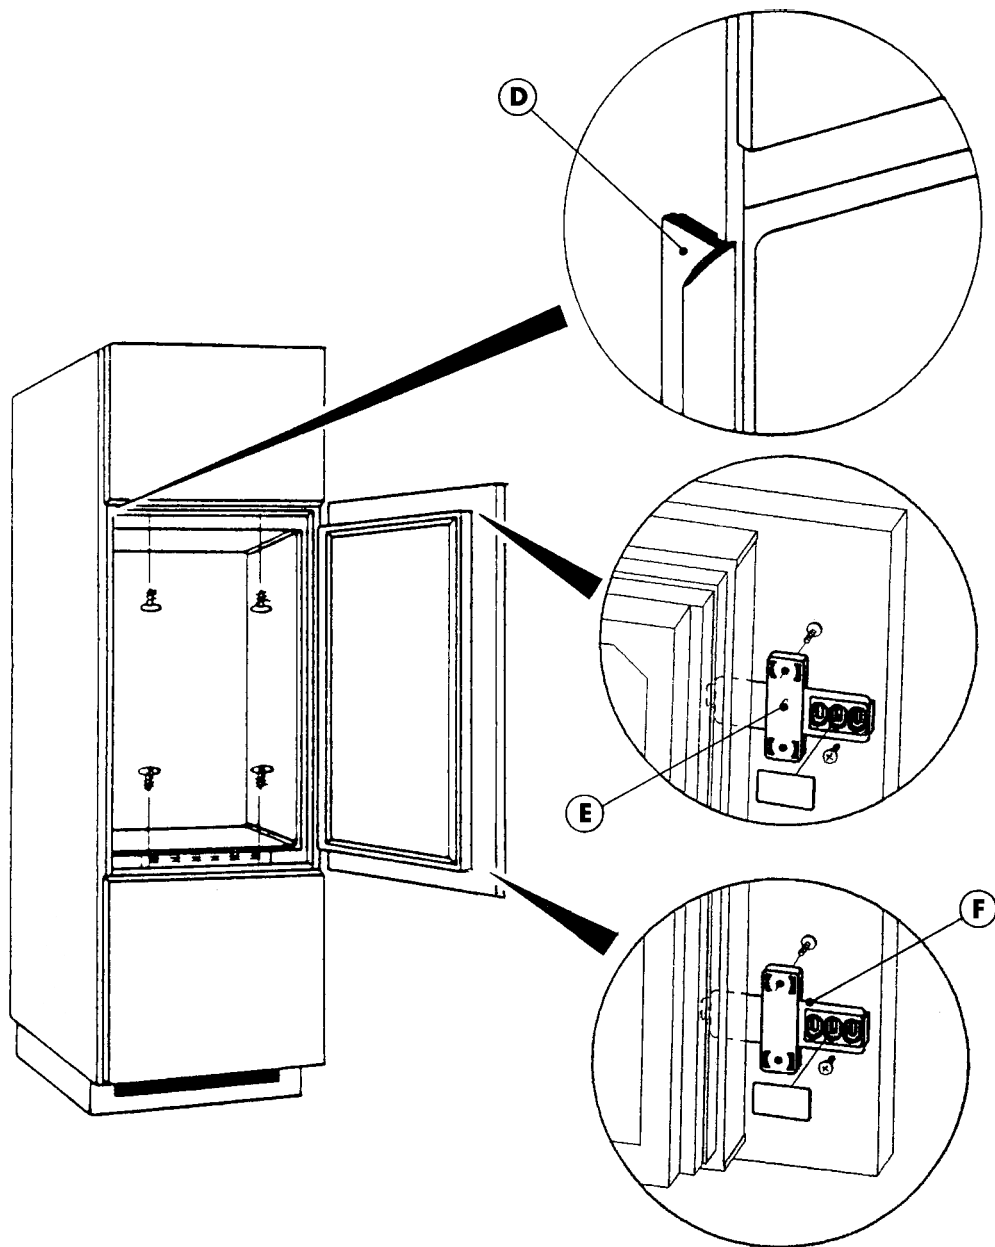


Fig. 2b

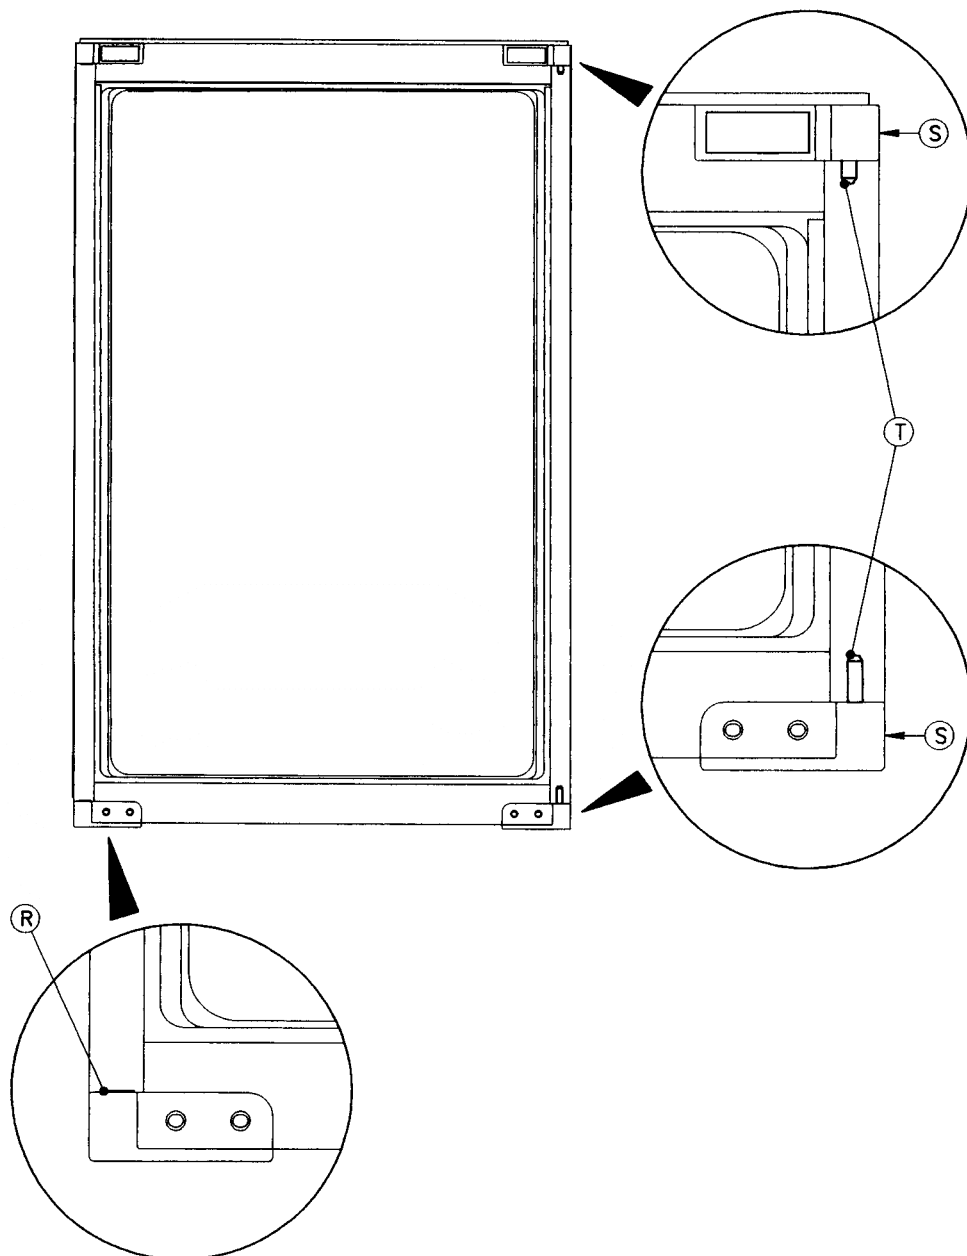


Fig. 3

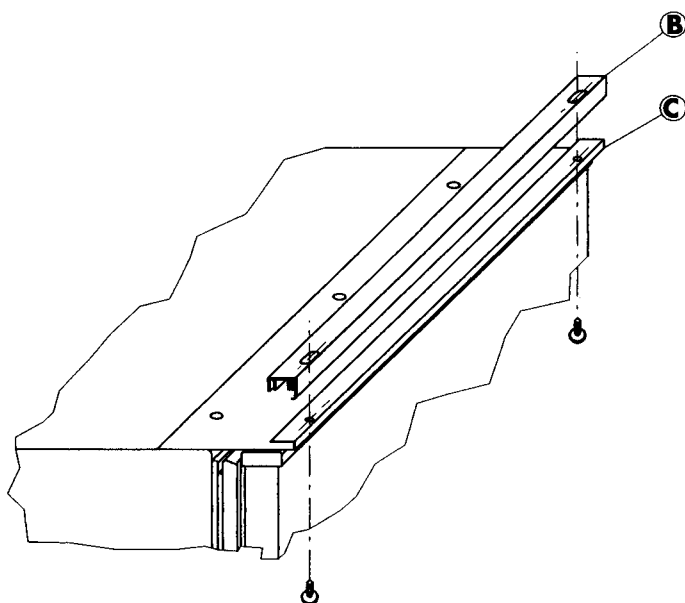


Fig. 2a

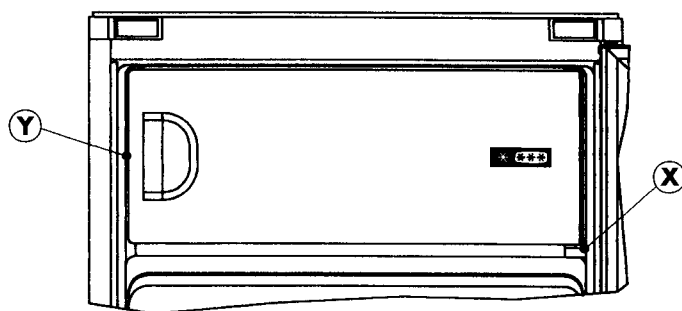


Fig. 4



THIS APPLIANCE LIES WITH EUROPEAN DIRECTIVES
 EMC 89/336/CE
 LOW VOLTAGE 73/23/CE
 MARKING CE 93/68/CE

CAPLE "Built-in" Service

Should you require service at any time, please contact the Caple Help line on 0870 2411142.

Caple have a nationwide service network of engineers who will respond quickly to your call.

Always replace spare parts with genuine Caple spares. These are available from authorised Caple Service Centers or by mail order from our National Service Stores, simply telephone 0870 2411142. When ordering parts always quote the model number and serial number of your appliance.

YOUR GUARANTEE

CAPLE guarantees all parts of this product for one year from the date of purchase. During that time, should it become necessary CAPLE engineers will replace or repair all defective parts free of charge, except for parts subject to fair wear and tear, such as light bulbs.

Parts and the engineers labour costs are chargeable after the first 12 months.

To qualify for benefits under the guarantee, you must be able to provide proof of date of purchase and the appliance must have been supplied, installed and used for domestic purposes only in accordance with CAPLE instructions.

Consequential losses and accidental damage to the product are not covered by the guarantee.

This guarantee does not affect your statutory or common law rights.

CAPLE cannot be responsible for the results of using this appliance for any other purposes other than those described in these instructions.